

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Brother TN-2090	Brother DCP-7057R;Brother HL-2132R	BK	480			
Brother TN-2080	Brother DCP-7055R;Brother HL-2130R	BK	480			
Brother TN-2235	Brother HL-2240R;Brother HL-2240DR;Brother HL-2250DNR;Brother DCP-7060DR;Brother DCP-7065DNR;Brother DCP-7070DWR;Brother MFC-7360NR;Brother MFC-7860DWR	BK	480			
Brother TN-2275	Brother HL-2240R;Brother HL-2240DR;Brother HL-2250DNR;Brother DCP-7060DR;Brother DCP-7065DNR;Brother DCP-7070DWR;Brother MFC-7360NR;Brother MFC-7860DWR	BK	530			
Brother DR-2275	Brother HL-2240R;Brother HL-2240DR;Brother HL-2250DNR;Brother DCP-7060DR;Brother DCP-7065DNR;Brother DCP-7070DWR;Brother MFC-7360NR;Brother MFC-7860DWR	Drum				1200
Brother TN-230BK	Brother HL-3040CN;Brother HL-3040CW;Brother MFC-9120CN;Brother MFC-9320CW;Brother DCP-9010CN	BK	1200			
Brother TN-230C	Brother HL-3040CN;Brother HL-3040CW;Brother MFC-9120CN;Brother MFC-9320CW;Brother DCP-9010CN	C	1200			
Brother TN-230M	Brother HL-3040CN;Brother HL-3040CW;Brother MFC-9120CN;Brother MFC-9320CW;Brother DCP-9010CN	M	1200			
Brother TN-230Y	Brother HL-3040CN;Brother HL-3040CW;Brother MFC-9120CN;Brother MFC-9320CW;Brother DCP-9010CN	Y	1200			
Brother TN-320BK	Brother HL-4150CDN;Brother MFC-9465CDN	BK	1300			
Brother TN-320C	Brother HL-4150CDN;Brother MFC-9465CDN	C	1300			
Brother TN-320M	Brother HL-4150CDN;Brother MFC-9465CDN	M	1300			
Brother TN-320Y	Brother HL-4150CDN;Brother MFC-9465CDN	Y	1300			
Brother TN-325BK	Brother HL-4150CDN;Brother MFC-9465CDN	BK	1900			
Brother TN-325C	Brother HL-4150CDN;Brother MFC-9465CDN	C	1900			
Brother TN-325M	Brother HL-4150CDN;Brother MFC-9465CDN	M	1900			
Brother TN-325Y	Brother HL-4150CDN;Brother MFC-9465CDN	Y	1900			
Brother TN-115BK	Brother HL-4040CN;Brother HL-4050CDN;Brother DCP-9040CN;Brother DCP-9045CDN;Brother MFC-9440CN;Brother MFC-9450CDN;Brother MFC-9840CDW	BK	2400			
Brother TN-115C	Brother HL-4040CN;Brother HL-4050CDN;Brother DCP-9040CN;Brother DCP-9045CDN;Brother MFC-9440CN;Brother MFC-9450CDN;Brother MFC-9840CDW	C	2400			
Brother TN-115M	Brother HL-4040CN;Brother HL-4050CDN;Brother DCP-9040CN;Brother DCP-9045CDN;Brother MFC-9440CN;Brother MFC-9450CDN;Brother MFC-9840CDW	M	2400			
Brother TN-115Y	Brother HL-4040CN;Brother HL-4050CDN;Brother DCP-9040CN;Brother DCP-9045CDN;Brother MFC-9440CN;Brother MFC-9450CDN;Brother MFC-9840CDW	Y	2400			
Brother TN-110BK	Brother HL-4040CN;Brother HL-4050CDN;Brother DCP-9040CN;Brother DCP-9045CDN;Brother MFC-9440CN;Brother MFC-9450CDN;Brother MFC-9840CDW	BK	1400			
Brother TN-110C	Brother HL-4040CN;Brother HL-4050CDN;Brother DCP-9040CN;Brother DCP-9045CDN;Brother MFC-9440CN;Brother MFC-9450CDN;Brother MFC-9840CDW	C	1400			
Brother TN-110M	Brother HL-4040CN;Brother HL-4050CDN;Brother DCP-9040CN;Brother DCP-9045CDN;Brother MFC-9440CN;Brother MFC-9450CDN;Brother MFC-9840CDW	M	1400			
Brother TN-110Y	Brother HL-4040CN;Brother HL-4050CDN;Brother DCP-9040CN;Brother DCP-9045CDN;Brother MFC-9440CN;Brother MFC-9450CDN;Brother MFC-9840CDW	Y	1400			
Brother TN-430	Brother DCP-1200;Brother PPF-4100;Brother PPF-4750e;Brother MFC-8300;Brother MFC-8600;Brother MFC-8700;Brother MFC-9800	BK	600			
Brother TN-460	Brother DCP-1200;Brother PPF-4100;Brother PPF-4750e;Brother MFC-8300;Brother MFC-8600;Brother MFC-8700;Brother MFC-9800	BK	900			
Brother TN-550	Brother MFC-8460N;Brother MFC-8860DN	BK	700			
Brother TN-580	Brother MFC-8460N;Brother MFC-8860DN	BK	1300			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Brother TN-2000	Brother HL-2030R;Brother HL-2040R;Brother HL-2070NR;Brother DCP-7010R;Brother DCP-7025R;Brother MFC-7225N;Brother MFC-7420R;Brother MFC-7820NR;Brother FAX-2820;Brother FAX-2920	BK	550			
Brother TN-12BK	Brother HL-4200CN	BK	2100			
Brother TN-12C	Brother HL-4200CN	C	2100			
Brother TN-12M	Brother HL-4200CN	M	2100			
Brother TN-12Y	Brother HL-4200CN	Y	2100			
Brother DR-2080	Brother HL-2130R;Brother DCP-7055R	Drum				1200
Brother DR-3300	Brother HL-5440D;Brother HL-5450DN;Brother HL-5470DW;Brother HL-6180DW;Brother DCP-8110DN;Brother DCP-8250DN;Brother MFC-8520DN;Brother MFC-8950DW	Drum				3300
Brother TN-241BK	Brother HL-3140CW;Brother HL-33170CDW;Brother DCP-9020CDW;Brother MFC-9330CDW	BK	1100			
Brother TN-241C	Brother HL-3140CW;Brother HL-33170CDW;Brother DCP-9020CDW;Brother MFC-9330CDW	C	1150			
Brother TN-241M	Brother HL-3140CW;Brother HL-33170CDW;Brother DCP-9020CDW;Brother MFC-9330CDW	M	1150			
Brother TN-241Y	Brother HL-3140CW;Brother HL-33170CDW;Brother DCP-9020CDW;Brother MFC-9330CDW	Y	1150			
Brother TN-245C	Brother HL-3140CW;Brother HL-33170CDW;Brother DCP-9020CDW;Brother MFC-9330CDW	C	1400			
Brother TN-245M	Brother HL-3140CW;Brother HL-33170CDW;Brother DCP-9020CDW;Brother MFC-9330CDW	M	1400			
Brother TN-245Y	Brother HL-3140CW;Brother HL-33170CDW;Brother DCP-9020CDW;Brother MFC-9330CDW	Y	1400			
Brother DR-230CL	Brother HL-3040CN;Brother HL-3040CW;Brother MFC-9120CN;Brother 9320CW;Brother DCP-9010CN	Drum				1300
Brother DR-1075	Brother HL-1110R;Brother HL-1112R;Brother HL-1210WR;Brother HL-1212WR;Brother DCP-1510R;Brother DCP-1512R;Brother DCP-1610WR;Brother DCP-1612WR;Brother MFC-1810R;Brother MFC-1815R;Brother MFC-1912WR	Drum				1200
Brother TN-1075	Brother HL-1110R;Brother HL-1112R;Brother HL-1210WR;Brother HL-1212WR;Brother DCP-1510R;Brother DCP-1512R;Brother DCP-1610WR;Brother DCP-1612WR;Brother MFC-1810R;Brother MFC-1815R;Brother MFC-1912WR	BK	520			
Brother TN-2375	Brother HL-L2340DWR;Brother mL2360DNR;Brother HL-L2365DWR;Brother HL-L2300DR;Brother MFC-L2740DWR;Brother MFC-L2720DWR;Brother MFC-L2700DWR;Brother DCP-L2560DWR;Brother DCP-L2540DNR;Brother DCP-L2520DWR;Brother DCP-L2500DR	BK	480			
Brother DR-2335	Brother HL-L2340DWR;Brother mL2360DNR;Brother HL-L2365DWR;Brother HL-L2300DR;Brother MFC-L2740DWR;Brother MFC-L2720DWR;Brother MFC-L2700DWR;Brother DCP-L2560DWR;Brother DCP-L2540DNR;Brother DCP-L2520DWR;Brother DCP-L2500DR	Drum				1300
Brother TN-321C	Brother MFC-L8650CDW	C	1300			
Brother TN-321M	Brother MFC-L8650CDW	M	1300			
Brother TN-321Y	Brother MFC-L8650CDW	Y	1300			
Brother TN-326C	Brother MFC-L8650CDW	C	1350			
Brother TN-326M	Brother MFC-L8650CDW	M	1350			
Brother TN-326Y	Brother MFC-L8650CDW	Y	1350			
Brother TN-326BK	Brother MFC-L8650CDW	BK	1750			
Brother TN-321BK	Brother MFC-L8650CDW	BK	1750			
Brother TN-900BK	Brother MFC-L9550CDWT;Brother HL-L9200CDWT	BK	2200			
Brother TN-900C	Brother MFC-L9550CDWT;Brother HL-L9200CDWT	C	2200			
Brother TN-900M	Brother MFC-L9550CDWT;Brother HL-L9200CDWT	M	2200			
Brother TN-900Y	Brother MFC-L9550CDWT;Brother HL-L9200CDWT	Y	2200			
Brother TN-2335	Brother HL-L2340DWR;Brother HL-L2360DNR;Brother HL-L2365DWR;Brother HL-L2300DR;Brother MFC-L2740DWR;Brother MFC-L2720DWR;Brother MFC-L2700DWR;Brother DCP-L2560DWR;Brother DCP-L2540DNR;Brother DCP-L2520DWR;Brother DCP-L2500DR	BK	530			
Brother TN-3430	Brother MFC-L5750DW;Brother MFC-L5700DN;Brother MFC-L6900DW;Brother MFC-L6800DW;Brother HL-L5200DW;Brother HL-L5100DN;Brother HL-L5000D;Brother HL-L6300DW;Brother HL-L6400DWT;Brother HL-L6400DW;Brother DCP-L5500DN	BK	600			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Brother TN-3480	Brother MFC-L5750DW;Brother MFC-L5700DN;Brother MFC-L6900DW;Brother MFC-L6800DW;Brother HL-L5200DW;Brother HL-L5100DN;Brother HL-L5000D;Brother HL-L6300DW;Brother HL-L6400DWT;Brother HL-L6400DW;Brother DCP-L5500DN	BK	950			
Brother TN-3512	Brother MFC-L6800DW;Brother MFC-L6900DW;Brother HL-L6300DW;Brother HL-L6400DWT;Brother HL-L6400DW	BK	1290			
Brother TN-3520	Brother MFC-L6800DW;Brother MFC-L6900DW;Brother HL-L6300DW;Brother HL-L6400DWT;Brother HL-L6400DW	BK	1850			
Brother TN-1095	Brother HL-1202R;Brother DCP-1602R	BK	530			
Brother TN-2075	Brother DCP-7010;Brother DCP-7010r;Brother DCP-7025;Brother FAX-2820;Brother FAX-2825;Brother FAX-2920;Brother HL-2030;Brother HL-2030r;Brother HL-2035;Brother HL-2035r;Brother HL-2040;Brother HL-2040r;Brother HL-2070;Brother MFC-7220;Brother MFC-7225N;Brother MFC-7420;Brother MFC-7820;Brother MFC-7820nr	BK	530			
Brother DR-2075	Brother DCP-7010;Brother DCP-7010r;Brother DCP-7025;Brother FAX-2820;Brother FAX-2825;Brother FAX-2920;Brother HL-2030;Brother HL-2030r;Brother HL-2035;Brother HL-2035r;Brother HL-2040;Brother HL-2040r;Brother HL-2070;Brother MFC-7220;Brother MFC-7225N;Brother MFC-7420;Brother MFC-7820;Brother MFC-7820nr	Drum	1200			
Brother TN-2135	Brother DCP-7030;Brother DCP-7030r;Brother DCP-7032;Brother DCP-7032r;Brother DCP-7045;Brother HL-2140;Brother HL-2140r;Brother HL-2142;Brother HL-2150;Brother HL-2170;Brother MFC-7320;Brother MFC-7320r;Brother MFC-7440;Brother MFC-7440nr;Brother MFC-7840;Brother MFC-7840wr	BK	480			
Brother TN-2175	Brother DCP-7030;Brother DCP-7030r;Brother DCP-7032;Brother DCP-7032r;Brother DCP-7045;Brother HL-2140;Brother HL-2140r;Brother HL-2142;Brother HL-2150;Brother HL-2170;Brother MFC-7320;Brother MFC-7320r;Brother MFC-7440;Brother MFC-7440nr;Brother MFC-7840;Brother MFC-7840wr	BK	530			
Brother DR-2175	Brother DCP-7030;Brother DCP-7030r;Brother DCP-7032;Brother DCP-7032r;Brother DCP-7045;Brother HL-2140;Brother HL-2140r;Brother HL-2142;Brother HL-2150;Brother HL-2170;Brother MFC-7320;Brother MFC-7320r;Brother MFC-7440;Brother MFC-7440nr;Brother MFC-7840;Brother MFC-7840wr	Drum				1200
Brother TN-2085	Brother HL-2035R	BK	480			
Brother TN-3030	Brother DCP-8040;Brother DCP-8045;Brother HL-5130;Brother HL-5140;Brother HL-5150;Brother HL-5170;Brother MFC-8040;Brother MFC-8045;Brother MFC-8220;Brother MFC-8440;Brother MFC-8840	BK	600			
Brother TN-3060	Brother DCP-8040;Brother DCP-8045;Brother HL-5130;Brother HL-5140;Brother HL-5150;Brother HL-5170;Brother MFC-8040;Brother MFC-8045;Brother MFC-8220;Brother MFC-8440;Brother MFC-8840	BK	950			
Brother DR-3000	Brother DCP-8040;Brother DCP-8045;Brother HL-5130;Brother HL-5140;Brother HL-5150;Brother HL-5170;Brother MFC-8040;Brother MFC-8045;Brother MFC-8220;Brother MFC-8440;Brother MFC-8840	Drum				1400
Brother TN-3130	Brother DCP-8060;Brother DCP-8065;Brother HL-5240;Brother HL-5250;Brother HL-5250dn;Brother HL-5270;Brother HL-5280;Brother MFC-Brother MFC-8460;Brother MFC-8860;Brother MFC-8870	BK	600			
Brother TN-3170	Brother DCP-8060;Brother DCP-8065;Brother HL-5240;Brother HL-5250;Brother HL-5250dn;Brother HL-5270;Brother HL-5280;Brother MFC-Brother MFC-8460;Brother MFC-8860;Brother MFC-8870	BK	950			
Brother TN-6300	Brother FAX-4750;Brother FAX-5750;Brother FAX-8350;Brother FAX-8360;Brother FAX-8750;Brother HL-1030;Brother HL-1230;Brother HL-1240;Brother HL-1250;Brother HL-1270;Brother HL-1430;Brother HL-1440;Brother HL-1450;Brother HL-1470;Brother HL-P2500;Brother IntelliFAX-4100;Brother IntelliFAX-4750;Brother IntelliFAX-5750;Brother MFC-8350;Brother MFC-8750;Brother MFC-9600;Brother MFC-9650;Brother MFC-9660;Brother MFC-9750;Brother MFC-9760;Brother MFC-9850;Brother MFC-9860;Brother MFC-9870;Brother MFC-9880	BK	600			
Brother TN-6600	Brother FAX-4750;Brother FAX-5750;Brother FAX-8350;Brother FAX-8360;Brother FAX-8750;Brother HL-1030;Brother HL-1230;Brother HL-1240;Brother HL-1250;Brother HL-1270;Brother HL-1430;Brother HL-1440;Brother HL-1450;Brother HL-1470;Brother HL-P2500;Brother IntelliFAX-4100;Brother IntelliFAX-4750;Brother IntelliFAX-5750;Brother MFC-8350;Brother MFC-8750;Brother MFC-9600;Brother MFC-9650;Brother MFC-9660;Brother MFC-9750;Brother MFC-9760;Brother MFC-9850;Brother MFC-9860;Brother MFC-9870;Brother MFC-9880	BK	900			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Brother DR-6000	Brother FAX-4750;Brother FAX-5750;Brother FAX-8350;Brother FAX-8360;Brother FAX-8750;Brother HL-1030;Brother HL-1230;Brother HL-1240;Brother HL-1250;Brother HL-1270;Brother HL-1430;Brother HL-1440;Brother HL-1450;Brother HL-1470;Brother HL-P2500;Brother IntelliFAX-4100;Brother IntelliFAX-4750;Brother IntelliFAX-5750;Brother MFC-8350;Brother MFC-8750;Brother MFC-9600;Brother MFC-9650;Brother MFC-9660;Brother MFC-9750;Brother MFC-9760;Brother MFC-9850;Brother MFC-9860;Brother MFC-9870;Brother MFC-9880	Drum				1500
Brother TN-7300	Brother DCP-8020;Brother DCP-8025;Brother HL-1650;Brother HL-1670;Brother HL-1850;Brother HL-1870;Brother HL-5030;Brother HL-5040;Brother Brother HL-5050;Brother Brother HL-5070;Brother MFC-8020;Brother MFC-8420;Brother MFC- 8820	BK	600			
Brother TN-7600	Brother DCP-8020;Brother DCP-8025;Brother HL-1650;Brother HL-1670;Brother HL-1850;Brother HL-1870;Brother HL-5030;Brother HL-5040;Brother Brother HL-5050;Brother Brother HL-5070;Brother MFC-8020;Brother MFC-8420;Brother MFC- 8820	BK	800			
Brother TN-3230	Brother DCP-8085;Brother HL-5340;Brother HL-5350;Brother HL-5370;Brother HL-5380;Brother MFC-8880;Brother MFC-8890	BK	550			
Brother TN-3280	Brother DCP-8085;Brother HL-5340;Brother HL-5350;Brother HL-5370;Brother HL-5380;Brother MFC-8880;Brother MFC-8890	BK	950			
Brother TN-4100	Brother HL-6050;Brother HL-6050D;Brother HL-6050DN	BK	600			
Brother TN-9000	Brother HL-1260;Brother HL-1660;Brother HL-2060;Brother HL-9600	BK	1000			
Brother TN-9500	Brother HL-2460	BK	1200			
Brother DR-2085	Brother HL-2035	Drum				1200
Brother DR-3100	Brother DCP-8060;Brother DCP-8065;Brother HL-5240;Brother HL-5250;Brother HL-5250dn;Brother HL-5270;Brother HL-5280;MFC-8460;MFC-8860;MFC-8870	Drum				1400
Brother DR-7000	Brother DCP-8020;Brother 8025;Brother HL-1650;Brother 1670;1850;1870;5030;v5040;Brother 5050;Brother 5070;Brother MFC-8020;Brother 8420;Brother 8820	Drum				
Brother TN-8000	Brother FAX-2850;Brother FAX-8070;MFC-4800;Brother MFC-9030;Brother MFC-9070;Brother MFC-9160;Brother MFC-9180;Brother DCP-1000;Brother IntelliFAX-2800;Brother IntelliFAX-2900;Brother IntelliFAX-3800	BK				
Brother DR-3200	Brother DCP-8085;Brother HL-5340;Brother HL-5350;Brother HL-5370;Brother HL-5380;Brother MFC-8880;Brother MFC- 8890	Drum				1400
Brother DR-4000	Brother HL-6050;Brother HL-6050D;Brother HL-6050DN	Drum				
Brother TN-5500	Brother HL-7050	BK	1450			
Brother DR-5500	Brother HL-7050	Drum				
Brother DR-241CL	Brother HL-3140CW;Brother HL-3170CDW;Brother DCP-9020CDW;Brother MFC-9330CDW	Drum				1300
Brother TN-200	Brother FAX-2650;Brother FAX-2750;Brother FAX-3550;Brother FAX-3650;Brother FAX-3750;Brother FAX-4500;Brother FAX-4550;Brother FAX-6550;Brother FAX-8000;Brother FAX-8200;Brother FAX-8250;Brother FAX-8650;Brother HL-700;Brother HL-720;Brother HL-730;Brother HL-760;Brother IntelliFAX-2650;Brother IntelliFAX-2750;Brother IntelliFAX-3550;Brother IntelliFAX-3650;Brother IntelliFAX-3750;Brother MFC-3550;Brother MFC-3650;Brother MFC-4350;Brother MFC-4450;Brother MFC-4550;Brother MFC-4600;Brother MFC-4650;Brother MFC-6550;Brother MFC-6650;Brother MFC-7550;Brother MFC-9000;Brother MFC-9050;Brother MFC-9060;Brother MFC-9500;Brother MFC-9550	BK				
Brother TN-04BK	Brother HL-2700CN;Brother MFC-9420CN	BK				
Brother TN-04C	Brother HL-2700CN;Brother MFC-9420CN	C				
Brother TN-04M	Brother HL-2700CN;Brother MFC-9420CN	M				
Brother TN-04Y	Brother HL-2700CN;Brother MFC-9420CN	Y				
Brother TN-130BK	Brother DCP-9040;Brother DCP-9045;Brother HL-4040;Brother HL-4050;Brother HL-4070;Brother MFC-9440;MFC-Brother 9840	BK	1400			
Brother TN-130C	Brother DCP-9040;Brother DCP-9045;Brother HL-4040;Brother HL-4050;Brother HL-4070;Brother MFC-9440;Brother MFC-9840	C	1400			
Brother TN-130M	Brother DCP-9040;Brother DCP-9045;Brother HL-4040;Brother HL-4050;Brother HL-4070;Brother MFC-9440;Brother MFC-9840	M	1400			
Brother TN-130Y	Brother DCP-9040;Brother DCP-9045;Brother HL-4040;Brother HL-4050;Brother HL-4070;Brother MFC-9440;Brother MFC-9840	Y	1400			
Brother TN-135BK	Brother DCP-9040;Brother DCP-9045;Brother HL-4040;Brother HL-4050;Brother HL-4070;Brother MFC-9440;Brother MFC-9840	BK	1600			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Brother TN-135C	Brother DCP-9040;Brother DCP-9045;Brother HL-4040;Brother HL-4050;Brother HL-4070;Brother MFC-9440;Brother MFC-9840	C	1600			
Brother TN-135M	Brother DCP-9040;Brother DCP-9045;Brother HL-4040;Brother HL-4050;Brother HL-4070;Brother MFC-9440;Brother MFC-9840	M	1600			
Brother TN-135Y	Brother DCP-9040;Brother DCP-9045;Brother HL-4040;Brother HL-4050;Brother HL-4070;Brother MFC-9440;Brother MFC-9840	Y	1600			
Brother TN-3330	Brother DCP-8110DN;Brother DCP-8250DN;Brother HL-5440D;Brother HL-5450DN;Brother HL-5470DW;Brother HL-6180DW;Brother MFC-8520DN;Brother MFC-8950DW	BK	700			
Brother TN-3380	Brother DCP-8110DN;Brother DCP-8250DN;Brother HL-5440D;Brother HL-5450DN;Brother HL-5470DW;Brother HL-6180DW;Brother MFC-8520DN;Brother MFC-8950DW	BK	1150			
Brother TN-3390	Brother DCP-8250DN;Brother HL-6180DW;Brother MFC-8950DW	BK	1450			
Brother TN-300	Brother HL-1040;Brother HL-1050;Brother HL-1060;Brother HL-1070;Brother HL-820;Brother HL-P2000	BK				
Brother LC1000C	Brother DCP-130;Brother DCP-330;Brother DCP-350;Brother DCP-350c;Brother DCP-540;Brother DCP-750;Brother MFC-240;Brother MFC-3360;Brother MFC-440;Brother MFC-5460;Brother MFC-5860;Brother MFC-660;Brother MFC-665;Brother MFC-845;Brother MFC-885	C	200			
Brother LC1000M	Brother DCP-130;Brother DCP-330;Brother DCP-350;Brother DCP-350c;Brother DCP-540;Brother DCP-750;Brother MFC-240;Brother MFC-3360;Brother MFC-440;Brother MFC-5460;Brother MFC-5860;Brother MFC-660;Brother MFC-665;Brother MFC-845;Brother MFC-885	M	200			
Brother LC1000Y	Brother DCP-130;Brother DCP-330;Brother DCP-350;Brother DCP-350c;Brother DCP-540;Brother DCP-750;Brother MFC-240;Brother MFC-3360;Brother MFC-440;Brother MFC-5460;Brother MFC-5860;Brother MFC-660;Brother MFC-665;Brother MFC-845;Brother MFC-885	Y	200			
Brother LC1000BK	Brother DCP-130;Brother DCP-330;Brother DCP-350;Brother DCP-350c;Brother DCP-540;Brother DCP-750;Brother MFC-240;Brother MFC-3360;Brother MFC-440;Brother MFC-5460;Brother MFC-5860;Brother MFC-660;Brother MFC-665;Brother MFC-845;Brother MFC-885	BK	200			
Brother LC900C	Brother DCP-110;Brother DCP-115;Brother DCP-120;Brother DCP-310;Brother FAX-1835;Brother FAX-1840;Brother FAX-1940;Brother FAX-2440;Brother MFC-210;Brother MFC-215;Brother MFC-3240;Brother MFC-3340;Brother MFC-425;Brother MFC-5440;Brother MFC-5840;Brother MFC-620	C	200			
Brother LC900M	Brother DCP-110;Brother DCP-115;Brother DCP-120;Brother DCP-310;Brother FAX-1835;Brother FAX-1840;Brother FAX-1940;Brother FAX-2440;Brother MFC-210;Brother MFC-215;Brother MFC-3240;Brother MFC-3340;Brother MFC-425;Brother MFC-5440;Brother MFC-5840;Brother MFC-620	M	200			
Brother LC900Y	Brother DCP-110;Brother DCP-115;Brother DCP-120;Brother DCP-310;Brother FAX-1835;Brother FAX-1840;Brother FAX-1940;Brother FAX-2440;Brother MFC-210;Brother MFC-215;Brother MFC-3240;Brother MFC-3340;Brother MFC-425;Brother MFC-5440;Brother MFC-5840;Brother MFC-620	Y	200			
Brother LC900Bk	Brother DCP-110;Brother DCP-115;Brother DCP-120;Brother DCP-310;Brother FAX-1835;Brother FAX-1840;Brother FAX-1940;Brother FAX-2440;Brother MFC-210;Brother MFC-215;Brother MFC-3240;Brother MFC-3340;Brother MFC-425;Brother MFC-5440;Brother MFC-5840;Brother MFC-620	BK	200			
Brother LC900HYBk	Brother FAX-1835;Brother FAX-1840;Brother FAX-1940;Brother FAX-2440	BK	300			
Brother LC970C	Brother DCP-135;Brother DCP-150;Brother MFC-235;Brother MFC-260	C	2450			
Brother LC970M	Brother DCP-135;Brother DCP-150;Brother MFC-235;Brother MFC-260	M	250			
Brother LC970Y	Brother DCP-135;Brother DCP-150;Brother MFC-235;Brother MFC-260	Y	250			
Brother LC970Bk	Brother DCP-135;Brother DCP-150;Brother MFC-235;Brother MFC-260	BK	250			
Brother LC980C	Brother DCP-145;Brother DCP-165;Brother MFC-250	C	250			
Brother LC980M	Brother DCP-145;Brother DCP-165;Brother MFC-250	M	250			
Brother LC980Y	Brother DCP-145;Brother DCP-165;Brother MFC-250	Y	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Brother LC980Bk	Brother DCP-145;Brother DCP-165;Brother MFC-250	BK	250			
Brother LC600C	Brother IntelliFAX-1800;Brother MFC-3100;Brother MFC-3200;Brother MFC-5100;Brother MFC-5200;Brother MFC-580;Brother MFC-590;Brother MFC-890	C	250			
Brother LC600M	Brother IntelliFAX-1800;Brother MFC-3100;Brother MFC-3200;Brother MFC-5100;Brother MFC-5200;Brother MFC-580;Brother MFC-590;Brother MFC-890	M	250			
Brother LC600Y	Brother IntelliFAX-1800;Brother MFC-3100;Brother MFC-3200;Brother MFC-5100;Brother MFC-5200;Brother MFC-580;Brother MFC-590;Brother MFC-890	Y	250			
Brother LC600BK	Brother IntelliFAX-1800;Brother MFC-3100;Brother MFC-3200;Brother MFC-5100;Brother MFC-5200;Brother MFC-580;Brother MFC-590;Brother MFC-890	BK	250			
Brother LC04C	Brother MFC-7300;Brother MFC-7400;Brother MFC-9200	C	250			
Brother LC04M	Brother MFC-7300;Brother MFC-7400;Brother MFC-9200	M	250			
Brother LC04Y	Brother MFC-7300;Brother MFC-7400;Brother MFC-9200	Y	250			
Brother LC04BK	Brother MFC-7300;Brother MFC-7400;Brother MFC-9200	BK	250			
Brother LC02C	Brother MFC-7150;Brother MFC-7160;Brother MFC-730;Brother MFC-740;Brother MFC-760;Brother MFC-9100	C	250			
Brother LC02M	Brother MFC-7150;Brother MFC-7160;Brother MFC-730;Brother MFC-740;Brother MFC-760;Brother MFC-9100	M	250			
Brother LC02Y	Brother MFC-7150;Brother MFC-7160;Brother MFC-730;Brother MFC-740;Brother MFC-760;Brother MFC-9100	Y	250			
Brother LC02BK	Brother MFC-7150;Brother MFC-7160;Brother MFC-730;Brother MFC-740;Brother MFC-760;Brother MFC-9100	BK	250			
Brother LC01C	Brother MC-3000;Brother MFC-7000;Brother MFC-7200	C	250			
Brother LC01M	Brother MC-3000;Brother MFC-7000;Brother MFC-7200	M	250			
Brother LC01Y	Brother MC-3000;Brother MFC-7000;Brother MFC-7200	Y	250			
Brother LC01BK	Brother MC-3000;Brother MFC-7000;Brother MFC-7200	BK	250			
Brother LC11C	Brother MFC-7050	C	250			
Brother LC11M	Brother MFC-7050	M	250			
Brother LC11Y	Brother MFC-7050	Y	250			
Brother LC11BK	Brother MFC-7050	BK	300			
Brother LC50C	Brother MFC-830;Brother MFC-840;Brother MFC-860	C	250			
Brother LC50M	Brother MFC-830;Brother MFC-840;Brother MFC-860	M	250			
Brother LC50Y	Brother MFC-830;Brother MFC-840;Brother MFC-860	Y	250			
Brother LC700C	Brother DCP-4020;Brother MFC-4820	C	250			
Brother LC700M	Brother DCP-4020;Brother MFC-4820	M	250			
Brother LC700Y	Brother DCP-4020;Brother MFC-4820	Y	250			
Brother LC700BK	Brother DCP-4020;Brother MFC-4820	BK	250			
Brother LC1100C	Brother DCP-385;Brother DCP-6690;Brother MFC-990	C	200			
Brother LC1100M	Brother DCP-385;Brother DCP-6690;Brother MFC-990	M	200			
Brother LC1100Y	Brother DCP-385;Brother DCP-6690;Brother MFC-990	Y	200			
Brother LC1100BK	Brother DCP-385;Brother DCP-6690;Brother MFC-990	BK	250			
Brother LC1100HYC	Brother DCP-6690	C	300			
Brother LC1100HYM	Brother DCP-6690	M	300			
Brother LC1100HYY	Brother DCP-6690	Y	300			
Brother LC1100HYBK	Brother DCP-6690	BK	300			
Brother LC800C	Brother FAX-1815;Brother FAX-1820;Brother FAX-1920;Brother MFC-3220;Brother MFC-3420;Brother MFC-3820	C	200			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Brother LC800M	Brother FAX-1815;Brother FAX-1820;Brother FAX-1920;Brother MFC-3220;Brother MFC-3420;Brother MFC-3820	M	200			
Brother LC800Y	Brother FAX-1815;Brother FAX-1820;Brother FAX-1920;Brother MFC-3220;Brother MFC-3420;Brother MFC-3820	Y	200			
Brother LC-1280XLBk	Brother MFC-J5910DW;Brother MFC-J6510DW;Brother MFC-J6910DW	BK	350			
Brother LC-1280XLC	Brother MFC-J5910DW;Brother MFC-J6510DW;Brother MFC-J6910DW	C	250			
Brother LC-1280XLM	Brother MFC-J5910DW;Brother MFC-J6510DW;Brother MFC-J6910DW	M	250			
Brother LC-1280XLY	Brother MFC-J5910DW;Brother MFC-J6510DW;Brother MFC-J6910DW	Y	250			
Brother LC50BK	Brother MFC-830;Brother MFC-840;Brother MFC-830;MFC-Brother 860	BK	300			
Brother LC800Bk	Brother FAX-1815;Brother 1820;Brother 1920;Brother MFC-3220;Brother 3420;Brother 3820	BK	250			
Brother LC985BK	Brother DCP-J125;Brother DCP-J315W;Brother DCP-J515W;Brother MFC-J265W;Brother MFC-J410	BK	250			
Brother LC985C	Brother DCP-J125;Brother DCP-J315W;Brother DCP-J515W;Brother MFC-J265W;Brother MFC-J410	C	250			
Brother LC985M	Brother DCP-J125;Brother DCP-J315W;Brother DCP-J515W;Brother MFC-J265W;Brother MFC-J410	M	250			
Brother LC985Y	Brother DCP-J125;Brother DCP-J315W;Brother DCP-J515W;Brother MFC-J265W;Brother MFC-J410	Y	250			
Brother LC-1240Bk	Brother MFC-J6510;Brother MFC-J6910	BK	250			
Brother LC-1240C	Brother MFC-J6510;Brother MFC-J6910	C	250			
Brother LC-1240M	Brother MFC-J6510;Brother MFC-J6910	M	250			
Brother LC-1240Y	Brother MFC-J6510;Brother MFC-J6910	Y	250			
Brother LC-1240XLC	Brother MFC-J6510;Brother MFC-J6910	C	300			
Brother LC-1240XLM	Brother MFC-J6510;Brother MFC-J6910	M	300			
Brother LC-1240XLY	Brother MFC-J6510;Brother MFC-J6910	Y	300			
Brother LC-529XLBK	Brother DCP-J100;Brother DCP-J105;Brother MFC-J200	BK	250			
Brother LC-525XLC	Brother DCP-J100;Brother DCP-J105;Brother MFC-J200	C	200			
Brother LC-525XLM	Brother DCP-J100;Brother DCP-J105;Brother MFC-J200	M	200			
Brother LC-525XLY	Brother DCP-J100;Brother DCP-J105;Brother MFC-J200	Y	200			
Brother LC-563BK	Brother MFC-J2310;Brother MFC-J3520;Brother MFC-J3720;Brother MFC-J2510	BK	250			
Brother LC-563C	Brother MFC-J2310;Brother MFC-J3520;Brother MFC-J3720;Brother MFC-J2510	C	200			
Brother LC-563M	Brother MFC-J2310;Brother MFC-J3520;Brother MFC-J3720;Brother MFC-J2510	M	200			
Brother LC-563Y	Brother MFC-J2310;Brother MFC-J3520;Brother MFC-J3720;Brother MFC-J2510	Y	200			
Brother LC-565XLC	Brother MFC-J2310;Brother MFC-J3520;Brother MFC-J3720	C	200			
Brother LC-565XLM	Brother MFC-J2310;Brother MFC-J3520;Brother MFC-J3720	M	200			
Brother LC-565XLY	Brother MFC-J2310;Brother MFC-J3520;Brother MFC-J3720	Y	200			
Brother LC-567XLBK	Brother MFC-J2310;Brother MFC-J3520;Brother MFC-J3720	BK	250			
Brother LC-663BK	Brother MFC-J2320;Brother MFC-J2720	BK	200			
Brother LC-669XLBK	Brother MFC-J2320;Brother MFC-J2720	BK	350			
Brother LC-663C	Brother MFC-J2320;Brother MFC-J2720	C	250			
Brother LC-663M	Brother MFC-J2320;Brother MFC-J2720	M	250			
Brother LC-663Y	Brother MFC-J2320;Brother MFC-J2720	Y	250			
Brother LC-665XLC	Brother MFC-J2320;Brother MFC-J2720	C	400			
Brother LC-665XLM	Brother MFC-J2320;Brother MFC-J2720	M	400			
Brother LC-665XLY	Brother MFC-J2320;Brother MFC-J2720	Y	400			
Brother BT-5000BK	Brother DCP-T300;Brother DCP-T500W;Brother DCP-T700W InkBenefit Plus	BK				
Brother BT-5000C	Brother DCP-T300;Brother DCP-T500W;Brother DCP-T700W InkBenefit Plus	C				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Brother BT-5000M	Brother DCP-T300;Brother DCP-T500W;Brother DCP-T700W InkBenefit Plus	M				
Brother BT-5000Y	Brother DCP-T300;Brother DCP-T500W;Brother DCP-T700W InkBenefit Plus	Y				
Canon 718 Black	Canon LBP-7200Cdn;Canon LBP-7660Cdn;Canon LBP-7680Cx; Canon MF-8330;Canon MF-8340;Canon MF-8350;Canon MF-8360;Canon MF-8380;Canon MF-729Cx;Canon MF-728Cdw;Canon MF-724Cdw	BK		1650		2350
Canon 723 Black	Canon i-SENSYS LBP-7750Cdn	BK		2150		3200
Canon 723 Cyan	Canon i-SENSYS LBP-7750Cdn	C		2150		3200
Canon 723 Magenta	Canon i-SENSYS LBP-7750Cdn	M		2150		3200
Canon 723 Yellow	Canon i-SENSYS LBP-7750Cdn	Y		2150		3200
Canon 702Bk	Canon i-SENSYS LBP-5970;Canon 5975	BK				
Canon PC-E40	Canon PC-425;Canon PC-981;Canon PC-980;Canon PC-950;Canon PC-941;Canon PC-940;Canon PC-921;Canon PC-920;Canon PC-428;Canon PC-430;Canon PC-710;Canon PC-745;Canon PC-795	BK	600			
Canon 729 Cyan	Canon LBP-7010C;Canon LBP-7018C	C	1390	1490		
Canon 729 Magenta	Canon LBP-7010C;Canon LBP-7018C	M	1390	1490		
Canon 729 Yellow	Canon LBP-7010C;Canon LBP-7018C	Y	1390	1490		
Canon 729 Black	Canon LBP-7010C;Canon LBP-7018C	BK	1390	1450		
Canon 731 Black	Canon LBP-7100Cn;Canon LBP-7110Cw;Canon MF-8230Cn;Canon MF-8280Cw;Canon MF-623Cn;Canon MF-628Cw	BK	1490	1550		2300
Canon 731H Black	Canon LBP-7100Cn;Canon LBP-7110Cw;Canon MF-8230Cn;Canon MF-8280Cw;Canon MF-623Cn;Canon MF-628Cw	BK	1490	1550		2750
Canon 731 Cyan	Canon LBP-7100Cn;Canon LBP-7110Cw;Canon MF-8230Cn;Canon MF-8280Cw;Canon MF-623Cn;Canon MF-628Cw	C	1600	1650		2300
Canon 731 Magenta	Canon LBP-7100Cn;Canon LBP-7110Cw;Canon MF-8230Cn;Canon MF-8280Cw;Canon MF-623Cn;Canon MF-628Cw	M	1600	1650		2300
Canon 731 Yellow	Canon LBP-7100Cn;Canon LBP-7110Cw;Canon MF-8230Cn;Canon MF-8280Cw;Canon MF-623Cn;Canon MF-628Cw	Y	1600	1650		2300
Canon C-720 (Cartridge 720)	Canon i-SENSYS MF6680dn	BK	750	800		1750
Canon 702C	Canon i-SENSYS LBP-5970;Canon i-SENSYS LBP-5975	C				
Canon 702M	Canon i-SENSYS LBP-5970;Canon i-SENSYS LBP-5975	M				
Canon 702Y	Canon i-SENSYS LBP-5970;Canon i-SENSYS LBP-5975	Y				
Canon 732Bk	Canon i-SENSYS LBP-7780Cx	BK		1600		
Canon 732C	Canon i-SENSYS LBP-7780Cx	C		1600		
Canon 732M	Canon i-SENSYS LBP-7780Cx	M		1600		
Canon 732Y	Canon i-SENSYS LBP-7780Cx	Y		1600		
Canon C-EXV40	Canon IR1133IF	BK		880		1780
Canon C-EXV 8 Bk (7629A002AA)	Canon iR C2620N;Canon iR C3200N;Canon iR C3220N;Canon CLC 2620;Canon CLC 3200;Canon CLC 3220	BK	3100	3750		
Canon C-EXV 8 C (7628A002AA)	Canon iR C2620N;Canon iR C3200N;Canon iR C3220N;Canon CLC 2620;Canon CLC 3200;Canon CLC 3220	C	3100	3750		
Canon C-EXV 8 M (7627A002AA)	Canon iR C2620N;Canon iR C3200N;Canon iR C3220N;Canon CLC 2620;Canon CLC 3200;Canon CLC 3220	M	3100	3750		
Canon C-EXV 8 Y (7626A002AA)	Canon iR C2620N;Canon iR C3200N;Canon iR C3220N;Canon CLC 2620;Canon CLC 3200;Canon CLC 3220	Y	3100	3750		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon Cartridge 737	Canon i-SENSYS MF211;Canon i-SENSYS MF212w;Canon i-SENSYS MF216n;Canon i-SENSYS MF217w;Canon i-SENSYS MF226dn;Canon i-SENSYS MF229dw;Canon LBP151dw	БК	480	530		850
Canon C-EXV50	Canon imageRUNNER 1435;Canon imageRUNNER 1435i;Canon imageRUNNER 1435iF;Canon imageRUNNER 1435P	БК				
Canon Cartridge 040 BK	Canon i-SENSYS LBP-710Cx;Canon i-SENSYS LBP-712Cx	БК				
Canon Cartridge 040 C	Canon i-SENSYS LBP-710Cx;Canon i-SENSYS LBP-712Cx	С				
Canon Cartridge 040 M	Canon i-SENSYS LBP-710Cx;Canon i-SENSYS LBP-712Cx	М				
Canon Cartridge 040 Y	Canon i-SENSYS LBP-710Cx;Canon i-SENSYS LBP-712Cx	Y				
Canon Cartridge 040 HBK	Canon i-SENSYS LBP-710Cx;Canon i-SENSYS LBP-712Cx	БК				
Canon Cartridge 040 HC	Canon i-SENSYS LBP-710Cx;Canon i-SENSYS LBP-712Cx	С				
Canon Cartridge 040 HM	Canon i-SENSYS LBP-710Cx;Canon i-SENSYS LBP-712Cx	М				
Canon Cartridge 040 HY	Canon i-SENSYS LBP-710Cx;Canon i-SENSYS LBP-712Cx	Y				
Canon Cartridge 039	Canon i-SENSYS LBP-351x;Canon i-SENSYS LBP-352x	БК	1100			
Canon Cartridge 039H	Canon i-SENSYS LBP-351x;Canon LBP-352x	БК	1600			
Canon FX-1	Canon FAX-L3300;Canon FAX-L700;Canon FAX-L760;Canon FAX-L770;Canon FAX-L775;Canon FAX-L777;Canon FAX-L780;Canon FAX-L785;Canon FAX-L790;Canon FAX-L910	БК	500			900
Canon FX-2	Canon FAX-L500;Canon FAX-L5000;Canon FAX-L550;Canon FAX-L5500;Canon FAX-L600;Canon FAX-L7000;Canon FAX-L7500	БК	500			850
Canon FX-3	Canon FAX-L120;Canon FAX-L200;Canon FAX-L220;Canon FAX-L240;Canon FAX-L250;Canon FAX-L260;Canon FAX-L280;Canon FAX-L290;Canon FAX-L295;Canon FAX-L300;Canon FAX-L350;Canon FAX-L360;Canon FAX-L60;Canon FAX-L90;Canon FaxPhone-L75;Canon FaxPhone-L80;ImageClass-1100;LaserClass-1060;Canon LaserClass-2050;Canon LaserClass-2060;Canon LaserClass-L300;Canon LaserClass-L4000;Canon MultiPASS-L60;Canon MultiPASS-L6000;Canon MultiPASS-L90	БК	500			850
Canon FX-4	Canon FAX-L800;Canon FAX-L900	БК	600			1000
Canon FC-E16	Canon FC-100;Canon 108;Canon 128;Canon 200;Canon 204;Canon 206;Canon 208;Canon 210;Canon 220;Canon 224;Canon 226;Canon 228;Canon 230;Canon 310;Canon 330;Canon 336;Canon 530;Canon 740;Canon 750;Canon 760;Canon 770;Canon 780;Canon 860;Canon 880;Canon 890	БК	480			850
Canon FC-E30	Canon FC-100;Canon FC-108;Canon FC-128;Canon FC-200;Canon FC-204;Canon FC-206;Canon FC-208;Canon FC-210;Canon FC-220;Canon FC-224;Canon FC-226;Canon FC-228;Canon FC-230;Canon FC-310;Canon FC-330;Canon FC-336;Canon FC-530;Canon FC-740;Canon FC-750;Canon FC-760;Canon FC-770;Canon FC-780;Canon FC-860;Canon FC-880;Canon FC-890	БК	580			900
Canon C-EXV18	Canon IR-1018;Canon IR-1020;Canon IR-1022;Canon IR-1024;Canon iR-1024iF	БК	1100			
Canon C-EXV6	Canon NP-7160;Canon 7161;Canon 7162;Canon 7163;Canon 7164;Canon 7210;Canon 7214	БК	1050			
Canon EP-22	Canon LBP-1120;Canon 800;Canon 810;HP LaserJet 1100;HP LaserJet 3200;HP LaserJet 1100A	БК	430			1050
Canon EP-25	Canon LBP-1210;HP LaserJet 1200;HP LaserJet 1005w;HP LaserJet 1000w;HP LaserJet 1220	БК	450			1150
Canon EP-26	Canon LBP-3200;Canon MF-3110;Canon MF-3228;Canon MF-3240;Canon MF-5630;Canon MF-5650;Canon MF-5730;Canon MF-5750;Canon MF-5770	БК	480			1150
Canon EP-27	Canon LBP-3200;Canon MF-3110;Canon 3228;Canon 3240;Canon 5630;Canon 5650;Canon 5730;Canon 5750;Canon 5770	БК	480			1150
Canon EP-52	Canon LBP-1760	БК	1050			1850
Canon FC-E	Canon FC-100;Canon FC-108;Canon FC-128;Canon FC-200;Canon FC-204;Canon FC-206;Canon FC-208;Canon FC-210;Canon FC-220;Canon FC-224;Canon FC-226;Canon FC-228;Canon FC-230;Canon FC-310;Canon FC-330;Canon FC-336;Canon FC-530;Canon PC-740;Canon PC-750;Canon PC-760;Canon PC-770;Canon PC-780;Canon PC-860;Canon PC-880;Canon PC-890	БК	450			1150
Canon Cartridge 703	Canon LBP-2900;Canon LBP-3000;Canon LBP-L11121E	БК	480			1150
Canon Cartridge 706	Canon MF-6530;Canon MF-6540;Canon MF-6550;Canon MF-6560;Canon MF-6580	БК	600			1650
Canon Cartridge 708	Canon LBP-3300;Canon LBP-3360	БК	500			900

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon Cartridge 708H	Canon LBP-3300;Canon LBP-3360	BK	700			1300
Canon Cartridge 712	Canon LBP-3300;Canon LBP-3360	BK	430	480		850
Canon FC-A15	Canon FC-1;Canon FC-2;Canon FC-22;Canon FC-3;Canon FC-3II;Canon FC-4;Canon FC-5;Canon FC-5II;Canon PC-11;Canon PC-12;Canon PC-6;Canon PC-7;Canon PC-7RE	BK	550			1200
Canon FC-A30	Canon FC-1;Canon FC-2;Canon FC-22;Canon FC-3;Canon FC-3II;Canon FC-4;Canon FC-5;Canon FC-5II;Canon PC-11;Canon PC-12;Canon PC-6;Canon PC-7;Canon PC-7RE	BK	650			1300
Canon FX-10	Canon FAX-L100;Canon FAX-L120;Canon MF-4018;Canon MF-4120;Canon MF-4140;Canon MF-4150;Canon MF-4270;Canon MF-4320;Canon MF-4330;Canon MF-4340;Canon MF-4350;Canon MF-4370;Canon MF-4380;Canon MF-4660;Canon MF-4690;Canon PC-D450	BK	430			850
Canon M (Cartridge M)	Canon ImageClass-D620;Canon ImageClass-D660;Canon ImageClass-D661;Canon ImageClass-D680;Canon ImageClass-D760;Canon ImageClass-D761;Canon ImageClass-D780;Canon ImageClass-D781;Canon ImageClass-D860;Canon ImageClass-D861;Canon ImageClass-D880	BK	700			1200
Canon T (Cartridge T)	Canon PC D320;Canon PC 340;Fax L380;Fax 390;Fax 400	BK	500			850
Canon 701 Black	Canon LBP-5200;Canon MF-8180	BK		1750		
Canon 701 Cyan	Canon LBP-5200;Canon MF-8180	C		1750		
Canon 701 Magenta	Canon LBP-5200;Canon MF-8180	M		1750		
Canon 701 Yellow	Canon LBP-5200;Canon MF-8180	Y		1750		
Canon 707 Magenta	Canon LBP-5000;Canon LBP-5100	M		1750		2200
Canon 707 Yellow	Canon LBP-5000;Canon LBP-5100	Y		1750		2200
Canon 707 Black	Canon LBP-5000;Canon LBP-5100	BK		1750		2200
Canon 707 Cyan	Canon LBP-5000;Canon LBP-5100	C		1750		2200
Canon 716 Black	Canon LBP-5050;Canon LBP-5970;Canon LBP-5975;Canon MF-8040;Canon MF-8080	BK	1450	1550		1900
Canon 716 Cyan	Canon LBP-5050;Canon LBP-5970;Canon LBP-5975;Canon MF-8040;Canon MF-8080	C	1450	1550		1900
Canon 716 Magenta	Canon LBP-5050;Canon LBP-5970;Canon LBP-5975;Canon MF-8040;Canon MF-8080	M	1450	1550		1900
Canon 716 Yellow	Canon LBP-5050;Canon LBP-5970;Canon LBP-5975;Canon MF-8040;Canon MF-8080	Y	1450	1550		1900
Canon Cartridge 710	Canon LBP-3460	BK	700	750		1200
Canon Cartridge 710H	Canon LBP-3460	BK	1000	1050		1700
Canon EP-A	Canon LBP-460;Canon LBP-465;Canon LBP-660;Canon BX	BK	450			850
Canon EP-P	Canon LBP-430W;Canon LBP-4i;Canon LBP-4U	BK	500			900
Canon EP-L	Canon LBP-430W;Canon LBP-4i;Canon LBP-4U	BK	500			900
Canon EP-S	Canon LBP-8II;Canon LBP-8III;Canon FAX-3100;Canon FAX-4600;Canon FAX-L920	BK	550			900
Canon EP-E	Canon LBP-1260;Canon LBP-860;Canon LBP-8IV	BK	650			
Canon EP-32	Canon LBP-1000	BK	700			1100
Canon PC-30	Canon PC-10;Canon PC-14;Canon PC-15;Canon PC-20;Canon PC-22;Canon PC-25	BK	550			
Canon FX-6	Canon FAX-L800;FAX-L900	BK	550			1000
Canon C-713 (Cartridge 713)	Canon LBP-3250	BK	450	500		850
Canon C-714 (Cartridge 714)	Canon Fax-L3000	BK	500			1000
Canon 718 Cyan	Canon LBP-7200Cdn;Canon LBP-7660Cdn;Canon LBP-7680Cx;Canon MF-8330;Canon MF-8340;Canon MF-8350;Canon MF-8360;Canon MF-8380;Canon MF-729Cx; Canon MF-728Cdw;Canon MF-724Cdw	C	1650			2100

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon 718 Magenta	Canon LBP-7200Cdn;Canon LBP-7660Cdn;Canon LBP-7680Cx;Canon MF-8330;Canon MF-8340;Canon MF-8350;Canon MF-8360;Canon MF-8380;Canon MF-729Cx; Canon MF-728Cdw;Canon MF-724Cdw	M	1650			2100
Canon 718 Yellow	Canon LBP-7200Cdn;Canon LBP-7660Cdn;Canon LBP-7680Cx;Canon MF-8330;Canon MF-8340;Canon MF-8350;Canon MF-8360;Canon MF-8380;Canon MF-729Cx; Canon MF-728Cdw;Canon MF-724Cdw	Y	1650			2100
Canon C-719 (Cartridge 719)	Canon LBP-6300;Canon LBP-6650;Canon LBP-6670;Canon LBP-6680;Canon MF-5840;Canon MF-5880;Canon MF-5940;Canon MF-5980;Canon i-SENSYS MF-6180dw;Canon i-SENSYS MF-6140dn;Canon LBP-251dw;Canon LBP-252dw;Canon LBP-253x;Canon MF-419;Canon MF-418x;Canon MF-416dw;Canon MF-411dw	BK	480	530		850
Canon Cartridge 725	Canon LBP-6000;Canon LBP-6000B;Canon LBP-6020;Canon LBP-6020B;Canon LBP-6030;Canon LBP-6030B;Canon LBP-6030W;Canon MF3010;Canon MF3010EX	BK	450	480		850
Canon C-715 (Cartridge 715)	Canon LBP-3310;Canon LBP-3370	BK	450	500		850
Canon C-715H (Cartridge 715H)	Canon LBP-3310;Canon LBP-3370	BK	750	800		1300
Canon C-726 (Cartridge 726)	Canon i-SENSYS LBP-6200d;Canon LBP-6230dw	BK	430	480		850
Canon Cartridge 728	Canon MF-4410;Canon MF-4430;Canon MF-4450;Canon MF-4550;Canon MF-4570;Canon MF-4580;Canon MF-4730;Canon MF-4750;Canon MF-4780;Canon MF-4870;Canon MF-4890;Canon MF-P1003	BK	430	480		850
Canon C-719H (Cartridge 719H)	Canon LBP-6300;Canon 6650;Canon 6670;Canon 6680;Canon MF-5840;Canon 5880;Canon 5940;Canon 5980;Canon i-SENSYS MF6180dw;Canon 6140dn;Canon LBP251dw;Canon LBP252dw;Canon LBP253x;Canon MF419;Canon MF418x;Canon MF416dw;Canon MF411dw	BK	800	900		1400
Canon 705 Black	Canon MF-7170	BK				
Canon EP-W	Canon LBP-2460	BK	1600			2500
Canon EP-65	Canon LBP-2000	BK	1600			2200
Canon EP-72	Canon LBP-1910;Canon LBP-3260;Canon LBP-950	BK	2350			2900
Canon 711 Black	Canon LBP-5300;Canon LBP-5360;Canon MF 8450;Canon MF 9130;Canon MF 9170;Canon 9220;MF Canon 9280	BK		2100		2900
Canon 711 Cyan	Canon LBP-5300;Canon LBP-5360;Canon MF 8450;Canon MF 9130;Canon MF 9170;Canon 9220;MF Canon 9280	C		2100		2900
Canon 711 Magenta	Canon LBP-5300;Canon LBP-5360;Canon MF 8450;Canon MF 9130;Canon MF 9170;Canon 9220;MF Canon 9280	M		2100		2900
Canon 711 Yellow	Canon LBP-5300;Canon LBP-5360;Canon MF 8450;Canon MF 9130;Canon MF 9170;Canon 9220;MF Canon 9280	Y		2100		2900
Canon 717 Cyan	Canon MF-8450;Canon MF-9130;Canon MF-9170	C		1850		2300
Canon 717 Magenta	Canon MF-8450;Canon MF-9130;Canon MF-9170	M		1850		2300
Canon 717 Yellow	Canon MF-8450;Canon MF-9130;Canon MF-9170	Y		1850		2300
Canon FX-7	Canon FAX-L2000	BK	700			1300
Canon NPG-1	Canon NP-1015;Canon NP-1215;Canon NP-1218;Canon NP-1318;Canon NP-1510;Canon NP-1520;Canon NP-1530;Canon NP-1550;Canon NP-1820;Canon NP-2010;Canon NP-2020;Canon NP-2120;Canon NP-6020;Canon NP-6116;Canon NP-6216;Canon NP-6220;Canon NP-6317;Canon NP-6320;Canon NP-6416	BK				
Canon NPG-4	Canon NP-4050;Canon NP-4080;Canon NP-4835;Canon NP-6241	BK				
Canon NPG-7	Canon NP-6025;Canon NP-6030;Canon NP-6330	BK				
Canon NPG-9	Canon NP-6016;Canon 6018;Canon 6218;Canon 6521;Canon 6621	BK				
Canon NPG-10	Canon NP-6050	BK				
Canon NPG-11	Canon NP-6012;Canon NP-6112;Canon NP-6212;Canon NP-6312;Canon NP-6512;Canon NP-6612	BK				
Canon NPG-12	Canon NP-6085;Canon NP-9085	BK				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon NPG-13	Canon NP-6085;Canon NP-9085	BK				
Canon NPG-14	Canon NP-6045;Canon NP-6251;Canon NP-6260	BK				
Canon C-EXV1	Canon IR-4600;Canon IR-5000;Canon IR-5020;Canon IR-6000;Canon IR-6020	BK				
Canon C-EXV3	Canon IR-2200;Canon IR-2800;Canon IR-3300;Canon IR-3320	BK				
Canon C-EXV5	Canon IR-1600;Canon IR-1605;Canon IR-1610;Canon IR-2000;Canon IR-2010	BK				
Canon C-EXV7	Canon IR-1200;Canon IR-1210;Canon IR-1230;Canon IR-1270;Canon IR-1310;Canon IR-1330;Canon IR-1370;Canon IR-1510;Canon IR-1530;Canon IR-1570	BK				
Canon C-EXV11	Canon IR-2230;Canon 2270;Canon 2870;Canon 3025;Canon 3025;Canon 3225;Canon 3230;Canon 3235;Canon 3245	BK				
Canon C-EXV12	Canon IR-3035;Canon IR-3045;Canon IR-3530;Canon IR-3570;Canon 4IR-570	BK				
Canon C-EXV13	Canon IR-5570;Canon IR-6570	BK				
Canon C-EXV14	Canon IR-2016;Canon IR-2018;Canon IR-2020;Canon IR-2022;Canon IR-2025;Canon IR-2030;Canon IR-2318;Canon IR-2320	BK	1000			
Canon C-EXV33	Canon IR-2520;Canon IR-2525;Canon IR-2530	BK				
Canon C-724 (Cartridge 724)	Canon LBP-6750;Canon LBP-6780;Canon MF-515x;Canon MF-512x	BK	650	800		1000
Canon C-724H (Cartridge 724H)	Canon LBP-6750;Canon LBP-6780;Canon MF-515x;Canon MF-512x	BK	1100	1150		1800
Canon C-EXV37	Canon iR-1700ser;Canon iR-1730;Canon iR-1740;Canon iR-1750	BK				
Canon C-EXV43	Canon iR Advance-400;Canon iR Advance-500	BK				
Canon C-EXV42 Toner	Canon iR-2202	BK	800			
Canon C-EXV32	Canon iR-2535;Canon iR-2545	BK				
Canon C-EXV38	Canon iR Advance-4045;Canon iR Advance-4051	BK				
Canon C-EXV39	Canon iR Advance-4025;Canon 4035;Canon 4225;Canon 4235;Canon 4245;Canon 4251	BK				
Canon C-EXV36	Canon iR Advance-6000ser;Canon iR Advance-6055;Canon iR Advance-6065;Canon iR Advance-6075;Canon iR Advance-6200ser;Canon iR Advance-6255;Canon iR Advance-6265;Canon iR Advance-6275	BK				
Canon BC-01	Canon BJ-10;Canon BJ-20;Canon BJ-200;Canon BJ-230;Canon BJC-1000;Canon BJC-210;Canon BJC-240;Canon BJC-250;Canon FAX-B190;Canon FAX-B200;Canon FAX-B220;Canon FAX-B60;Canon FAX-B70;Canon FAX-B75;Canon Navigator-HD40	BK	250			
Canon BC-02	Canon BJ-10;Canon BJ-20;Canon BJ-200;Canon BJ-230;Canon BJC-1000;Canon BJC-210;Canon BJC-240;Canon BJC-250;Canon FAX-B190;Canon FAX-B200;Canon FAX-B220;Canon FAX-B60;Canon FAX-B70;Canon FAX-B75;Canon Navigator-HD40	BK	250			
Canon CL-38	Canon PIXMA iP1800;Canon PIXMA iP1900;Canon PIXMA iP2500;Canon PIXMA iP2600;Canon PIXMA MP140;Canon PIXMA MP190;Canon PIXMA MP210;Canon PIXMA MP220;Canon PIXMA MX300;Canon PIXMA MX310	Color	250			
Canon PG-37	Canon PIXMA iP1800;Canon PIXMA iP1900;Canon PIXMA iP2500;Canon PIXMA iP2600;Canon PIXMA MP140;Canon PIXMA MP190;Canon PIXMA MP210;Canon PIXMA MP220;Canon PIXMA MX300;Canon PIXMA MX310	BK Pigment	200			
Canon CL-41	Canon FAX-JX200;Canon FAX-JX500;Canon PIXMA iP1200;Canon PIXMA iP1300;Canon PIXMA iP1600;Canon PIXMA iP1700;Canon PIXMA iP1800;Canon PIXMA iP1900;Canon PIXMA iP2200;Canon PIXMA iP2500;Canon PIXMA iP2600;Canon PIXMA MP140;Canon PIXMA MP150;Canon PIXMA MP160;Canon PIXMA MP170;Canon PIXMA MP180;Canon PIXMA MP190;Canon PIXMA MP210;Canon PIXMA MP220;Canon PIXMA MP450;Canon PIXMA MP460;Canon PIXMA MX300;Canon PIXMA MX310	Color	250			
Canon PG-40	Canon FAX-JX200;Canon FAX-JX500;Canon PIXMA iP1200;Canon PIXMA iP1300;Canon PIXMA iP1600;Canon PIXMA iP1700;Canon PIXMA iP1800;Canon PIXMA iP1900;Canon PIXMA iP2200;Canon PIXMA iP2500;Canon PIXMA iP2600;Canon PIXMA MP140;Canon PIXMA MP150;Canon PIXMA MP160;Canon PIXMA MP170;Canon PIXMA MP180;Canon PIXMA MP190;Canon PIXMA MP210;Canon PIXMA MP220;Canon PIXMA MP450;Canon PIXMA MP460;Canon PIXMA MX300;Canon PIXMA MX310	BK Pigment	200			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon CL-51	Canon FAX-JX200;Canon FAX-JX500;Canon PIXMA iP2200;Canon PIXMA MP150;Canon PIXMA MP160;Canon PIXMA MP170;Canon PIXMA MP180;Canon PIXMA MP450;Canon PIXMA MP460;Canon PIXMA MX300;Canon PIXMA MX310	Color	250			
Canon PG-50	Canon FAX-JX200;Canon FAX-JX500;Canon PIXMA iP2200;Canon PIXMA MP150;Canon PIXMA MP160;Canon PIXMA MP170;Canon PIXMA MP180;Canon PIXMA MP450;Canon PIXMA MP460;Canon PIXMA MX300;Canon PIXMA MX310	BK Pigment	200			
Canon CLI-521Bk	Canon PIXMA iP3600;Canon PIXMA iP4600;Canon PIXMA iP4700;Canon PIXMA MP540;Canon PIXMA MP550;Canon PIXMA MP560;Canon PIXMA MP620;Canon PIXMA MP630;Canon PIXMA MP640;Canon PIXMA MP980;Canon PIXMA MX860	BK	200			
Canon CLI-521C	Canon PIXMA iP3600;Canon PIXMA iP4600;Canon PIXMA iP4700;Canon PIXMA MP540;Canon PIXMA MP550;Canon PIXMA MP560;Canon PIXMA MP620;Canon PIXMA MP630;Canon PIXMA MP640;Canon PIXMA MP980;Canon PIXMA MX860	C	200			
Canon CLI-521M	Canon PIXMA iP3600;Canon PIXMA iP4600;Canon PIXMA iP4700;Canon PIXMA MP540;Canon PIXMA MP550;Canon PIXMA MP560;Canon PIXMA MP620;Canon PIXMA MP630;Canon PIXMA MP640;Canon PIXMA MP980;Canon PIXMA MX860	M	200			
Canon CLI-521Y	Canon PIXMA iP3600;Canon PIXMA iP4600;Canon PIXMA iP4700;Canon PIXMA MP540;Canon PIXMA MP550;Canon PIXMA MP560;Canon PIXMA MP620;Canon PIXMA MP630;Canon PIXMA MP640;Canon PIXMA MP980;Canon PIXMA MX860	Y	200			
Canon PGI-520Bk	Canon PIXMA iP3600;Canon PIXMA iP4600;Canon PIXMA iP4700;Canon PIXMA MP540;Canon PIXMA MP550;Canon PIXMA MP560;Canon PIXMA MP620;Canon PIXMA MP630;Canon PIXMA MP640;Canon PIXMA MP980;Canon PIXMA MX860	BK Pigment	250			
Canon CLI-8Bk	Canon PIXMA iP3300;Canon PIXMA iP3500;Canon PIXMA iP4200;Canon PIXMA iP4300;Canon PIXMA iP4500;Canon PIXMA iP5200;Canon PIXMA iP5300;Canon PIXMA iX4000;Canon PIXMA iX5000;Canon PIXMA MP500;Canon PIXMA MP510;Canon PIXMA MP520;Canon PIXMA MP530;Canon PIXMA MP600;Canon PIXMA MP610;Canon PIXMA MP800;Canon PIXMA MP810;Canon PIXMA MP830;Canon PIXMA MP970;Canon PIXMA MX700;Canon PIXMA MX850	BK	200			
Canon CLI-8C	Canon PIXMA iP3300;Canon PIXMA iP3500;Canon PIXMA iP4200;Canon PIXMA iP4300;Canon PIXMA iP4500;Canon PIXMA iP5200;Canon PIXMA iP5300;Canon PIXMA iX4000;Canon PIXMA iX5000;Canon PIXMA MP500;Canon PIXMA MP510;Canon PIXMA MP520;Canon PIXMA MP530;Canon PIXMA MP600;Canon PIXMA MP610;Canon PIXMA MP800;Canon PIXMA MP810;Canon PIXMA MP830;Canon PIXMA MP970;Canon PIXMA MX700;Canon PIXMA MX850	C	200			
Canon CLI-8M	Canon PIXMA iP3300;Canon PIXMA iP3500;Canon PIXMA iP4200;Canon PIXMA iP4300;Canon PIXMA iP4500;Canon PIXMA iP5200;Canon PIXMA iP5300;Canon PIXMA iX4000;Canon PIXMA iX5000;Canon PIXMA MP500;Canon PIXMA MP510;Canon PIXMA MP520;Canon PIXMA MP530;Canon PIXMA MP600;Canon PIXMA MP610;Canon PIXMA MP800;Canon PIXMA MP810;Canon PIXMA MP830;Canon PIXMA MP970;Canon PIXMA MX700;Canon PIXMA MX850	M	200			
Canon CLI-8Y	Canon PIXMA iP3300;Canon PIXMA iP3500;Canon PIXMA iP4200;Canon PIXMA iP4300;Canon PIXMA iP4500;Canon PIXMA iP5200;Canon PIXMA iP5300;Canon PIXMA iX4000;Canon PIXMA iX5000;Canon PIXMA MP500;Canon PIXMA MP510;Canon PIXMA MP520;Canon PIXMA MP530;Canon PIXMA MP600;Canon PIXMA MP610;Canon PIXMA MP800;Canon PIXMA MP810;Canon PIXMA MP830;Canon PIXMA MP970;Canon PIXMA MX700;Canon PIXMA MX850	Y	200			
Canon PGI-5Bk	Canon PIXMA iP3300;Canon PIXMA iP3500;Canon PIXMA iP4200;Canon PIXMA iP4300;Canon PIXMA iP4500;Canon PIXMA iP5200;Canon PIXMA iP5300;Canon PIXMA iX4000;Canon PIXMA iX5000;Canon PIXMA MP500;Canon PIXMA MP510;Canon PIXMA MP520;Canon PIXMA MP530;Canon PIXMA MP600;Canon PIXMA MP610;Canon PIXMA MP800;Canon PIXMA MP810;Canon PIXMA MP830;Canon PIXMA MP970;Canon PIXMA MX700;Canon PIXMA MX850	BK Pigment	250			
Canon CLI-8PC	Canon PIXMA iP6600;Canon PIXMA iP6700;Canon PIXMA Pro 9000	PC/LC	250			
Canon CLI-8PM	Canon PIXMA iP6600;Canon PIXMA iP6700;Canon PIXMA Pro 9000	PM/LM	250			
Canon CLI-8G	Canon PIXMA Pro 9000	G	250			
Canon CLI-8R	Canon PIXMA Pro 9000	R	250			
Canon BCI-21 Black	Canon BJ-S100;Canon BJ-2000;Canon BJ-2100;Canon BJ-4000;Canon BJ-4100;Canon BJ-4200;Canon BJ-4300;Canon BJ-4400;Canon BJ-4550;Canon BJ-4650;Canon BJ-5100;Canon BJ-5500;Canon FAX-B180C;Canon FAX-B210C;Canon FAX-B215C;Canon FAX-B230C;Canon MultiPass-C20;Canon MultiPass-30;Canon MultiPass-C50;Canon MultiPass-C70;Canon MultiPass-C75;Canon MultiPass-C80	BK Pigment	200			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon BCI-21 Color	Canon BJ-S100;Canon BJ-2000;Canon BJ-2100;Canon BJ-4000;Canon BJ-4100;Canon BJ-4200;Canon BJ-4300;Canon BJ-4400;Canon BJ-4550;Canon BJ-4650;Canon BJ-5100;Canon BJ-5500;Canon FAX-B180C;Canon FAX-B210C;Canon FAX-B215C;Canon FAX-B230C;Canon MultiPass-C20;Canon MultiPass-30;Canon MultiPass-C50;Canon MultiPass-C70;Canon MultiPass-C75;Canon MultiPass-C80	Color	250			
Canon BCI-24 Black	Canon BJ-i250;Canon BJ-i320;Canon BJ-i350;Canon BJ-i450;Canon BJ-i455;Canon BJ-i470;Canon BJ-i475;Canon BJ-S200;Canon BJ-S300;Canon BJ-S330;Canon PIXMA iP1000;Canon PIXMA iP1500;Canon PIXMA iP2000;Canon PIXMA MP110;Canon PIXMA MP130;Canon PIXMA MP410;Canon PIXMA MP430;Canon SmartBase-MP360;Canon SmartBase-MP370;Canon SmartBase-MP390;Canon SmartBase-MPC190;Canon SmartBase-MPC200	BK Pigment	200			
Canon BCI-24 Color	Canon BJ-i250;Canon BJ-i320;Canon BJ-i350;Canon BJ-i450;Canon BJ-i455;Canon BJ-i470;Canon BJ-i475;Canon BJ-S200;Canon BJ-S300;Canon BJ-S330;Canon PIXMA iP1000;Canon PIXMA iP1500;Canon PIXMA iP2000;Canon PIXMA MP110;Canon PIXMA MP130;Canon PIXMA MP410;Canon PIXMA MP430;Canon SmartBase-MP360;Canon SmartBase-MP370;Canon SmartBase-MP390;Canon SmartBase-MPC190;Canon SmartBase-MPC200	Color	250			
Canon CL-52	Canon PIXMA iP6210;Canon PIXMA iP6220	Color	250			
Canon BX-2	Canon FAX-B190;Canon FAX-B200;Canon FAX-B220;Canon FAX-B310;;Canon FAX-B320;Canon FAX-B340;Canon FAX-B360;Canon FAX-B400	BK	250			
Canon CL-511	Canon PIXMA MP240;Canon PIXMA MP230;Canon PIXMA MP250;Canon PIXMA MP260;Canon PIXMA MP270;Canon PIXMA MP480;Canon PIXMA MP490;Canon PIXMA MX320;Canon PIXMA MX330;Canon PIXMA MX420;Canon PIXMA MX410;Canon PIXMA MX360;Canon PIXMA MP495;Canon PIXMA MP282;Canon PIXMA MP280;Canon PIXMA MP272;Canon PIXMA MP252	Color	250			
Canon CL-513	Canon PIXMA MP240;Canon PIXMA MP230;Canon PIXMA MP250;Canon PIXMA MP260;Canon PIXMA MP270;Canon PIXMA MP480;Canon PIXMA MP490;Canon PIXMA MX320;Canon PIXMA MX330;Canon PIXMA MX420;Canon PIXMA MX410;Canon PIXMA MX360;Canon PIXMA MP495;Canon PIXMA MP282;Canon PIXMA MP280;Canon PIXMA MP272;Canon PIXMA MP252	Color	250			
Canon PG-510	Canon PIXMA MP240;Canon PIXMA MP230;Canon PIXMA MP250;Canon PIXMA MP260;Canon PIXMA MP270;Canon PIXMA MP480;Canon PIXMA MP490;Canon PIXMA MX320;Canon PIXMA MX330;Canon PIXMA MX420;Canon PIXMA MX410;Canon PIXMA MX360;Canon PIXMA MP495;Canon PIXMA MP282;Canon PIXMA MP280;Canon PIXMA MP272;Canon PIXMA MP252	BK Pigment	200			
Canon PG-512	Canon PIXMA MP240;Canon PIXMA MP230;Canon PIXMA MP250;Canon PIXMA MP260;Canon PIXMA MP270;Canon PIXMA MP480;Canon PIXMA MP490;Canon PIXMA MX320;Canon PIXMA MX330;Canon PIXMA MX420;Canon PIXMA MX410;Canon PIXMA MX360;Canon PIXMA MP495;Canon PIXMA MP282;Canon PIXMA MP280;Canon PIXMA MP272;Canon PIXMA MP252	BK Pigment	200			
Canon BCI-3eC	Canon BJ-i550;Canon BJ-i560;Canon BJ-i6500;Canon BJ-i850;Canon BJ-i865;Canon BJ-S400;Canon BJ-S450;Canon BJ-S4500;Canon BJ-S500;Canon BJ-S520;Canon BJ-S530;Canon BJ-S600;Canon BJ-S630;Canon BJ-S6300;Canon BJ-S750;Canon BJC-3000;Canon BJC-6000;Canon BJC-6100;Canon BJC-6200;Canon BJC-6500;Canon MultiPass-C100;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA iP6000;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780;Canon SmartBase-MP700;Canon SmartBase-MP730;Canon SmartBase-MPC400;Canon SmartBase-MPC600	C	200			
Canon BCI-3eBk	Canon BJ-i550;Canon BJ-i560;Canon BJ-i6500;Canon BJ-i850;Canon BJ-i865;Canon BJ-S400;Canon BJ-S450;Canon BJ-S4500;Canon BJ-S500;Canon BJ-S520;Canon BJ-S530;Canon BJ-S600;Canon BJ-S630;Canon BJ-S6300;Canon BJ-S750;Canon BJC-3000;Canon BJC-6000;Canon BJC-6100;Canon BJC-6200;Canon BJC-6500;Canon MultiPass-C100;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA iP6000;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780;Canon SmartBase-MP700;Canon SmartBase-MP730;Canon SmartBase-MPC400;Canon SmartBase-MPC600	BK Pigment	250			
Canon BCI-3eM	Canon BJ-i550;Canon BJ-i560;Canon BJ-i6500;Canon BJ-i850;Canon BJ-i865;Canon BJ-S400;Canon BJ-S450;Canon BJ-S4500;Canon BJ-S500;Canon BJ-S520;Canon BJ-S530;Canon BJ-S600;Canon BJ-S630;Canon BJ-S6300;Canon BJ-S750;Canon BJC-3000;Canon BJC-6000;Canon BJC-6100;Canon BJC-6200;Canon BJC-6500;Canon MultiPass-C100;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA iP6000;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780;Canon SmartBase-MP700;Canon SmartBase-MP730;Canon SmartBase-MPC400;Canon SmartBase-MPC600	M	200			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon BCI-3ePC	Canon BJ-i550;Canon BJ-i560;Canon BJ-i6500;Canon BJ-i850;Canon BJ-i865;Canon BJ-S400;Canon BJ-S450;Canon BJ-S4500;Canon BJ-S500;Canon BJ-S520;Canon BJ-S530;Canon BJ-S600;Canon BJ-S630;Canon BJ-S6300;Canon BJ-S750;Canon BJC-3000;Canon BJC-6000;Canon BJC-6100;Canon BJC-6200;Canon BJC-6500;Canon MultiPass-C100;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA iP6000;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780;Canon SmartBase-MP700;Canon SmartBase-MP730;Canon SmartBase-MPC400;Canon SmartBase-MPC600	PC/LC	200			
Canon BCI-3ePM	Canon BJ-i550;Canon BJ-i560;Canon BJ-i6500;Canon BJ-i850;Canon BJ-i865;Canon BJ-S400;Canon BJ-S450;Canon BJ-S4500;Canon BJ-S500;Canon BJ-S520;Canon BJ-S530;Canon BJ-S600;Canon BJ-S630;Canon BJ-S6300;Canon BJ-S750;Canon BJC-3000;Canon BJC-6000;Canon BJC-6100;Canon BJC-6200;Canon BJC-6500;Canon MultiPass-C100;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA iP6000;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780;Canon SmartBase-MP700;Canon SmartBase-MP730;Canon SmartBase-MPC400;Canon SmartBase-MPC600	PM/LM	200			
Canon BCI-3eY	Canon BJ-i550;Canon BJ-i560;Canon BJ-i6500;Canon BJ-i850;Canon BJ-i865;Canon BJ-S400;Canon BJ-S450;Canon BJ-S4500;Canon BJ-S500;Canon BJ-S520;Canon BJ-S530;Canon BJ-S600;Canon BJ-S630;Canon BJ-S6300;Canon BJ-S750;Canon BJC-3000;Canon BJC-6000;Canon BJC-6100;Canon BJC-6200;Canon BJC-6500;Canon MultiPass-C100;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA iP6000;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780;Canon SmartBase-MP700;Canon SmartBase-MP730;Canon SmartBase-MPC400;Canon SmartBase-MPC600	Y	200			
Canon BCI-6BK	Canon BJ-i560;Canon BJ-i865;Canon BJ-i905;Canon BJ-i9100;Canon BJ-i950;Canon BJ-i965;Canon BJ-i990;Canon BJ-i9950;Canon BJ-S800;Canon BJ-S820;Canon BJ-S830;Canon BJ-S900;Canon BJ-S9000;Canon BJC-8200;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA P6000;Canon PIXMA iP8500;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780	BK	200			
Canon BCI-6C	Canon BJ-i560;Canon BJ-i865;Canon BJ-i905;Canon BJ-i9100;Canon BJ-i950;Canon BJ-i965;Canon BJ-i990;Canon BJ-i9950;Canon BJ-S800;Canon BJ-S820;Canon BJ-S830;Canon BJ-S900;Canon BJ-S9000;Canon BJC-8200;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA P6000;Canon PIXMA iP8500;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780	C	200			
Canon BCI-6M	Canon BJ-i560;Canon BJ-i865;Canon BJ-i905;Canon BJ-i9100;Canon BJ-i950;Canon BJ-i965;Canon BJ-i990;Canon BJ-i9950;Canon BJ-S800;Canon BJ-S820;Canon BJ-S830;Canon BJ-S900;Canon BJ-S9000;Canon BJC-8200;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA P6000;Canon PIXMA iP8500;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780	M	200			
Canon BCI-6PC	Canon BJ-i560;Canon BJ-i865;Canon BJ-i905;Canon BJ-i9100;Canon BJ-i950;Canon BJ-i965;Canon BJ-i990;Canon BJ-i9950;Canon BJ-S800;Canon BJ-S820;Canon BJ-S830;Canon BJ-S900;Canon BJ-S9000;Canon BJC-8200;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA P6000;Canon PIXMA iP8500;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780	PC/LC	200			
Canon BCI-6PM	Canon BJ-i560;Canon BJ-i865;Canon BJ-i905;Canon BJ-i9100;Canon BJ-i950;Canon BJ-i965;Canon BJ-i990;Canon BJ-i9950;Canon BJ-S800;Canon BJ-S820;Canon BJ-S830;Canon BJ-S900;Canon BJ-S9000;Canon BJC-8200;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA P6000;Canon PIXMA iP8500;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780	PM/LM	200			
Canon BCI-6Y	Canon BJ-i560;Canon BJ-i865;Canon BJ-i905;Canon BJ-i9100;Canon BJ-i950;Canon BJ-i965;Canon BJ-i990;Canon BJ-i9950;Canon BJ-S800;Canon BJ-S820;Canon BJ-S830;Canon BJ-S900;Canon BJ-S9000;Canon BJC-8200;Canon PIXMA iP3000;Canon PIXMA iP4000;Canon PIXMA iP5000;Canon PIXMA P6000;Canon PIXMA iP8500;Canon PIXMA MP750;Canon PIXMA MP760;Canon PIXMA MP780	Y	200			
Canon BC-05	Canon BJC-1000;Canon BJC-210;Canon BJC-240;Canon BJC-250	Color	250			
Canon BC-06	Canon BJC-1000;Canon BJC-210;Canon BJC-240;Canon BJC-250	BK	250			
Canon BC-20	Canon BJ-S100;Canon BJC-2000;Canon BJC-2100;Canon BJC-4000;Canon BJC-4100;Canon BJC-4200;Canon BJC-4300;Canon BJC-4400;Canon BJC-4550;Canon BJC-4650;Canon BJC-5500	BK	250			
Canon BX-3	Canon FAX-B100;Canon FAX-B110;Canon FAX-B115;Canon FAX-B120;Canon FAX-B140;Canon FAX-B150;Canon FAX-B155;Canon FAX-B540;Canon FAX-B550;Canon FAX-B640;Canon FAX-B820;Canon FAX-B840;MultiPass-10	BK	300			
Canon BX-20	Canon FAX-160;Canon FAX-180C;Canon FAX-210C;Canon FAX-215C;Canon FAX-230C;Canon FAX-EB10;Canon FAX-EB15;Canon MultiPass-C20;Canon MultiPass-C30;Canon MultiPass-C50;Canon MultiPass-C70;Canon MultiPass-C75;Canon MultiPass-C80	BK	300			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon BC-11	Canon BJC-50;Canon BJC-55;Canon BJC-70;BJC-80;Canon BJC-8;Canon BN-700	Color	300			
Canon CLI-426Bk	Canon PIXMA iP4840;Canon PIXMA MG5140;Canon PIXMA MG5240;Canon PIXMA MG6140;Canon PIXMA MG8140;Canon PIXMA MX880ser;Canon PIXMA MX884;Canon PIXMA MG8240;Canon PIXMA MG6240;Canon PIXMA MG5340;Canon PIXMA iP4940	BK	200			
Canon CLI-426C	Canon PIXMA iP4840;Canon PIXMA MG5140;Canon PIXMA MG5240;Canon PIXMA MG6140;Canon PIXMA MG8140;Canon PIXMA MX880ser;Canon PIXMA MX884;Canon PIXMA MG8240;Canon PIXMA MG6240;Canon PIXMA MG5340;Canon PIXMA iP4940	C	200			
Canon CLI-426M	Canon PIXMA iP4840;Canon PIXMA MG5140;Canon PIXMA MG5240;Canon PIXMA MG6140;Canon PIXMA MG8140;Canon PIXMA MX880ser;Canon PIXMA MX884;Canon PIXMA MG8240;Canon PIXMA MG6240;Canon PIXMA MG5340;Canon PIXMA iP4940	M	200			
Canon CLI-426Y	Canon PIXMA iP4840;Canon PIXMA MG5140;Canon PIXMA MG5240;Canon PIXMA MG6140;Canon PIXMA MG8140;Canon PIXMA MX880ser;Canon PIXMA MX884;Canon PIXMA MG8240;Canon PIXMA MG6240;Canon PIXMA MG5340;Canon PIXMA iP4940	Y	200			
Canon PGI-425Bk	Canon PIXMA iP4840;Canon PIXMA MG5140;Canon PIXMA MG5240;Canon PIXMA MG6140;Canon PIXMA MG8140;Canon PIXMA MX880ser;Canon PIXMA MX884;Canon PIXMA MG8240;Canon PIXMA MG6240;Canon PIXMA MG5340;Canon PIXMA iP4940	BK Pigment	200			
Canon CLI-526Bk	Canon PIXMA iP1850;Canon PIXMA MG5150;Canon PIXMA 5250;Canon PIXMA 6150;Canon PIXMA 8150	BK	200			
Canon CLI-526C	Canon PIXMA iP1850;Canon PIXMA MG5150;Canon PIXMA 5250;Canon PIXMA 6150;Canon PIXMA 8150	C	200			
Canon CLI-526M	Canon PIXMA iP1850;Canon PIXMA MG5150;Canon PIXMA 5250;Canon PIXMA 6150;Canon PIXMA 8150	M	200			
Canon CLI-526Y	Canon PIXMA iP1850;Canon PIXMA MG5150;Canon PIXMA 5250;Canon PIXMA 6150;Canon PIXMA 8150	Y	200			
Canon PGI-525Bk	Canon PIXMA iP1850;Canon PIXMA MG5150;Canon PIXMA 5250;Canon PIXMA 6150;Canon PIXMA 8150	BK Pigment	250			
Canon CL-441	Canon PIXMA MG2140;Canon PIXMA MG2240;Canon PIXMA MG3140;Canon PIXMA MG3240;Canon PIXMA MG3540;Canon PIXMA MG3640;Canon PIXMA MG4140;Canon PIXMA MG4240;Canon PIXMA MX374;Canon PIXMA MX394;Canon PIXMA MX434;Canon PIXMA MX454;Canon PIXMA MX474;Canon PIXMA MX514;Canon PIXMA MX524;Canon PIXMA MX534	Color	250			
Canon CL-441XL	Canon PIXMA MG2140;Canon PIXMA MG2240;Canon PIXMA MG3140;Canon PIXMA MG3240;Canon PIXMA MG3540;Canon PIXMA MG3640;Canon PIXMA MG4140;Canon PIXMA MG4240;Canon PIXMA MX374;Canon PIXMA MX394;Canon PIXMA MX434;Canon PIXMA MX454;Canon PIXMA MX474;Canon PIXMA MX514;Canon PIXMA MX524;Canon PIXMA MX534	Color	250			
Canon PG-440	Canon PIXMA MG2140;Canon PIXMA MG2240;Canon PIXMA MG3140;Canon PIXMA MG3240;Canon PIXMA MG3540;Canon PIXMA MG3640;Canon PIXMA MG4140;Canon PIXMA MG4240;Canon PIXMA MX374;Canon PIXMA MX394;Canon PIXMA MX434;Canon PIXMA MX454;Canon PIXMA MX474;Canon PIXMA MX514;Canon PIXMA MX524;Canon PIXMA MX534	BK Pigment	200			
Canon PG-440XL	Canon PIXMA MG2140;Canon PIXMA MG2240;Canon PIXMA MG3140;Canon PIXMA MG3240;Canon PIXMA MG3540;Canon PIXMA MG3640;Canon PIXMA MG4140;Canon PIXMA MG4240;Canon PIXMA MX374;Canon PIXMA MX394;Canon PIXMA MX434;Canon PIXMA MX454;Canon PIXMA MX474;Canon PIXMA MX514;Canon PIXMA MX524;Canon PIXMA MX534	BK Pigment	200			
Canon CL-446	Canon PIXMA iP2840;Canon PIXMA MG2440;Canon PIXMA MG2540;Canon PIXMA MG3040;Canon PIXMA MG2540S;Canon PIXMA MX494;Canon PIXMA MG2940	Color	250			
Canon CL-446XL	Canon PIXMA iP2840;Canon PIXMA MG2440;Canon PIXMA MG2540;Canon PIXMA MG3040;Canon PIXMA MG2540S;Canon PIXMA MX494;Canon PIXMA MG2940	Color	300			
Canon PG-445	Canon PIXMA iP2840;Canon PIXMA MG2440;Canon PIXMA MG2540;Canon PIXMA MG3040;Canon PIXMA MG2540S;Canon PIXMA MX494;Canon PIXMA MG2940	BK Pigment	200			
Canon PG-445XL	Canon PIXMA iP2840;Canon PIXMA MG2440;Canon PIXMA MG2540;Canon PIXMA MG3040;Canon PIXMA MG2540S;Canon PIXMA MX494;Canon PIXMA MG2940	BK Pigment	250			
Canon CLI-36	Canon PIXMA iP100;Canon PIXMA iP110	Color	250			
Canon PGI-35	Canon PIXMA iP100;Canon PIXMA iP110	BK Pigment	250			
Canon CL-56	Canon PIXMA E464;Canon PIXMA E484	Color	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon PG-46	Canon PIXMA E464;Canon PIXMA E484	BK Pigment	200			
Canon PGI-1400XL BK	Canon MAXIFY MB2040;Canon MAXIFY MB2340;Canon MAXIFY MB2740;Canon MAXIFY MB2140	BK Pigment	250			
Canon PGI-1400XL M	Canon MAXIFY MB2040;Canon MAXIFY MB2340;Canon MAXIFY MB2740;Canon MAXIFY MB2140	M Pigment	250			
Canon PGI-1400XL Y	Canon MAXIFY MB2040;Canon MAXIFY MB2340;Canon MAXIFY MB2740;Canon MAXIFY MB2140	Y Pigment	250			
Canon PGI-1400XL C	Canon MAXIFY MB2040;Canon MAXIFY MB2340;Canon MAXIFY MB2740;Canon MAXIFY MB2140	C Pigment	250			
Canon PGI-2400XL BK	Canon MAXIFY MB5040;Canon MAXIFY MB5340;Canon MAXIFY iB4040;Canon MAXIFY MB5340;Canon MAXIFY iB4140;Canon MAXIFY MB5140;Canon MAXIFY MB5440	BK Pigment	300			
Canon PGI-2400XL C	Canon MAXIFY MB5040;Canon MAXIFY MB5340;Canon MAXIFY iB4040;Canon MAXIFY MB5340;Canon MAXIFY iB4140;Canon MAXIFY MB5140;Canon MAXIFY MB5440	C Pigment	300			
Canon PGI-2400XL M	Canon MAXIFY MB5040;Canon MAXIFY MB5340;Canon MAXIFY iB4040;Canon MAXIFY MB5340;Canon MAXIFY iB4140;Canon MAXIFY MB5140;Canon MAXIFY MB5440	M Pigment	300			
Canon PGI-2400XL Y	Canon MAXIFY MB5040;Canon MAXIFY MB5340;Canon MAXIFY iB4040;Canon MAXIFY MB5340;Canon MAXIFY iB4140;Canon MAXIFY MB5140;Canon MAXIFY MB5440	Y Pigment	300			
Canon CLI-471BK	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	BK	200			
Canon CLI-471BK XL	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	BK	250			
Canon CLI-471C	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	C	200			
Canon CLI-471C XL	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	C	250			
Canon CLI-471GY	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	GY	200			
Canon CLI-471GY XL	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	GY	250			
Canon CLI-471M	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	M	200			
Canon CLI-471M XL	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	M	250			
Canon CLI-471Y	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	Y	200			
Canon CLI-471Y XL	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	Y	250			
Canon PGI-470PGBK	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	BK Pigment	200			
Canon PGI-470PGBK XL	Canon PIXMA MG7740;Canon PIXMA MG6840;Canon PIXMA MG5740;Canon PIXMA TS8040;Canon PIXMA TS9040;Canon PIXMA TS5040;Canon PIXMA TS6040	BK Pigment	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Canon CLI-451BK	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	BK	200			
Canon CLI-451BKXL	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	BK	200			
Canon CLI-451C	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	C	200			
Canon CLI-451CXL	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	C	200			
Canon CLI-451M	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	M	200			
Canon CLI-451MXL	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	M	200			
Canon CLI-451Y	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	Y	200			
Canon CLI-451YXL	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	Y	200			
Canon PGI-450PGBK	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon PIXMA MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	BK Pigment	200			
Canon PGI-450PGBKXL	Canon PIXMA iP7240;Canon PIXMA iP8740;Canon PIXMA iX6840;Canon PIXMA MG5440;Canon PIXMA MG5540;Canon PIXMA MG5640;Canon PIXMA MG6340;Canon PIXMA MG6440;Canon PIXMA MG6640;Canon PIXMA MG7140;Canon PIXMA MG7540;Canon PIXMA MX924	BK Pigment	200			
Epson C13S050436	Epson AcuLaser-M2000	BK	900	1050		
Epson C13S050435	Epson AcuLaser-M2000	BK	1200	1350		
Epson C13S051161	Epson AcuLaser C2800N	BK	3750	4100		
Epson C13S051165	Epson AcuLaser C2800N	BK	1750	2150		
Epson C13S051164	Epson AcuLaser C2800N	C	2000	2250		
Epson C13S051163	Epson AcuLaser C2800N	M	2000	2250		
Epson C13S051162	Epson AcuLaser C2800N	Y	2000	2250		
Epson C13S051160	Epson AcuLaser C2800N	C	2650	3000		
Epson C13S051159	Epson AcuLaser C2800N	M	2650	3000		
Epson C13S051158	Epson AcuLaser C2800N	Y	2650	3000		
Epson C13S050149	Epson AcuLaser C4100	BK	4250	5350		
Epson C13S050146	Epson AcuLaser C4100	C	4250	5350		
Epson C13S050147	Epson AcuLaser C4100	M	4250	5350		
Epson C13S050148	Epson AcuLaser C4100	Y	4250	5350		
Epson C13S050319	Epson AcuLaser CX21	BK	2000	2300		
Epson C13S050318	Epson AcuLaser CX21	C	2650	2700		
Epson C13S050317	Epson AcuLaser CX21	M	2650	2700		
Epson C13S050316	Epson AcuLaser CX21	Y	2650	2700		
Epson C13S051016	Epson EPL-5600;Epson N1200	BK	900			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Epson C13S051022	Epson EPL-9000	BK	1150			
Epson C13S051069	Epson EPL-N2010	BK	1800			
Epson C13S050290	Epson EPL-N2550	BK	2850	3300		
Epson C13S051111	Epson EPL-N3000	BK	2850	3300		
Epson C13S051100	Epson EPL-N7000	BK	2850			
Epson C13S050521	Epson AcuLaser M1200	BK	950	1650		
Epson C13S050557	Epson AcuLaser C1600;Epson AcuLaser CX16	BK	2100	2550		
Epson C13S050556	Epson AcuLaser C1600;Epson AcuLaser CX16	C	2100	2550		
Epson C13S050555	Epson AcuLaser C1600;Epson AcuLaser CX16	M	2100	2550		
Epson C13S050554	Epson AcuLaser C1600;Epson AcuLaser CX16	Y	2100	2550		
Epson C13S050583	Epson AcuLaser M2300D;Epson AcuLaser M2400D;Epson AcuLaser MX20	BK	750	950		
Epson EPLS050010	Epson EPL-5700;Epson EPL-5800]	BK	1550			
Epson EPLS050095	Epson EPL-6100]	BK	1150			
Epson EPLS050005	Epson EPL-5500	BK	1200			
Epson EPLS051011	Epson ActionLaser-100;Epson ActionLaser-1000;Epson ActionLaser-1500;Epson EPL-5000;Epson EPL-5200	BK	600			
Epson EPLS050087	Epson EPL-5900;Epson EPL-6100	BK	1550			
Epson EPLS050166	Epson EPL-6200	BK	1550	1600		
Epson EPLS050167	Epson EPL-6200	BK	1150	1200		
Epson EPLS050099	Epson AcuLaser-C900;Epson AcuLaser-C1900	C	1650			
Epson EPLS050098	Epson AcuLaser-C900;Epson AcuLaser-C1900	M	1650			
Epson EPLS050097	Epson AcuLaser-C900;Epson AcuLaser-C1900	Y	1650			
Epson EPLS050100	Epson AcuLaser-C900;Epson AcuLaser-C1900	BK	1750			
Epson EPLS050033	Epson AcuLaser-C1000;Epson AcuLaser-C2000	BK	2050			
Epson EPLS050036	Epson AcuLaser-C1000;Epson AcuLaser-C2000	C	2050			
Epson EPLS050035	Epson AcuLaser-C1000;Epson AcuLaser-C2000	M	2050			
Epson EPLS050034	Epson AcuLaser-C1000;Epson AcuLaser-C2000	Y	2050			
Epson C13S050189	Epson AcuLaser-C1100;Epson AcuLaser-CX11	C	1750	1900		
Epson C13S050188	Epson AcuLaser-C1100;Epson AcuLaser-CX11	M	1750	1900		
Epson C13S050187	Epson AcuLaser-C1100;Epson AcuLaser-CX11	Y	1750	1900		
Epson C13S050190	Epson AcuLaser-C1100;Epson AcuLaser-CX11	BK	1750	1900		
Epson C13S050038	Epson AcuLaser-C8500;Epson AcuLaser-8600	BK	4800			
Epson C13S050041	Epson AcuLaser-C8500;Epson AcuLaser-8600	C	4800			
Epson C13S050040	Epson AcuLaser-C8500;Epson AcuLaser-8600	M	4800			
Epson C13S050039	Epson AcuLaser-C8500;Epson AcuLaser-8600	Y	4800			
Epson C13S050229	Epson AcuLaser-C2600	BK	2550	3800		
Epson C13S050228	Epson AcuLaser-C2600	C	2550	3800		
Epson C13S050227	Epson AcuLaser-C2600	M	2550	3800		
Epson C13S050226	Epson AcuLaser-C2600	Y	2550	3800		
Epson EPLS050213	Epson AcuLaser-C3000	BK	2000			
Epson EPLS050212	Epson AcuLaser-C3000	C	2300			
Epson EPLS050211	Epson AcuLaser-C3000	M	2300			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Epson EPLS050210	Epson AcuLaser-C3000	Y	2300			
Epson EPLS051127	Epson AcuLaser-C3800	BK	4250			
Epson EPLS051126	Epson AcuLaser-C3800	C	4250			
Epson EPLS051125	Epson AcuLaser-C3800	M	4250			
Epson EPLS051124	Epson AcuLaser-C3800	Y	4250			
Epson EPLS050091	Epson AcuLaser-C4000	BK	4250			
Epson EPLS050090	Epson AcuLaser-C4000	C	4250			
Epson EPLS050089	Epson AcuLaser-C4000	M	4250			
Epson EPLS050088	Epson AcuLaser-C4000	Y	4250			
Epson EPLS050245	Epson AcuLaser-C4200	BK	2350			
Epson C13S050245	Epson AcuLaser-C4200	BK	2350			
Epson EPLS050244	Epson AcuLaser-C4200	C	3650			
Epson EPLS050243	Epson AcuLaser-C4200	M	3650			
Epson EPLS050242	Epson AcuLaser-C4200	Y	3650			
Epson C13S050243	Epson AcuLaser-C4200	M	3650			
Epson C13S050242	Epson AcuLaser-C4200	Y	3650			
Epson C13S050244	Epson AcuLaser-C4200	C	3650			
Epson EPLS050038	Epson AcuLaser-C8500;Epson AcuLaser-8600]	BK	2100			
Epson EPLS050041	Epson AcuLaser-C8500;Epson AcuLaser-8600]	C	2700			
Epson EPLS050040	Epson AcuLaser-C8500;Epson AcuLaser-8600]	M	2700			
Epson EPLS050039	Epson AcuLaser-C8500;Epson AcuLaser-8600]	Y	2700			
Epson EPLS050198	Epson AcuLaser-C9100]	BK	5650			
Epson EPLS050197	Epson AcuLaser-C9100]	C	5650			
Epson EPLS050196	Epson AcuLaser-C9100]	M	5650			
Epson EPLS050195	Epson AcuLaser-C9100]	Y	5650			
Epson EPLS051056	Epson EPL-N1600]	BK	2150			
Epson EPLS051035	Epson EPL-N2000]	BK	2150			
Epson EPLS051068	Epson EPL-N2700;Epson EPL-N2750]	BK	3000			
Epson EPLS051020	Epson EPL-3000]	BK	1550			
Epson C13S050652	Epson AcuLaser-MX14NF;Epson AcuLaser-M1400]	BK				
Epson C13S050650	Epson AcuLaser-MX14NF;Epson AcuLaser-M1400]	BK				
Epson C13S050614	Epson AcuLaser-CX17NF;Epson AcuLaser-C1700;Epson AcuLaser-C1750N	BK	2750	2900		
Epson C13S050613	Epson AcuLaser-CX17NF;Epson AcuLaser-C1700;Epson AcuLaser-C1750N	C	2750	2900		
Epson C13S050612	Epson AcuLaser-CX17NF;Epson AcuLaser-C1700;Epson AcuLaser-C1750N	M	2750	2900		
Epson C13S050611	Epson AcuLaser-CX17NF;Epson AcuLaser-C1700;Epson AcuLaser-C1750N	Y	2750	2900		
Epson C13S050630	Epson AcuLaser-CX29NF;Epson AcuLaser-C2900N	BK				
Epson C13S050629	Epson AcuLaser-CX29NF;Epson AcuLaser-C2900N	C				
Epson C13S050628	Epson AcuLaser-CX29NF;Epson AcuLaser-C2900N	M				
Epson C13S050627	Epson AcuLaser-CX29NF;Epson AcuLaser-C2900N	Y				
Epson T0452	Epson Stylus-C64;Epson Stylus-C66;Epson Stylus-C84;Epson Stylus-C86;Epson Stylus-CX3600;Epson Stylus-CX3650;Epson Stylus-CX6400;Epson Stylus-CX6600	C	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Epson T0453	Epson Stylus-C64;Epson Stylus-C66;Epson Stylus-C84;Epson Stylus-C86;Epson Stylus-CX3600;Epson Stylus-CX3650;Epson Stylus-CX6400;Epson Stylus-CX6600	M	250			
Epson T0454	Epson Stylus-C64;Epson Stylus-C66;Epson Stylus-C84;Epson Stylus-C86;Epson Stylus-CX3600;Epson Stylus-CX3650;Epson Stylus-CX6400;Epson Stylus-CX6600	Y	250			
Epson T0472	Epson Stylus-C63;Epson Stylus-C65;Epson Stylus-CX3500	C	250			
Epson T0473	Epson Stylus-C63;Epson Stylus-C65;Epson Stylus-CX3500	M	250			
Epson T0474	Epson Stylus-C63;Epson Stylus-C65;Epson Stylus-CX3500	Y	250			
Epson T0461	Epson Stylus-C63;Epson Stylus-C65;Epson Stylus-CX3500	BK	300			
Epson T0481	Epson Stylus Photo-R200;Epson Stylus Photo-R220;Epson Stylus Photo-R300;Epson Stylus Photo-R320;Epson Stylus Photo-R340;Epson Stylus Photo-RX500;Epson Stylus Photo-RX600;Epson Stylus Photo-RX620;Epson Stylus Photo-RX640	BK	250			
Epson T0482	Epson Stylus Photo-R200;Epson Stylus Photo-R220;Epson Stylus Photo-R300;Epson Stylus Photo-R320;Epson Stylus Photo-R340;Epson Stylus Photo-RX500;Epson Stylus Photo-RX600;Epson Stylus Photo-RX620;Epson Stylus Photo-RX640	C	250			
Epson T0483	Epson Stylus Photo-R200;Epson Stylus Photo-R220;Epson Stylus Photo-R300;Epson Stylus Photo-R320;Epson Stylus Photo-R340;Epson Stylus Photo-RX500;Epson Stylus Photo-RX600;Epson Stylus Photo-RX620;Epson Stylus Photo-RX640	M	250			
Epson T0484	Epson Stylus Photo-R200;Epson Stylus Photo-R220;Epson Stylus Photo-R300;Epson Stylus Photo-R320;Epson Stylus Photo-R340;Epson Stylus Photo-RX500;Epson Stylus Photo-RX600;Epson Stylus Photo-RX620;Epson Stylus Photo-RX640	Y	250			
Epson T0485	Epson Stylus Photo-R200;Epson Stylus Photo-R220;Epson Stylus Photo-R300;Epson Stylus Photo-R320;Epson Stylus Photo-R340;Epson Stylus Photo-RX500;Epson Stylus Photo-RX600;Epson Stylus Photo-RX620;Epson Stylus Photo-RX640	LC	250			
Epson T0486	Epson Stylus Photo-R200;Epson Stylus Photo-R220;Epson Stylus Photo-R300;Epson Stylus Photo-R320;Epson Stylus Photo-R340;Epson Stylus Photo-RX500;Epson Stylus Photo-RX600;Epson Stylus Photo-RX620;Epson Stylus Photo-RX640	LM	250			
Epson T0540	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	GO	250			
Epson T0541	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	BK	250			
Epson T0542	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	C	250			
Epson T0543	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	M	250			
Epson T0544	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	Y	250			
Epson T0545	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	LC	250			
Epson T0546	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	LM	250			
Epson T0547	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	R	250			
Epson T0548	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	MB	250			
Epson T0549	Epson Stylus Photo-R1800;Epson Stylus Photo-R800	B	250			
Epson T0551	Epson Stylus Photo-R240;Epson Stylus Photo-RX520	BK	250			
Epson T0552	Epson Stylus Photo-R240;Epson Stylus Photo-RX520	C	250			
Epson T0553	Epson Stylus Photo-R240;Epson Stylus Photo-RX520	M	250			
Epson T0554	Epson Stylus Photo-R240;Epson Stylus Photo-RX520	Y	250			
Epson T0591	Epson Stylus Photo-R2400	PB	250			
Epson T0592	Epson Stylus Photo-R2400	C	250			
Epson T0593	Epson Stylus Photo-R2400	M	250			
Epson T0594	Epson Stylus Photo-R2400	Y	250			
Epson T0595	Epson Stylus Photo-R2400	LC	250			
Epson T0596	Epson Stylus Photo-R2400	LM	250			
Epson T0597	Epson Stylus Photo-R2400	LB	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Epson T0598	Epson Stylus Photo-R2400	MB	250			
Epson T0599	Epson Stylus Photo-R2400	LLB	250			
Epson T0631	Epson Stylus-C67;Epson Stylus-C87;Epson Stylus-CX3700;Epson Stylus-CX4100;Epson Stylus-CX4700	BK	250			
Epson T0632	Epson Stylus-C67;Epson Stylus-C87;Epson Stylus-CX3700;Epson Stylus-CX4100;Epson Stylus-CX4700	C	250			
Epson T0633	Epson Stylus-C67;Epson Stylus-C87;Epson Stylus-CX3700;Epson Stylus-CX4100;Epson Stylus-CX4700	M	250			
Epson T0644	Epson Stylus-C67;Epson Stylus-C87;Epson Stylus-CX3700;Epson Stylus-CX4100;Epson Stylus-CX4700	Y	250			
Epson T5591	Epson Stylus Photo-RX700	BK				
Epson T5592	Epson Stylus Photo-RX700	C				
Epson T5593	Epson Stylus Photo-RX700	M				
Epson T5594	Epson Stylus Photo-RX700	Y				
Epson T5595	Epson Stylus Photo-RX700	LC				
Epson T5596	Epson Stylus Photo-RX700	LM				
Epson T0731	Epson Stylus-C110;Epson Stylus-C79;Epson Stylus-CX3900;Epson Stylus-CX4900;Epson Stylus-CX5900;Epson Stylus-CX6900;Epson Stylus-CX7300;Epson Stylus-CX8300;Epson Stylus-CX9300;Epson Stylus-TX200;Epson Stylus-TX209;Epson Stylus-TX210;Epson Stylus-TX219;Epson Stylus-TX400;Epson Stylus-TX409;Epson Stylus-TX410;Epson Stylus-TX419;Epson Stylus-TX550;Epson Stylus Office-T30;Epson Stylus Office-T40;Epson Stylus Office-TX300;Epson Stylus Office-TX510;Epson Stylus Office-TX600	BK				
Epson T0732	Epson Stylus-C110;Epson Stylus-C79;Epson Stylus-CX3900;Epson Stylus-CX4900;Epson Stylus-CX5900;Epson Stylus-CX6900;Epson Stylus-CX7300;Epson Stylus-CX8300;Epson Stylus-CX9300;Epson Stylus-TX200;Epson Stylus-TX209;Epson Stylus-TX210;Epson Stylus-TX219;Epson Stylus-TX400;Epson Stylus-TX409;Epson Stylus-TX410;Epson Stylus-TX419;Epson Stylus-TX550;Epson Stylus Office-T30;Epson Stylus Office-T40;Epson Stylus Office-TX300;Epson Stylus Office-TX510;Epson Stylus Office-TX600	C				
Epson T0733	Epson D165	M				
Epson T0734	Epson D165	Y				
Epson T0811	Epson Stylus Photo-1410;Epson Stylus Photo-R270;Epson R290;Epson R295;Epson Stylus Photo-R390;Epson Stylus Photo-RX590;Epson Stylus Photo-RX610;Epson Stylus Photo-RX615;Epson Stylus Photo-RX690;Epson Stylus Photo-T50;Epson Stylus Photo-T59;Epson Stylus Photo-TX650;Epson Stylus Photo-TX659;Epson Stylus Photo-TX700;Epson Stylus Photo-TX710;Epson Stylus Photo-TX800	BK				
Epson T0812	Epson Stylus Photo-1410;Epson Stylus Photo-R270;Epson R290;Epson R295;Epson Stylus Photo-R390;Epson Stylus Photo-RX590;Epson Stylus Photo-RX610;Epson Stylus Photo-RX615;Epson Stylus Photo-RX690;Epson Stylus Photo-T50;Epson Stylus Photo-T59;Epson Stylus Photo-TX650;Epson Stylus Photo-TX659;Epson Stylus Photo-TX700;Epson Stylus Photo-TX710;Epson Stylus Photo-TX800	C				
Epson T0813	Epson Stylus Photo-1410;Epson Stylus Photo-R270;Epson R290;Epson R295;Epson Stylus Photo-R390;Epson Stylus Photo-RX590;Epson Stylus Photo-RX610;Epson Stylus Photo-RX615;Epson Stylus Photo-RX690;Epson Stylus Photo-T50;Epson Stylus Photo-T59;Epson Stylus Photo-TX650;Epson Stylus Photo-TX659;Epson Stylus Photo-TX700;Epson Stylus Photo-TX710;Epson Stylus Photo-TX800	M				
Epson T0814	Epson Stylus Photo-1410;Epson Stylus Photo-R270;Epson R290;Epson R295;Epson Stylus Photo-R390;Epson Stylus Photo-RX590;Epson Stylus Photo-RX610;Epson Stylus Photo-RX615;Epson Stylus Photo-RX690;Epson Stylus Photo-T50;Epson Stylus Photo-T59;Epson Stylus Photo-TX650;Epson Stylus Photo-TX659;Epson Stylus Photo-TX700;Epson Stylus Photo-TX710;Epson Stylus Photo-TX800	Y				
Epson T0815	Epson Stylus Photo-1410;Epson Stylus Photo-R270;Epson R290;Epson R295;Epson Stylus Photo-R390;Epson Stylus Photo-RX590;Epson Stylus Photo-RX610;Epson Stylus Photo-RX615;Epson Stylus Photo-RX690;Epson Stylus Photo-T50;Epson Stylus Photo-T59;Epson Stylus Photo-TX650;Epson Stylus Photo-TX659;Epson Stylus Photo-TX700;Epson Stylus Photo-TX710;Epson Stylus Photo-TX800	LC				
Epson T0816	Epson Stylus Photo-1410;Epson Stylus Photo-R270;Epson R290;Epson R295;Epson Stylus Photo-R390;Epson Stylus Photo-RX590;Epson Stylus Photo-RX610;Epson Stylus Photo-RX615;Epson Stylus Photo-RX690;Epson Stylus Photo-T50;Epson Stylus Photo-T59;Epson Stylus Photo-TX650;Epson Stylus Photo-TX659;Epson Stylus Photo-TX700;Epson Stylus Photo-TX710;Epson Stylus Photo-TX800	LM				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Epson T0821	Epson Stylus Photo-1410;Epson R270;Epson R290;Epson R295;Epson R390;Epson RX590;Epson RX610;Epson RX615;Epson RX690;Epson T50;Epson T59;Epson TX650;Epson TX659;Epson TX700;Epson TX710;Epson TX800	BK				
Epson T0822	Epson Stylus Photo-1410;Epson R270;Epson R290;Epson R295;Epson R390;Epson RX590;Epson RX610;Epson RX615;Epson RX690;Epson T50;Epson T59;Epson TX650;Epson TX659;Epson TX700;Epson TX710;Epson TX800	C				
Epson T0823	Epson Stylus Photo-1410;Epson R270;Epson R290;Epson R295;Epson R390;Epson RX590;Epson RX610;Epson RX615;Epson RX690;Epson T50;Epson T59;Epson TX650;Epson TX659;Epson TX700;Epson TX710;Epson TX800	M				
Epson T0824	Epson Stylus Photo-1410;Epson R270;Epson R290;Epson R295;Epson R390;Epson RX590;Epson RX610;Epson RX615;Epson RX690;Epson T50;Epson T59;Epson TX650;Epson TX659;Epson TX700;Epson TX710;Epson TX800	Y				
Epson T0825	Epson Stylus Photo-1410;Epson R270;Epson R290;Epson R295;Epson R390;Epson RX590;Epson RX610;Epson RX615;Epson RX690;Epson T50;Epson T59;Epson TX650;Epson TX659;Epson TX700;Epson TX710;Epson TX800	LC				
Epson T0826	Epson Stylus Photo-1410;Epson R270;Epson R290;Epson R295;Epson R390;Epson RX590;Epson RX610;Epson RX615;Epson RX690;Epson T50;Epson T59;Epson TX650;Epson TX659;Epson TX700;Epson TX710;Epson TX800	LM				
Epson T0921	Epson Stylus-C240;Epson C91;Epson CX4300;Epson T26;Epson T27;Epson TX106;Epson TX109;Epson TX117;Epson TX119	BK				
Epson T0922	Epson Stylus-C240;Epson C91;Epson CX4300;Epson T26;Epson T27;Epson TX106;Epson TX109;Epson TX117;Epson TX119	C				
Epson T0923	Epson Stylus-C240;Epson C91;Epson CX4300;Epson T26;Epson T27;Epson TX106;Epson TX109;Epson TX117;Epson TX119	M				
Epson T0924	Epson Stylus-C240;Epson C91;Epson CX4300;Epson T26;Epson T27;Epson TX106;Epson TX109;Epson TX117;Epson TX119	Y				
Epson T1281	Epson Stylus S22;Epson Stylus SX125	BK				
Epson T1282	Epson Stylus S22;Epson Stylus SX125	C				
Epson T1283	Epson Stylus S22;Epson Stylus SX125	M				
Epson T1284	Epson Stylus S22;Epson Stylus SX125	Y				
Epson T1281	Epson Stylus SX420W;Epson Stylus SX425W;Epson Stylus BX305F;Epson Stylus BX305FW;Epson Stylus SX435W;Epson Stylus SX430W;Epson Stylus SX235W;Epson Stylus SX230;Epson Stylus SX440W;Epson Stylus SX445W	BK				
Epson T1282	Epson Stylus SX420W;Epson Stylus SX425W;Epson Stylus BX305F;Epson Stylus BX305FW;Epson Stylus SX435W;Epson Stylus SX430W;Epson Stylus SX235W;Epson Stylus SX230;Epson Stylus SX440W;Epson Stylus SX445W	C				
Epson T1283	Epson Stylus SX420W;Epson Stylus SX425W;Epson Stylus BX305F;Epson Stylus BX305FW;Epson Stylus SX435W;Epson Stylus SX430W;Epson Stylus SX235W;Epson Stylus SX230;Epson Stylus SX440W;Epson Stylus SX445W	M				
Epson T1284	Epson Stylus SX420W;Epson Stylus SX425W;Epson Stylus BX305F;Epson Stylus BX305FW;Epson Stylus SX435W;Epson Stylus SX430W;Epson Stylus SX235W;Epson Stylus SX230;Epson Stylus SX440W;Epson Stylus SX445W	Y				
Epson T1291	Epson Stylus SX420W;Epson Stylus SX425W;Epson Stylus BX305F;Epson Stylus BX305FW;Epson Stylus SX435W;Epson Stylus SX430W;Epson Stylus SX235W;Epson Stylus SX230;Epson Stylus SX440W;Epson Stylus SX445W	BK				
Epson T1292	Epson Stylus SX420W;Epson Stylus SX425W;Epson Stylus BX305F;Epson Stylus BX305FW;Epson Stylus SX435W;Epson Stylus SX430W;Epson Stylus SX235W;Epson Stylus SX230;Epson Stylus SX440W;Epson Stylus SX445W	C				
Epson T1293	Epson Stylus SX420W;Epson Stylus SX425W;Epson Stylus BX305F;Epson Stylus BX305FW;Epson Stylus SX435W;Epson Stylus SX430W;Epson Stylus SX235W;Epson Stylus SX230;Epson Stylus SX440W;Epson Stylus SX445W	M				
Epson T1294	Epson Stylus SX420W;Epson Stylus SX425W;Epson Stylus BX305F;Epson Stylus BX305FW;Epson Stylus SX435W;Epson Stylus SX430W;Epson Stylus SX235W;Epson Stylus SX230;Epson Stylus SX440W;Epson Stylus SX445W	Y				
Epson T1291	Epson Stylus SX525WD;Epson Stylus SX620FW;Epson Stylus BX320FW;Epson Stylus BX525WD;Epson Stylus BX625FWD	BK				
Epson T1292	Epson Stylus SX525WD;Epson Stylus SX620FW;Epson Stylus BX320FW;Epson Stylus BX525WD;Epson Stylus BX625FWD	C				
Epson T1293	Epson Stylus SX525WD;Epson Stylus SX620FW;Epson Stylus BX320FW;Epson Stylus BX525WD;Epson Stylus BX625FWD	M				
Epson T1294	Epson Stylus SX525WD;Epson Stylus SX620FW;Epson Stylus BX320FW;Epson Stylus BX525WD;Epson Stylus BX625FWD	Y				
Epson T1301	Epson Stylus SX525WD;Epson Stylus SX620FW;Epson Stylus BX320FW;Epson Stylus BX525WD;Epson Stylus BX625FWD	BK				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Epson T0793	Epson Stylus Photo 1400;Epson Stylus Photo PX660;Epson Stylus Photo PX720WD;Epson Stylus Photo PX820FWD	M				
Epson T0794	Epson Stylus Photo 1400;Epson Stylus Photo PX660;Epson Stylus Photo PX720WD;Epson Stylus Photo PX820FWD	Y				
Epson T0795	Epson Stylus Photo 1400;Epson Stylus Photo PX660;Epson Stylus Photo PX720WD;Epson Stylus Photo PX820FWD	LC				
Epson T0796	Epson Stylus Photo 1400;Epson Stylus Photo PX660;Epson Stylus Photo PX720WD;Epson Stylus Photo PX820FWD	LM				
Epson T6161	Epson B-300;Epson B-310N	BK				
Epson T6162	Epson B-300;Epson B-310N	C				
Epson T6163	Epson B-300;Epson B-310N	M				
Epson T6164	Epson B-300;Epson B-310N	Y				
Epson T6161	Epson B-500DN;Epson B-510DN	BK				
Epson T6162	Epson B-500DN;Epson B-510DN	C				
Epson T6163	Epson B-500DN;Epson B-510DN	M				
Epson T6164	Epson B-500DN;Epson B-510DN	Y				
Epson T6171	Epson B-500DN;Epson B-510DN	BK				
Epson T6172	Epson B-500DN;Epson B-510DN	C				
Epson T6173	Epson B-500DN;Epson B-510DN	M				
Epson T6174	Epson B-500DN;Epson B-510DN	Y				
Epson T0961	Epson R2880	BK				
Epson T0962	Epson R2880	C				
Epson T0963	Epson R2880	M				
Epson T0964	Epson R2880	Y				
Epson T0965	Epson R2880	LC				
Epson T0966	Epson R2880	LM				
Epson T0967	Epson R2880	LB				
Epson T0968	Epson R2880	MB				
Epson T0969	Epson R2880	LLB				
Epson T0870	Epson R1900	GO				
Epson T0871	Epson R1900	BK				
Epson T0872	Epson R1900	C				
Epson T0873	Epson R1900	M				
Epson T0874	Epson R1900	Y				
Epson T0875	Epson R1900	LC				
Epson T0876	Epson R1900	LM				
Epson T0877	Epson R1900	LB				
Epson T0878	Epson R1900	MB				
Epson T0879	Epson R1900	LLB				
Epson T1031	Epson T1100	BK				
Epson T1032	Epson T1100	C				
Epson T1033	Epson T1100	M				
Epson T1034	Epson T1100	Y				
HP 12A (Q2612A)	HP LaserJet 1010;HP LaserJet 1012;HP LaserJet 1015;HP LaserJet 1018;HP LaserJet 1020;HP LaserJet 1022;HP LaserJet3015;HP LaserJet 3020;HP LaserJet 3030;HP LaserJet 3050;HP LaserJet 3052;HP LaserJet 3055;HP LaserJet M1005;HP LaserJet M1319	BK	430			850

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP 13A (Q2613A)	HP LaserJet 1300	BK	450	550		850
HP 13X (Q2613X)	HP LaserJet 1300	BK	650	700		900
HP 92A (C4092A)	HP LaserJet 1100A;HP LaserJet 3200;HP LaserJet 1100	BK	430			850
HP 10A (Q2610A)	HP LaserJet 2300	BK	650	700		1200
HP 24A (Q2624A)	HP LaserJet 1150	BK	450			850
HP 24X (Q2624X)	HP LaserJet 1150	BK	600			1000
HP 49A (Q5949A)	HP LaserJet 1160;HP LaserJet 1320;HP LaserJet 3390;HP LaserJet 3392	BK	480	530		850
HP 49X (Q5949X)	HP LaserJet 1320;HP LaserJet 3390;HP LaserJet 3392	BK	730	780		1100
HP 96A (C4096A)	HP LaserJet 2100;HP LaserJet 2200	BK	650			1100
HP 11A (Q6511A)	HP LaserJet 2410;HP LaserJet 2420;HP LaserJet 2430	BK	750	800		1100
HP 11X (Q6511X)	HP LaserJet 2410;HP LaserJet 2420;HP LaserJet 2430	BK	1100	1150		1500
HP 51A (Q7551A)	HP LaserJet M3027;HP LaserJet M3035;HP LaserJet P3005	BK	750	800		1100
HP 51X (Q7551X)	HP LaserJet M3027;HP LaserJet M3035;HP LaserJet P3005	BK	1550	1600		2150
HP 27X (C4127X)	HP LaserJet 4000;HP LaserJet 4050	BK	1200			1980
HP 27X (C4127X)	HP LaserJet 4000;HP LaserJet 4050	BK	750			1100
HP 61X (C8061X)	HP LaserJet 4100	BK	950	1000		1500
HP 61A (C8061A)	HP LaserJet 4100	BK	1300	1350		1900
HP 38A (Q1338A)	HP LaserJet 4200	BK	1450	1500		2100
HP 39A (Q1339A)	HP LaserJet 4300	BK	1650	1700		2100
HP 42A (Q5942A)	HP LaserJet 4250;HP LaserJet 4350	BK	1250	1300		1600
HP 42X (Q5942X)	HP LaserJet 4250;HP LaserJet 4350	BK	1600	1650		2100
HP 16A (Q7516A)	HP LaserJet 5200	BK	500			900
HP 29X (C4129X)	HP LaserJet 5000;HP LaserJet 5100	BK	1500	1600		2500
HP 35A (CB435A)	HP LaserJet P1005;HP LaserJet P1006;HP LaserJet P1007;HP LaserJet P1008	BK	430	480		850
HP 36A (CB436A)	HP LaserJet M1120;HP LaserJet M1522;HP LaserJet P1505	BK	430	480		850
HP 53A (Q7553A)	HP LaserJet M2727;HP LaserJet P2014;HP LaserJet P2015	BK	480	530		850
HP 53X (Q7553X)	HP LaserJet M2727;HP LaserJet P2014;HP LaserJet P2015	BK	730	780		1200
HP 70A (Q7570A)	HP LaserJet M5025;HP LaserJet M5035	BK	1300	1350		1980
HP 45A (Q5945A)	HP LaserJet 4345	BK	1600	1650		2200
HP 43X (C8543X)	HP LaserJet 9000;HP LaserJet 9040;HP LaserJet 9050	BK	3300	3400		4100
HP 15A (C7115A)	HP LaserJet 1000;HP LaserJet 1005w;HP LaserJet 1200;HP LaserJet 1220;HP LaserJet 3300;HP LaserJet 3310;HP LaserJet 3320;HP LaserJet 3330;HP LaserJet 3380	BK	430			850
HP 15X (C7115X)	HP LaserJet 1000;HP LaserJet 1005w;HP LaserJet 1200;HP LaserJet 1220;HP LaserJet 3300;HP LaserJet 3310;HP LaserJet 3320;HP LaserJet 3330;HP LaserJet 3380	BK	580			900
HP 05A (CE505A)	HP LaserJet P2035;HP LaserJet P2055	BK	530	580		950
HP 642A (CB400A)	HP LaserJet CP4005	BK		1900		2500
HP 64A (CC364A)	HP LaserJet P4014;HP LaserJet P4015;HP LaserJet P4515	BK	1550	1590		1900
HP 64X (CC364X)	HP LaserJet P4015;HP LaserJet P4515	BK	1950	1990		2300
HP 124A (Q6000A)	HP Color LaserJet 1600;HP Color LaserJet 2600;HP COLOR LaserJet 2605	BK		1550		1900
HP 124A (Q6001A)	HP Color LaserJet 1600;HP Color LaserJet 2600;HP COLOR LaserJet 2605	C		1550		1900
HP 124A (Q6002A)	HP Color LaserJet 1600;HP Color LaserJet 2600;HP COLOR LaserJet 2605	Y		1550		1900

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP 124A (Q6003A)	HP Color LaserJet 1600;HP Color LaserJet 2600;HP COLOR LaserJet 2605	M		1550		1900
HP Q3960A	HP Color LaserJet 2550;HP Color LaserJet 2820;HP Color LaserJet 2840	BK		1650		
HP Q3961A	HP Color LaserJet 2550;HP Color LaserJet 2820;HP Color LaserJet 2840	C		1600		
HP Q3962A	HP Color LaserJet 2550;HP Color LaserJet 2820;HP Color LaserJet 2840	Y		1600		
HP Q3963A	HP Color LaserJet 2550;HP Color LaserJet 2820;HP Color LaserJet 2840	M		1600		
HP 123A (Q3971A)	HP Color LaserJet 2550;HP Color LaserJet 2820;HP Color LaserJet 2840	C		1350		1900
HP 123A (Q3973A)	HP Color LaserJet 2550;HP Color LaserJet 2820;HP Color LaserJet 2840	M		1350		1900
HP 308A (Q2670A)	HP COLOR LaserJet 3500;HP COLOR LaserJet 3550;HP COLOR LaserJet 3700	BK		1900		2500
HP 309A (Q2671A)	HP COLOR LaserJet 3500;HP COLOR LaserJet 3550	C		1900		2500
HP 309A (Q2672A)	HP COLOR LaserJet 3500;HP COLOR LaserJet 3550	Y		1900		2500
HP 309A (Q2673A)	HP COLOR LaserJet 3500;HP COLOR LaserJet 3550	M		1900		2500
HP 501A (Q6470A)	HP Color LaserJet 3505;HP Color LaserJet 3600;HP Color LaserJet 3800	BK		1950		2500
HP 502A (Q6471A)	HP Color LaserJet-3600	C		1950		2300
HP 502A (Q6472A)	HP Color LaserJet-3600	Y		1950		2300
HP 502A (Q6473A)	HP Color LaserJet-3600	M		1950		2300
HP 503A (Q7581A)	HP Color LaserJet 3505;HP Color LaserJet 3800	C		2050		2600
HP 503A (Q7582A)	HP Color LaserJet 3505;HP Color LaserJet 3800	Y		2050		2600
HP 503A (Q7583A)	HP Color LaserJet 3505;HP Color LaserJet 3800	M		2050		2600
HP 125A (CB540A)	HP Color LaserJet M1312;HP Color LaserJet CP1215;HP Color LaserJet CP1515;HP Color LaserJet CP1518	BK	1350	1450		1800
HP 125A (CB541A)	HP Color LaserJet M1312;HP Color LaserJet CP1215;HP Color LaserJet CP1515;HP Color LaserJet CP1518	C	1350	1450		1800
HP 125A (CB542A)	HP Color LaserJet M1312;HP Color LaserJet CP1215;HP Color LaserJet CP1515;HP Color LaserJet CP1518	Y	1350	1450		1800
HP 125A (CB543A)	HP Color LaserJet M1312;HP Color LaserJet CP1215;HP Color LaserJet CP1515;HP Color LaserJet CP1518	M	1350	1450		1800
HP 645A (C9730A)	HP Color LaserJet 5500;HP Color LaserJet 5550	BK		3800		4200
HP 645A (C9731A)	HP Color LaserJet 5500;HP Color LaserJet 5550	C		3800		4200
HP 645A (C9732A)	HP Color LaserJet 5500;HP Color LaserJet 5550	Y		3800		4200
HP 645A (C9733A)	HP Color LaserJet 5500;HP Color LaserJet 5550	M		3800		4200
HP 05X (CE505X)	HP LaserJet P2055	BK	830	880		1400
HP 642A (CB401A)	HP Color LaserJet cp4005	C		2400		2900
HP 642A (CB402A)	HP Color LaserJet cp4005	Y		2400		2900
HP 642A (CB403A)	HP Color LaserJet cp4005	M		2400		2900
HP 504A (CE250A)	HP Color LaserJet CM3530;HP Color LaserJet CM3525	BK		2350		2900
HP 504X (CE250X)	HP Color LaserJet CM3530;HP Color LaserJet CM3525	BK		3250		3200
HP 504A (CE251A)	HP Color LaserJet CM3530;HP Color LaserJet CM3525	BK		3150		3500
HP 504A (CE252A)	HP Color LaserJet CM3530;HP Color LaserJet CM3525	Y		3150		3500
HP 504A (CE253A)	HP Color LaserJet CM3530;HP Color LaserJet CM3525	M		3150		3500
HP 304A (CC530A)	HP Color LaserJet CM2320;HP Color LaserJet CM2025	BK		1750		2300
HP 304A (CC531A)	HP Color LaserJet CM2320;HP Color LaserJet CM2025	C		1900		2300
HP 304A (CC532A)	HP Color LaserJet CM2320;HP Color LaserJet CM2025	Y		1900		2300
HP 304A (CC533A)	HP Color LaserJet CM2320;HP Color LaserJet CM2025	M		1900		2300
HP 55A (CE255A)	HP LaserJet Pro 400 500 MFP M525dn;HP LaserJet Enterprise 500 M525f;HP LaserJet P3015d;HP LaserJet P3015dn;HP LaserJet P3015x;HP LaserJet Pro M521dw;HP LaserJet Pro M521dw	BK	780	880		1400

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP 55X (CE255X)	HP LaserJet Pro 400 500 MFP M525dn;HP LaserJet Enterprise 500 M525f;HP LaserJet P3015d;HP LaserJet P3015dn;HP LaserJet P3015x;HP LaserJet Pro M521dw;HP LaserJet Pro M521dw	BK	1190	1290		1850
HP 78A (CE278A)	HP LaserJet Pro M1530;HP LaserJet Pro M1536;HP LaserJet Pro M1566;HP LaserJet Pro M1606	BK	430	480		850
HP 85A (CE285A)	HP LaserJet Pro M1130;HP LaserJet Pro M1132; HP LaserJet Pro M1210ser;HP LaserJet Pro M1212;HP LaserJet Pro M1214;HP LaserJet Pro M1217;HP LaserJet Pro P1102	BK	430	480		850
HP 126A (CE310A)	HP LaserJet Pro Color CP1025;HP LaserJet Pro Color CP1025nw;HP LaserJet Pro 100 Color M175;HP TopShot LaserJet Pro M275	BK		1450		
HP 126A (CE311A)	HP LaserJet Pro Color CP1025;HP LaserJet Pro Color CP1025nw;HP LaserJet Pro 100 Color M175;HP TopShot LaserJet Pro M275	C		1450		
HP 126A (CE312A)	HP LaserJet Pro Color CP1025;HP LaserJet Pro Color CP1025nw;HP LaserJet Pro 100 Color M175;HP TopShot LaserJet Pro M275	Y		1450		
HP 126A (CE313A)	HP LaserJet Pro Color CP1025;HP LaserJet Pro Color CP1025nw;HP LaserJet Pro 100 Color M175;HP TopShot LaserJet Pro M275	M		1450		
HP 128A (CE320A)	HP LaserJet Pro Color CM1415;HP LaserJet Pro Color CP1525	BK		1500		1900
HP 128A (CE321A)	HP LaserJet Pro Color CM1415;HP LaserJet Pro Color CP1525	C		1500		1900
HP 128A (CE322A)	HP LaserJet Pro Color CM1415;HP LaserJet Pro Color CP1525	Y		1500		1900
HP 128A (CE323A)	HP LaserJet Pro Color CM1415;HP LaserJet Pro Color CP1525	M		1500		1900
HP 649X (CE260X)	HP Color LaserJet CP4525	BK		2950		3700
HP 649A (CE261A)	HP Color LaserJet CP4025;HP Color LaserJet CP4525	C		2200		2900
HP 649A (CE262A)	HP Color LaserJet CP4025;HP Color LaserJet CP4525	Y		2200		2900
HP 649A (CE263A)	HP Color LaserJet CP4025;HP Color LaserJet CP4525	M		2200		2900
HP 307A (CE740A)	HP Color LaserJet CP5225	BK		3250		3900
HP 307A (CE741A)	HP Color LaserJet CP5225	C		3250		3900
HP 307A (CE742A)	HP Color LaserJet CP5225	Y		3250		3900
HP 307A (CE743A)	HP Color LaserJet CP5225	M		3250		3900
HP 90A (CE390A)	HP LaserJet Enterprise M4555;HP LaserJet Enterprise M600;HP LaserJet Enterprise M601;HP LaserJet Enterprise M602; HP LaserJet Enterprise M603	BK	1600	1650		2200
HP 90X (CE390X)	HP LaserJet Enterprise M4555;HP LaserJet Enterprise M600;HP LaserJet Enterprise M602; HP LaserJet Enterprise M603	BK	2000	2050		2400
HP 75A (92275A)	HP LaserJet 4Si;HP LaserJet II;HP LaserJet IId;HP LaserJet IIId;HP LaserJet IIlp;HP LaserJet IIIs;HP LaserJet IIp;HP LaserJet IIp Plus	BK	500			1400
HP 91A (92291A)	HP LaserJet 4Si;HP LaserJet 4Si MX;HP LaserJet IIISi	BK	800			1300
HP 98A (92298A)	HP LaserJet 4;HP LaserJet 4+;HP LaserJet 4m;HP LaserJet 4m+;HP LaserJet 4mx;HP LaserJet 5;HP LaserJet 5m;HP LaserJet 5n;HP LaserJet 5se	BK	950			1500
HP 98A (92298A)	HP LaserJet 4;HP LaserJet 4+;HP LaserJet 4m;HP LaserJet 4m+;HP LaserJet 4mx;HP LaserJet 5;HP LaserJet 5m;HP LaserJet 5n;HP LaserJet 5se	BK	650			1000
HP 98X (92298X)	HP LaserJet 4;HP LaserJet 4+;HP LaserJet 4m;HP LaserJet 4m+;HP LaserJet 5;HP LaserJet 5m;HP LaserJet 5n	BK	950			1500
HP 74A (92274A)	HP LaserJet 4L;HP LaserJet 4mL;HP LaserJet 4mP;HP LaserJet 4P	BK	500			900
HP C3900A	HP LaserJet 4mv;HP LaserJet 4V	BK	600			1700
HP 06A (C3906A)	HP LaserJet 3100;HP LaserJet 3150;HP LaserJet 5i;HP LaserJet 6L;HP LaserJet 6L Gold;HP LaserJet 6L Pro	BK	500			900
HP 09A (C3909A)	HP LaserJet 5Si;HP LaserJet 5Si Mopier;HP LaserJet 8000;HP LaserJet Mopier 240	BK	1600			2200
HP 03A (C3903A)	HP LaserJet 5MP;HP LaserJet 5P;HP LaserJet 6MP;HP LaserJet 6P	BK	500			900
HP 82X (C4182X)	HP LaserJet 8100;HP LaserJet 8150;HP Mopier 320	BK	1850			2300
HP 70A (Q7570A)	HP LaserJet M5035;HP LaserJet M5035x;HP LaserJet M5035xs	BK	1300	1350		1980
HP 98X (92298X)	HP LaserJet 4;HP LaserJet 4+;HP LaserJet 4m;HP LaserJet 4m+;HP LaserJet 5;HP LaserJet 5m;HP LaserJet 5n	BK	750			1200
HP 121A (C9700A)	HP LaserJet 1500;HP LaserJet 2500	BK		1650		2200
HP 121A (C9701A)	HP LaserJet 1500;HP LaserJet 2500	C		1650		2200

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP 121A (C9702A)	HP LaserJet 1500;HP LaserJet 2500	Y		1650		2200
HP 121A (C9703A)	HP LaserJet 1500;HP LaserJet 2500	M		1650		2200
HP 123A (Q3972A)	HP Color LaserJet 2550l;HP Color LaserJet 2550Ln;HP Color LaserJet 2550n;HP Color LaserJet 2820;HP Color LaserJet 2840	Y		1350		1900
HP 91A (C4191A)	HP Color LaserJet 4500;HP Color LaserJet 4500dn;HP Color LaserJet 4500dtn;HP Color LaserJet 4500hdn;HP Color LaserJet 4500n;HP Color LaserJet 4550	BK		2950		
HP 92A (C4192A)	HP Color LaserJet 4500;HP Color LaserJet 4500dn;HP Color LaserJet 4500dtn;HP Color LaserJet 4500hdn;HP Color LaserJet 4500n;HP Color LaserJet 4550	C		2950		
HP 93A (C4193A)	HP Color LaserJet 4500;HP Color LaserJet 4500dn;HP Color LaserJet 4500dtn;HP Color LaserJet 4500hdn;HP Color LaserJet 4500n;HP Color LaserJet 4550	Y		2950		
HP 94A (C4194A)	HP Color LaserJet 4500;HP Color LaserJet 4500dn;HP Color LaserJet 4500dtn;HP Color LaserJet 4500hdn;HP Color LaserJet 4500n;HP Color LaserJet 4550	M		2950		
HP 644A (Q6460A)	HP Color LaserJet 4730;HP Color LaserJet CM4730	BK	3750	3850		
HP 644A (Q6461A)	HP Color LaserJet 4730;HP Color LaserJet CM4730	C	3700	3900		
HP 644A (Q6462A)	HP Color LaserJet 4730;HP Color LaserJet CM4730	Y	3700	3900		
HP 644A (Q6463A)	HP Color LaserJet 4730;HP Color LaserJet CM4730	M	3700	3900		
HP 20A (C9720A)	HP Color LaserJet 4600;HP Color LaserJet 4650	BK	3500			4100
HP 21A (C9721A)	HP Color LaserJet 4600;HP Color LaserJet 4650	C	3500			4100
HP 22A (C9722A)	HP Color LaserJet 4600;HP Color LaserJet 4650	Y	3500			4100
HP 23A (C9723A)	HP Color LaserJet 4600;HP Color LaserJet 4650	M	3500			4100
HP C4149A	HP Color LaserJet 8500;HP Color LaserJet-8550	BK		3400		3960
HP C4151A	HP Color LaserJet 8500;HP Color LaserJet-8550	M		3500		4000
HP C4152A	HP Color LaserJet 8500;HP Color LaserJet-8550	Y		3500		4000
HP 50A (Q5950A)	HP Color LaserJet 4700	BK		2400		3000
HP 51A (Q5951A)	HP Color LaserJet 4700	C		2400		3000
HP 52A (Q5952A)	HP Color LaserJet 4700	Y		2400		3000
HP 53A (Q5953A)	HP Color LaserJet 4700	M		2400		3000
HP 401A (CB401A)	HP Color LaserJet CP4005	C		2400		2900
HP 402A (CB402A)	HP Color LaserJet CP4005	Y		2400		2900
HP 403A (CB403A)	HP Color LaserJet CP4005	M		2400		2900
HP 311A (Q2681A)	HP Color LaserJet 3700;HP Color LaserJet 3700d;HP Color LaserJet 3700dn;HP Color LaserJet 3700dtn;HP Color LaserJet 3700n	C		2950		3600
HP 311A (Q2682A)	HP Color LaserJet 3700;HP Color LaserJet 3700d;HP Color LaserJet 3700dn;HP Color LaserJet 3700dtn;HP Color LaserJet 3700n	Y		2950		3600
HP 311A (Q2683A)	HP Color LaserJet 3700;HP Color LaserJet 3700d;HP Color LaserJet 3700dn;HP Color LaserJet 3700dtn;HP Color LaserJet 3700n	M		2950		3600
HP C3102A	HP LaserJet 5;HP LaserJet 5m;HP LaserJet 5n	C				
HP C3103A	HP LaserJet 5;HP LaserJet 5m;HP LaserJet 5n	Y				
HP C3104A	HP LaserJet 5;HP LaserJet 5m;HP LaserJet 5n	M				
HP C3105A	HP LaserJet 5;HP LaserJet 5m;HP LaserJet 5n	BK				
HP Q5920C	HP Color LaserJet 9850mfp	BK				
HP Q5921C	HP Color LaserJet 9850mfp	C				
HP Q5922C	HP Color LaserJet 9850mfp	Y				
HP Q5923C	HP Color LaserJet 9850mfp	M				
HP 60A (Q7560A)	HP LaserJet 2700;HP LaserJet 3000	BK		2000		2600

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP 61A (Q7561A)	HP LaserJet 2700;HP LaserJet 3000	C		2000		2600
HP 62A (Q7562A)	HP LaserJet 2700;HP LaserJet 3000	Y		2000		2600
HP 63A (Q7563A)	HP LaserJet 2700;HP LaserJet 3000	M		2000		2600
HP 822A (C8550A)	HP Color LaserJet 9500;HP Color LaserJet 9500dn;HP Color LaserJet 9500gn;HP Color LaserJet 9500gp;HP Color LaserJet 9500hdn;HP Color LaserJet 9500n	BK				
HP 822A (C8551A)	HP Color LaserJet 9500;HP Color LaserJet 9500dn;HP Color LaserJet 9500gn;HP Color LaserJet 9500gp;HP Color LaserJet 9500hdn;HP Color LaserJet 9500n	C				
HP 822A (C8552A)	HP Color LaserJet 9500;HP Color LaserJet 9500dn;HP Color LaserJet 9500gn;HP Color LaserJet 9500gp;HP Color LaserJet 9500hdn;HP Color LaserJet 9500n	Y				
HP 822A (C8553A)	HP Color LaserJet 9500;HP Color LaserJet 9500dn;HP Color LaserJet 9500gn;HP Color LaserJet 9500gp;HP Color LaserJet 9500hdn;HP Color LaserJet 9500n	M				
HP 823A (CB380A)	HP LaserJet CP6015	BK	3250	3200		
HP 824A (CB381A)	HP LaserJet CM6030;HP LaserJet CM6040;HP LaserJet CM6015	C	3300	3650		
HP 824A (CB382A)	HP LaserJet CM6030;HP LaserJet CM6040;HP LaserJet CM6015	Y	3300	3650		
HP 824A (CB383A)	HP LaserJet CM6030;HP LaserJet CM6040;HP LaserJet CM6015	M	3300	3650		
HP 825A (CB390A)	HP LaserJet CM6030;HP LaserJet CM6040	BK		6050		
HP 647A (CE260A)	HP Color LaserJet Enterprise CM4540;HP Color LaserJet Enterprise CM4540f;HP Color LaserJet Enterprise CM4540fskm;HP Color LaserJet Enterprise CP4025dn;HP Color LaserJet Enterprise CP4025n;HP Color LaserJet Enterprise CP4520;HP Color LaserJet Enterprise CP4525dn;HP Color LaserJet Enterprise CP4525n;HP Color LaserJet Enterprise CP4525xn	BK		2150		3000
HP 646X (CE264X)	HP Color LaserJet Enterprise CM4540;HP Color LaserJet Enterprise CM4540f;HP Color LaserJet Enterprise CM4540fskm	BK		2550		3100
HP 646A (CF031A)	HP Color LaserJet Enterprise CM4540;HP Color LaserJet Enterprise CM4540f;HP Color LaserJet Enterprise CM4540fskm	C		2950		3500
HP 646A (CF032A)	HP Color LaserJet Enterprise CM4540;HP Color LaserJet Enterprise CM4540f;HP Color LaserJet Enterprise CM4540fskm	Y		2950		3500
HP 646A (CF033A)	HP Color LaserJet Enterprise CM4540;HP Color LaserJet Enterprise CM4540f;HP Color LaserJet Enterprise CM4540fskm	M		2950		3500
HP 650A (CE270A)	HP Color LaserJet Enterprise CP5525;HP Color LaserJet Enterprise M750;HP Color LaserJet Enterprise M750dn;HP Color LaserJet Enterprise M750xh	BK		4300		4900
HP 650A (CE271A)	HP Color LaserJet Enterprise CP5525;HP Color LaserJet Enterprise M750;HP Color LaserJet Enterprise M750dn;HP Color LaserJet Enterprise M750xh	C		4300		4900
HP 650A (CE272A)	HP Color LaserJet Enterprise CP5525;HP Color LaserJet Enterprise M750;HP Color LaserJet Enterprise M750dn;HP Color LaserJet Enterprise M750xh	Y		4300		4900
HP 650A (CE273A)	HP Color LaserJet Enterprise CP5525;HP Color LaserJet Enterprise M750;HP Color LaserJet Enterprise M750dn;HP Color LaserJet Enterprise M750xh	M		4300		4900
HP 126A (CE314A)	HP LaserJet Pro Color CP1025;CP1025nw;HP LaserJet Pro 100 Color M175;HP TopShot LaserJet Pro M275	Drum				1600
HP 14A (CF214A)	HP LaserJet Enterprise 700 M712dn;HP LaserJet Enterprise 700 M712xh;HP LaserJet Enterprise 700 M725dn;HP LaserJet Enterprise 700 M725f;HP LaserJet Enterprise 700 M725z	BK	1500	1600		3100
HP 14X (CF214X)	HP LaserJet Enterprise 700 M712dn;HP LaserJet Enterprise 700 M712xh;HP LaserJet Enterprise 700 M725dn;HP LaserJet Enterprise 700 M725f;HP LaserJet Enterprise 700 M725z	BK	1700	1800		2500
HP 83 (CF283A)	HP LaserJet Pro M125rnw;HP LaserJet Pro M125a;HP LaserJet Pro M125r;HP LaserJet Pro M125ra;HP LaserJet Pro M127fw;HP LaserJet Pro M127fn;HP LaserJet Pro M201n;HP LaserJet Pro M201dw;HP LaserJet Pro M202;HP LaserJet Pro M225rdn;HP LaserJet Pro M225dn;HP LaserJet Pro M225d	BK	430	530		850

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP 83X (CF283X)	Hp LaserJet Pro M125rnw;Hp LaserJet Pro M125a;Hp LaserJet Pro M125r;Hp LaserJet Pro M125ra;Hp LaserJet Pro M127fw;Hp LaserJet Pro M127fn;Hp LaserJet Pro M201n;Hp LaserJet Pro M201dw;Hp LaserJet Pro M202;Hp LaserJet Pro M225rdn;Hp LaserJet Pro M225dn;Hp LaserJet Pro M225d	BK	480	580		850
HP 25X (CF325X)	HP LaserJet Enterprise flow M830z;HP LaserJet Enterprise M806dn;HP LaserJet Enterprise M806x+	BK		4400		5000
HP 130A (CF350A)	HP Color LaserJet Pro M176n;HP Color LaserJet Pro M177fw	BK		1450		
HP 130A (CF351A)	HP Color LaserJet Pro M176n;HP Color LaserJet Pro M177fw	C		1450		
HP 130A (CF352A)	HP Color LaserJet Pro M176n;HP Color LaserJet Pro M177fw	Y		1450		
HP 130A (CF353A)	HP Color LaserJet Pro M176n;HP Color LaserJet Pro M177fw	M		1450		
HP 81A (CF281A)	HP LaserJet Enterprise M630h;HP LaserJet Enterprise M604;HP LaserJet Enterprise M605;HP LaserJet Enterprise M606	BK	1150	1300		2100
HP 81X (CF281X)	HP LaserJet Enterprise M630h;HP LaserJet Enterprise M604;HP LaserJet Enterprise M605;HP LaserJet Enterprise M606	BK	1900	2050		2500
HP 654X (CF330X)	HP Color LaserJet Enterprise M651dn;HP Color LaserJet Enterprise M651n;HP Color LaserJet Enterprise M651xh	BK	4200			4900
HP 654A (CF331A)	HP Color LaserJet Enterprise M651dn;HP Color LaserJet Enterprise M651n;HP Color LaserJet Enterprise M651xh	C	4050			4850
HP 654A (CF332A)	HP Color LaserJet Enterprise M651dn;HP Color LaserJet Enterprise M651n;HP Color LaserJet Enterprise M651xh	Y	4050			4850
HP 654A (CF333A)	HP Color LaserJet Enterprise M651dn;HP Color LaserJet Enterprise M651n;HP Color LaserJet Enterprise M651xh	M	4050			4850
HP 25X (CF325X)	HP LaserJet Enterprise flow M830	BK		4400		4900
HP 652A (CF320A)	HP Color LaserJet Enterprise M680dn;HP Color LaserJet Enterprise M680f;HP Color LaserJet Enterprise M680z;HP Color LaserJet Enterprise M651n;HP Color LaserJet Enterprise M651xh;HP Color LaserJet Enterprise M651dn	BK	2600			3360
HP 312A (CF380A)	HP Color LaserJet Pro M476DN;HPColor LaserJet Pro M476DW;HP Color LaserJet Pro M476NW	BK	1550	1600		1900
HP 312X (CF380X)	HP Color LaserJet Pro M476DN;HPColor LaserJet Pro M476DW;HP Color LaserJet Pro M476NW	BK	1700	1750		2200
HP 312A (CF381A)	HP Color LaserJet Pro M476DN;HPColor LaserJet Pro M476DW;HP Color LaserJet Pro M476NW	C	1850	1900		2200
HP 312A (CF382A)	HP Color LaserJet Pro M476DN;HPColor LaserJet Pro M476DW;HP Color LaserJet Pro M476NW	Y	1850	1900		2200
HP 312A (CF383A)	HP Color LaserJet Pro M476DN;HPColor LaserJet Pro M476DW;HP Color LaserJet Pro M476NW	M	1850	1900		2200
HP 305X (CE410X)	HP LaserJet Pro Color M351;HP LaserJet Pro Color M375;HP LaserJet Pro Color M451;HP LaserJet Pro Color M475;HP LaserJet Pro Color M477;HP LaserJet Pro Color M252;HP LaserJet Pro Color M452	BK	1400	2400		3700
HP 305A (CE410A)	HP LaserJet Pro Color M351;HP LaserJet Pro Color M375;HP LaserJet Pro Color M451;HP LaserJet Pro Color M475;HP LaserJet Pro Color M477;HP LaserJet Pro Color M252;HP LaserJet Pro Color M452	BK	700	1700		2200
HP 305A (CE411A)	HP LaserJet Pro Color M351;HP LaserJet Pro Color M375;HP LaserJet Pro Color M451;HP LaserJet Pro Color M475;HP LaserJet Pro Color M477;HP LaserJet Pro Color M252;HP LaserJet Pro Color M452	C	800	1800		2500
HP 305A (CE412A)	HP LaserJet Pro Color M351;HP LaserJet Pro Color M375;HP LaserJet Pro Color M451;HP LaserJet Pro Color M475;HP LaserJet Pro Color M477;HP LaserJet Pro Color M252;HP LaserJet Pro Color M452	Y	800	1800		2500
HP 305A (CE413A)	HP LaserJet Pro Color M351;HP LaserJet Pro Color M375;HP LaserJet Pro Color M451;HP LaserJet Pro Color M475;HP LaserJet Pro Color M477;HP LaserJet Pro Color M252;HP LaserJet Pro Color M452	M	800	1800		2500
HP 93A (CZ192A)	HP LaserJet Pro M435nw	BK	1100	1200		
HP 81A (CF281A)	HP LaserJet Enterprise M630h;HP LaserJet Enterprise M630dn;HP LaserJet Enterprise M630f;HP LaserJet Enterprise M630z	BK	1600	1650		2200
HP 81X (CF281X)	HP LaserJet Enterprise M630h;HP LaserJet Enterprise M630dn;HP LaserJet Enterprise M630f;HP LaserJet Enterprise M630z	BK	2000	2050		2500
HP 826A (CF310A)	HP Color LaserJet Enterprise M855dn;HP Color LaserJet Enterprise M855x+;HP Color LaserJet Enterprise M855xh	BK				
HP 826A (CF311A)	HP Color LaserJet Enterprise M855dn;HP Color LaserJet Enterprise M855x+;HP Color LaserJet Enterprise M855xh	C				
HP 826A (CF312A)	HP Color LaserJet Enterprise M855dn;HP Color LaserJet Enterprise M855x+;HP Color LaserJet Enterprise M855xh	Y				
HP 826A (CF313A)	HP Color LaserJet Enterprise M855dn;HP Color LaserJet Enterprise M855x+;HP Color LaserJet Enterprise M855xh	M				
HP 827A (CF300A)	HP Color LaserJet Enterprise M880z;HP Color LaserJet Enterprise M880z+	BK				
HP 827A (CF301A)	HP Color LaserJet Enterprise M880z;HP Color LaserJet Enterprise M880z+	C				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP 827A (CF302A)	HP Color LaserJet Enterprise M880z;HP Color LaserJet Enterprise M880z+	Y				
HP 827A (CF303A)	HP Color LaserJet Enterprise M880z;HP Color LaserJet Enterprise M880z+	M				
HP CB384A	HP LaserJet CM6030;HP LaserJet CM6040;HP LaserJet CP6015	Drum				3350
HP CB385A	HP LaserJet CM6030;HP LaserJet CM6040;HP LaserJet CP6015	Drum				9000
HP CB386A	HP LaserJet CM6030;HP LaserJet CM6040;HP LaserJet CP6015	Drum				9000
HP CB387A	HP LaserJet CM6030;HP LaserJet CM6040;HP LaserJet CP6015	Drum				9000
HP 26A (CF226A)	HP LaserJet Pro M402;HP LaserJet Pro M426	BK	500	1950		900
HP 26X (CF226X)	HP LaserJet Pro M402;HP LaserJet Pro M426	BK	800	2250		900
HP 28A (CF228A)	HP LaserJet Pro MFP M427;HP LaserJet Pro MFP M403;HP LaserJet Pro MFP M40	BK	550	1950		900
HP 87A (CF287A)	HP LaserJet M506x;HP LaserJet M506n;HP LaserJet M506dn;HP LaserJet M527c;HP LaserJet M527f ;HP LaserJet M527dn;HP LaserJet M501n	BK	1600	3600		2300
HP 131A (CF210A)	HP LaserJet Pro M276N;HP LaserJet Pro M251	BK	1450	1500		1900
HP 131X (CF210X)	HP LaserJet Pro M276N;HP LaserJet Pro M251	BK	1500	1550		1900
HP 131A (CF211A)	HP LaserJet Pro M276N;HP LaserJet Pro M251	C	1500	1550		1900
HP 131A (CF212A)	HP LaserJet Pro M276N;HP LaserJet Pro M251	Y	1500	1550		1900
HP 131A (CF213A)	HP LaserJet Pro M276N;HP LaserJet Pro M251	M	1500	1550		1900
HP 80A (CF280A)	HP LaserJet Pro 400 M401;HP LaserJet Pro 400 M425dw;HP LaserJet Pro 400 M425dn	BK	530	580		900
HP 80X (CF280X)	HP LaserJet Pro 400 M401;HP LaserJet Pro 400 M425dw;HP LaserJet Pro 400 M425dn	BK	780	850		1100
HP 507A (CE400A)	HP LaserJet Enterprise 500 M551;HP LaserJet Enterprise 500 M575dn;HP LaserJet Enterprise 500 M575f;HP LaserJet Enterprise 500 M575c;HP LaserJet Enterprise 500 Pro 500 M570dw;HP LaserJet Enterprise M570dn	BK		2150		2900
HP 507X (CE400X)	HP LaserJet Enterprise 500 M551;HP LaserJet Enterprise 500 M575dn;HP LaserJet Enterprise 500 M575f;HP LaserJet Enterprise 500 M575c;HP LaserJet Enterprise 500 Pro 500 M570dw;HP LaserJet Enterprise M570dn	BK		2950		3500
HP 507A (CE401A)	HP LaserJet Enterprise 500 M551;HP LaserJet Enterprise 500 M575dn;HP LaserJet Enterprise 500 M575f;HP LaserJet Enterprise 500 M575c;HP LaserJet Enterprise 500 Pro 500 M570dw;HP LaserJet Enterprise M570dn	C		2200		2900
HP 507A (CE402A)	HP LaserJet Enterprise 500 M551;HP LaserJet Enterprise 500 M575dn;HP LaserJet Enterprise 500 M575f;HP LaserJet Enterprise 500 M575c;HP LaserJet Enterprise 500 Pro 500 M570dw;HP LaserJet Enterprise M570dn	Y		2200		2900
HP 507A (CE403A)	HP LaserJet Enterprise 500 M551;HP LaserJet Enterprise 500 M575dn;HP LaserJet Enterprise 500 M575f;HP LaserJet Enterprise 500 M575c;HP LaserJet Enterprise 500 Pro 500 M570dw;HP LaserJet Enterprise M570dn	M		2200		2900
HP 651A (CE340A)	HP LaserJet Enterprise 700 M775dn	BK		4350		4900
HP 651A (CE341A)	HP LaserJet Enterprise 700 M775dn	C		4400		4900
HP 651A (CE342A)	HP LaserJet Enterprise 700 M775dn	Y		4400		4900
HP 651A (CE343A)	HP LaserJet Enterprise 700 M775dn	M		4400		4900
HP 508A (CF360A)	HP Color LaserJet;HP Color LaserJet M552;HP Color LaserJet M553;HP Color LaserJet MFP M577	BK		2400		
HP 508A (CF361A)	HP Color LaserJet;HP Color LaserJet M552;HP Color LaserJet M553;HP Color LaserJet MFP M577	C		2400		
HP 508A (CF362A)	HP Color LaserJet;HP Color LaserJet M552;HP Color LaserJet M553;HP Color LaserJet MFP M577	Y		2400		
HP 508A (CF363A)	HP Color LaserJet;HP Color LaserJet M552;HP Color LaserJet M553;HP Color LaserJet MFP M577	M		2400		
HP 508X (CF360X)	HP Color LaserJet;HP Color LaserJet M552;HP Color LaserJet M553;HP Color LaserJet MFP M577	BK		3100		
HP 508X (CF361X)	HP Color LaserJet;HP Color LaserJet M552;HP Color LaserJet M553;HP Color LaserJet MFP M577	C		3100		
HP 508X (CF362X)	HP Color LaserJet;HP Color LaserJet M552;HP Color LaserJet M553;HP Color LaserJet MFP M577	Y		3100		
HP 508X (CF363X)	HP Color LaserJet;HP Color LaserJet M552;HP Color LaserJet M553;HP Color LaserJet MFP M577	M		3100		
HP 201A (CF400A)	HP Color LaserJet Pro M252;HP Color LaserJet Pro M274;HP Color LaserJet Pro M277	BK	1350	2350		2900

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №10 (C4844AE)	HP Business InkJet 1000;HP Business InkJet 1100;HP Business InkJet 1200;HP Business InkJet 2000;HP Business InkJet 2200;HP Business InkJet 2230;HP Business InkJet 2250;HP Business InkJet 2280;HP Business InkJet 2300;HP Business InkJet 2500;HP Business InkJet 2600;HP Business InkJet 2800;HP Business InkJet 3000;HP DesignJet 100;HP DesignJet 110 ;HP DesignJet 500;HP DesignJet 70;HP DesignJet 800;HP DesignJet 815;HP DesignJet 820;ColorPro CAD;ColorPro GA;HP OfficeJet 9110;HP OfficeJet 9120;HP OfficeJet 9130 ;HP OfficeJet Pro K850	БК				
HP №10 (C4841AE)	HP Business InkJet 2000;HP Business InkJet 2500;HP DesignJet ColorPro CAD;HP ColorPro GA	С				
HP №10 (C4843AE)	HP Business InkJet 2000;HP Business InkJet 2500;HP DesignJet ColorPro CAD;HP ColorPro GA	М				
HP №10 (C4842AE)	HP Business InkJet 2000;HP Business InkJet 2500;HP DesignJet ColorPro CAD;HP ColorPro GA	Y				
HP №11 (C4836AE)	HP Business InkJet 1000;HP Business InkJet 1100;HP Business InkJet 1200;HP Business InkJet 2200;HP Business InkJet 2230;HP Business InkJet 2250;HP Business InkJet 2280;HP Business InkJet 2300;HP Business InkJet 2600;HP Business InkJet 2800;HP Color InkJet CP1700;HP DesignJet 10;HP DesignJet 100;HP DesignJet 110;HP DesignJet 120;HP DesignJet 20;HP DesignJet 50;HP DesignJet 500;HP DesignJet 70;HP DesignJet 800;HP DesignJet 815;HP DesignJet 820;HP OfficeJet 9110;HP OfficeJet 9120;HP OfficeJet 9130;HP OfficeJet Pro K850	С				
HP №11 (C4837AE)	HP Business InkJet 1000;HP Business InkJet 1100;HP Business InkJet 1200;HP Business InkJet 2200;HP Business InkJet 2230;HP Business InkJet 2250;HP Business InkJet 2280;HP Business InkJet 2300;HP Business InkJet 2600;HP Business InkJet 2800;HP Color InkJet CP1700;HP DesignJet 10;HP DesignJet 100;HP DesignJet 110;HP DesignJet 120;HP DesignJet 20;HP DesignJet 50;HP DesignJet 500;HP DesignJet 70;HP DesignJet 800;HP DesignJet 815;HP DesignJet 820;HP OfficeJet 9110;HP OfficeJet 9120;HP OfficeJet 9130;HP OfficeJet Pro K850	М				
HP №11 (C4838AE)	HP Business InkJet 1000;HP Business InkJet 1100;HP Business InkJet 1200;HP Business InkJet 2200;HP Business InkJet 2230;HP Business InkJet 2250;HP Business InkJet 2280;HP Business InkJet 2300;HP Business InkJet 2600;HP Business InkJet 2800;HP Color InkJet CP1700;HP DesignJet 10;HP DesignJet 100;HP DesignJet 110;HP DesignJet 120;HP DesignJet 20;HP DesignJet 50;HP DesignJet 500;HP DesignJet 70;HP DesignJet 800;HP DesignJet 815;HP DesignJet 820;HP OfficeJet 9110;HP OfficeJet 9120;HP OfficeJet 9130;HP OfficeJet Pro K850	Y				
HP №15 (C6615NE)	HP DeskJet 3810;HP DeskJet 3816;HP DeskJet 3820;HP DeskJet 3822;HP DeskJet 810;HP DeskJet 812;HP DeskJet 816;HP DeskJet 825;HP DeskJet 840;HP DeskJet 842;HP DeskJet 843;HP DeskJet 845;HP DeskJet 916;HP DeskJet 920;HP DeskJet 940;HP Digital Copier 310;HP FAX 1230;HP OfficeJet 5105;HP OfficeJet 5110;HP OfficeJet V30;HP OfficeJet V40;HP OfficeJet V45;HP PSC 500;HP PSC 750;HP PSC 950	БК	250			
HP №15 (C6615DE)	HP DeskJet 3810;HP DeskJet 3816;HP DeskJet 3820;HP DeskJet 3822;HP DeskJet 810;HP DeskJet 812;HP DeskJet 816;HP DeskJet 825;HP DeskJet 840;HP DeskJet 842;HP DeskJet 843;HP DeskJet 845;HP DeskJet 916;HP DeskJet 920;HP DeskJet 940;HP Digital Copier 310;HP FAX 1230;HP OfficeJet 5105;HP OfficeJet 5110;HP OfficeJet V30;HP OfficeJet V40;HP OfficeJet V45;HP PSC 500;HP PSC 750;HP PSC 950	БК	250			
HP №20 (C6614NE)	HP DeskJet 610;HP DeskJet 615;HP DeskJet 640;HP DeskJet 656;HP FAX 1020;HP FAX 925	БК	250			
HP №21 (C9351AE)	HP DeskJet 3910;HP DeskJet 3918;HP DeskJet 3920;HP DeskJet 3930;HP DeskJet 3938;HP DeskJet 3940;HP DeskJet D1311;HP DeskJet D1320;HP DeskJet D1330ser;HP DeskJet D1341;HP DeskJet D1360ser;HP DeskJet D1400ser;HP DeskJet D1415;HP DeskJet D1420;HP DeskJet D1430;HP DeskJet D1455;HP DeskJet D1460;HP DeskJet D1468;HP DeskJet D1470;HP DeskJet D1500ser;HP DeskJet D1520;HP DeskJet D1530;HP DeskJet D1558;HP DeskJet D1560;HP DeskJet D1568;HP DeskJet D2330;HP DeskJet D2360;HP DeskJet D2400ser;HP DeskJet D2430;HP DeskJet D2445;HP DeskJet D2460;HP DeskJet F2100ser;HP DeskJet F2110;HP DeskJet F2120;HP DeskJet F2128;HP DeskJet F2140;HP DeskJet F2149;HP DeskJet F2179;HP DeskJet F2180;HP DeskJet F2185;HP DeskJet F2187;HP DeskJet F2188;HP DeskJet F2280;HP DeskJet F300ser;HP DeskJet F310;HP DeskJet F325;HP DeskJet F335;HP DeskJet F340;HP DeskJet F350;HP DeskJet F370;HP DeskJet F378;HP DeskJet F380;HP DeskJet F385;HP DeskJet F388;HP DeskJet F390;HP DeskJet F394;HP DeskJet F4100ser;HP DeskJet F4135;HP DeskJet F4140;HP DeskJet F4150;HP DeskJet F4172;HP DeskJet F4175;HP DeskJet F4180;HP DeskJet F4185;HP DeskJet F4188;HP DeskJet F4190;HP DeskJet F4194;HP Fax 3180;HP Fax 4300ser;HP OfficeJet 4311;HP OfficeJet 4312;HP OfficeJet 4314;HP OfficeJet 4315;HP OfficeJet 4317;HP OfficeJet 4319;HP OfficeJet 4352;HP OfficeJet 4353;HP OfficeJet 4355;HP OfficeJet 4357;HP OfficeJet 4359;HP OfficeJet J3608;HP OfficeJet J3640;HP OfficeJet J3650;HP OfficeJet J3680;HP OfficeJet J5520;HP PSC 1400ser;HP PSC 1401;HP PSC 1402;HP PSC 1403;HP PSC 1406;HP PSC 1408;HP PSC 1410;HP PSC 1415;HP PSC 1417	БК	200			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №21XL (C9351CE)	HP DeskJet 3910;HP DeskJet 3918;HP DeskJet 3920;HP DeskJet 3930;HP DeskJet 3938;HP DeskJet 3940;HP DeskJet D1311;HP DeskJet D1320;HP DeskJet D1330ser;HP DeskJet D1341;HP DeskJet D1360ser;HP DeskJet D1400ser;HP DeskJet D1415;HP DeskJet D1420;HP DeskJet D1430;HP DeskJet D1455;HP DeskJet D1460;HP DeskJet D1468;HP DeskJet D1470;HP DeskJet D1500ser;HP DeskJet D1520;HP DeskJet D1530;HP DeskJet D1558;HP DeskJet D1560;HP DeskJet D1568;HP DeskJet D2330;HP DeskJet D2360;HP DeskJet D2400ser;HP HP DeskJet D2430;HP DeskJet D2445;HP DeskJet D2460;HP DeskJet F2100ser;HP DeskJet F2110;HP DeskJet F2120;HP DeskJet F2128;HP DeskJet F2140;HP DeskJet F2149;HP DeskJet F2179;HP DeskJet F2180;HP DeskJet F2185;HP DeskJet F2187;HP DeskJet F2188;HP DeskJet F2280;HP DeskJet F300ser;HP DeskJet F310;HP DeskJet F325;HP DeskJet F335;HP DeskJet F340;HP DeskJet F350;HP DeskJet F370;HP DeskJet F378;HP DeskJet F380;HP DeskJet F385;HP DeskJet F388;HP DeskJet F390;HP DeskJet F394;HP DeskJet F4100ser;HP DeskJet F4135;HP DeskJet F4140;HP DeskJet F4150;HP DeskJet F4172;HP DeskJet F4175;HP DeskJet F4180;HP DeskJet F4185;HP DeskJet F4188;HP DeskJet F4190;HP DeskJet F4194;HP Fax 3180;HP Fax 4300ser;HP OfficeJet 4311;HP OfficeJet 4312;HP OfficeJet 4314;HP OfficeJet 4315;HP OfficeJet 4317;HP OfficeJet 4319;HP OfficeJet 4352;HP OfficeJet 4353;HP OfficeJet 4355;HP OfficeJet 4357;HP OfficeJet 4359;HP OfficeJet J3608;HP OfficeJet J3640;HP OfficeJet J3650;HP OfficeJet J3680;HP OfficeJet J5520;HP PSC 1400ser;HP PSC 1401;HP PSC 1402;HP PSC 1403;HP PSC 1406;HP PSC 1408;HP PSC 1410;HP PSC 1415;HP PSC 1417	BK	250			
HP №22 (C9352AE)	HP DeskJet 3910;HP DeskJet 3918;HP DeskJet 3920;HP DeskJet 3930;HP DeskJet 3938;HP DeskJet 3940;HP DeskJet D1311;HP DeskJet D1320;HP DeskJet D1330ser;HP DeskJet D1341;HP DeskJet D1360ser;HP DeskJet D1400ser;HP DeskJet D1415;HP DeskJet D1420;HP DeskJet D1430;HP DeskJet D1455;HP DeskJet D1460;HP DeskJet D1468;HP DeskJet D1470;HP DeskJet D1500ser;HP DeskJet D1520;HP DeskJet D1530;HP DeskJet D1558;HP DeskJet D1560;HP DeskJet D1568;HP DeskJet D2330;HP DeskJet D2360;HP DeskJet D2400ser;HP HP DeskJet D2430;HP DeskJet D2445;HP DeskJet D2460;HP DeskJet F2100ser;HP DeskJet F2110;HP DeskJet F2120;HP DeskJet F2128;HP DeskJet F2140;HP DeskJet F2149;HP DeskJet F2179;HP DeskJet F2180;HP DeskJet F2185;HP DeskJet F2187;HP DeskJet F2188;HP DeskJet F2280;HP DeskJet F300ser;HP DeskJet F310;HP DeskJet F325;HP DeskJet F335;HP DeskJet F340;HP DeskJet F350;HP DeskJet F370;HP DeskJet F378;HP DeskJet F380;HP DeskJet F385;HP DeskJet F388;HP DeskJet F390;HP DeskJet F394;HP DeskJet F4100ser;HP DeskJet F4135;HP DeskJet F4140;HP DeskJet F4150;HP DeskJet F4172;HP DeskJet F4175;HP DeskJet F4180;HP DeskJet F4185;HP DeskJet F4188;HP DeskJet F4190;HP DeskJet F4194;HP Fax 3180;HP Fax 4300ser;HP OfficeJet 4311;HP OfficeJet 4312;HP OfficeJet 4314;HP OfficeJet 4315;HP OfficeJet 4317;HP OfficeJet 4319;HP OfficeJet 4352;HP OfficeJet 4353;HP OfficeJet 4355;HP OfficeJet 4357;HP OfficeJet 4359;HP OfficeJet J3608;HP OfficeJet J3640;HP OfficeJet J3650;HP OfficeJet J3680;HP OfficeJet J5520;HP PSC 1400ser;HP PSC 1401;HP PSC 1402;HP PSC 1403;HP PSC 1406;HP PSC 1408;HP PSC 1410;HP PSC 1415;HP PSC 1417	Color	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №22XL (C9352CE)	HP DeskJet 3910;HP DeskJet 3918;HP DeskJet 3920;HP DeskJet 3930;HP DeskJet 3938;HP DeskJet 3940;HP DeskJet D1311;HP DeskJet D1320;HP DeskJet D1330ser;HP DeskJet D1341;HP DeskJet D1360ser;HP DeskJet D1400ser;HP DeskJet D1415;HP DeskJet D1420;HP DeskJet D1430;HP DeskJet D1455;HP DeskJet D1460;HP DeskJet D1468;HP DeskJet D1470;HP DeskJet D1500ser;HP DeskJet D1520;HP DeskJet D1530;HP DeskJet D1558;HP DeskJet D1560;HP DeskJet D1568;HP DeskJet D2330;HP DeskJet D2360;HP DeskJet D2400ser;HP HP DeskJet D2430;HP DeskJet D2445;HP DeskJet D2460;HP DeskJet F2100ser;HP DeskJet F2110;HP DeskJet F2120;HP DeskJet F2128;HP DeskJet F2140;HP DeskJet F2149;HP DeskJet F2179;HP DeskJet F2180;HP DeskJet F2185;HP DeskJet F2187;HP DeskJet F2188;HP DeskJet F2280;HP DeskJet F300ser;HP DeskJet F310;HP DeskJet F325;HP DeskJet F335;HP DeskJet F340;HP DeskJet F350;HP DeskJet F370;HP DeskJet F378;HP DeskJet F380;HP DeskJet F385;HP DeskJet F388;HP DeskJet F390;HP DeskJet F394;HP DeskJet F4100ser;HP DeskJet F4135;HP DeskJet F4140;HP DeskJet F4150;HP DeskJet F4172;HP DeskJet F4175;HP DeskJet F4180;HP DeskJet F4185;HP DeskJet F4188;HP DeskJet F4190;HP DeskJet F4194;HP Fax 3180;HP Fax 4300ser;HP OfficeJet 4311;HP OfficeJet 4312;HP OfficeJet 4314;HP OfficeJet 4315;HP OfficeJet 4317;HP OfficeJet 4319;HP OfficeJet 4352;HP OfficeJet 4353;HP OfficeJet 4355;HP OfficeJet 4357;HP OfficeJet 4359;HP OfficeJet J3608;HP OfficeJet J3640;HP OfficeJet J3650;HP OfficeJet J3680;HP OfficeJet J5520;HP PSC 1400ser;HP PSC 1401;HP PSC 1402;HP PSC 1403;HP PSC 1406;HP PSC 1408;HP PSC 1410;HP PSC 1415;HP PSC 1417	Color	250			
HP №23 (C1823GE)	HP Color Copier 140;HP Color Copier 145;HP Color Copier 150;HP Color Copier 155;HP Color Copier 160;HP Color Copier 170;HP Color Copier 260;HP Color Copier 270;HP DeskJet 1120;HP DeskJet 1125;HP DeskJet 710;HP DeskJet 712;HP DeskJet 720;HP DeskJet 722;HP DeskJet 810;HP DeskJet 812;HP DeskJet 815;HP DeskJet 830;HP DeskJet 832;HP DeskJet 880;HP DeskJet 882;HP DeskJet 890;HP DeskJet 895;HP OfficeJet R45;HP OfficeJet R60;HP OfficeJet R65;HP OfficeJet R80;HP OfficeJet T45;HP OfficeJet T65;HP OfficeJet Pro 1170;HP OfficeJet Pro 1175;HP PSC 500	Color	250			
HP №23 (C1823DE)	HP Color Copier 140;HP Color Copier 145;HP Color Copier 150;HP Color Copier 155;HP Color Copier 160;HP Color Copier 170;HP Color Copier 260;HP Color Copier 270;HP DeskJet 1120;HP DeskJet 1125;HP DeskJet 710;HP DeskJet 712;HP DeskJet 720;HP DeskJet 722;HP DeskJet 810;HP DeskJet 812;HP DeskJet 815;HP DeskJet 830;HP DeskJet 832;HP DeskJet 880;HP DeskJet 882;HP DeskJet 890;HP DeskJet 895;HP OfficeJet R45;HP OfficeJet R60;HP OfficeJet R65;HP OfficeJet R80;HP OfficeJet T45;HP OfficeJet T65;HP OfficeJet Pro 1170;HP OfficeJet Pro 1175;HP PSC 500	Color	250			
HP №25 (51625AE)	HP DeskJet 310;HP DeskJet 320;HP DeskJet 340;HP DeskJet 400;HP DeskJet 420;HP DeskJet 500;HP DeskJet 540;HP DeskJet 550;HP DeskJet 560;HP DeskWriter 310;HP DeskWriter 320;HP DeskWriter 540;HP DeskWriter 550;HP DeskWriter 560	Color	250			
HP №26 (51626GE)	HP DeskJet 400;HP DeskJet 420;HP DeskJet 500;HP DeskJet 510;HP DeskJet 520;HP DeskJet 540;HP DeskJet 550;HP DeskJet 560;HP DeskJet DJ;HP DeskJet DJ Plus;HP DeskWriter 520;HP DeskWriter 540;HP DeskWriter 550;HP DeskWriter 560;DeskWriter;DeskWriter C;HP FAX 300;HP FAX 900;HP OfficeJet 350;HP OfficeJet LX	BK	250			
HP №26 (51626AE)	HP DeskJet 400;HP DeskJet 420;HP DeskJet 500;HP DeskJet 510;HP DeskJet 520;HP DeskJet 540;HP DeskJet 550;HP DeskJet 560;HP DeskJet DJ;HP DeskJet DJ Plus;HP DeskWriter 520;HP DeskWriter 540;HP DeskWriter 550;HP DeskWriter 560;DeskWriter;DeskWriter C;HP FAX 300;HP FAX 900;HP OfficeJet 350;HP OfficeJet LX	BK	300			
HP №27 (C8727AE)	HP DeskJet 3320;HP DeskJet 3325;HP DeskJet 3420;HP DeskJet 3425;HP DeskJet 3520;HP DeskJet 3535;HP DeskJet 3550;HP DeskJet 3620;HP DeskJet 3645;HP DeskJet 3647;HP DeskJet 3650;HP DeskJet 3653;HP DeskJet 3745;HP DeskJet 3840ser;HP DeskJet 3843;HP DeskJet 3845;HP DeskJet 3847;HP DeskJet 3848;HP DeskJet 5650;HP DeskJet 5652;HP DeskJet 5655;HP DeskJet 5850;HP OfficeJet 4212;HP OfficeJet 4215;HP OfficeJet 4219;HP OfficeJet 4252;HP OfficeJet 4255;HP OfficeJet 4315;HP OfficeJet 4355;HP OfficeJet 5605;HP OfficeJet 5610;HP OfficeJet 5615;HP OfficeJet 6110;HP OfficeJet J5520;HP PSC 1210;HP PSC 1213;HP PSC 1215;HP PSC 1217;HP PSC 1219;HP PSC 1311;HP PSC 1312;HP PSC 1315;HP PSC 1317	BK	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №28 (C8728AE)	HP DeskJet 3320;HP DeskJet 3325;HP DeskJet 3420;HP DeskJet 3425;HP DeskJet 3520;HP DeskJet 3535;HP DeskJet 3550;HP DeskJet 3620;HP DeskJet 3645;HP DeskJet 3647;HP DeskJet 3650;HP DeskJet 3653;HP DeskJet 3745;HP DeskJet 3840ser;HP DeskJet 3843;HP DeskJet 3845;HP DeskJet 3847;HP DeskJet 3848;HP DeskJet 5650;HP DeskJet 5652;HP DeskJet 5655;HP DeskJet 5850;HP OfficeJet 4212;HP OfficeJet 4215;HP OfficeJet 4219;HP OfficeJet 4252;HP OfficeJet 4255;HP OfficeJet 4315;HP OfficeJet 4355;HP OfficeJet 5605;HP OfficeJet 5610;HP OfficeJet 5615;HP OfficeJet 6110;HP OfficeJet J5520;HP PSC 1210;HP PSC 1213;HP PSC 1215;HP PSC 1217;HP PSC 1219;HP PSC 1311;HP PSC 1312;HP PSC 1315;HP PSC 1317	Color	250			
HP №29 (51629GE)	HP DeskJet 600;HP DeskJet 660;HP DeskJet 670;HP DeskJet 690;HP DeskJet 695;HP DeskWriter 600;HP DeskWriter 660;HP DeskWriter 670;HP OfficeJet 500;HP OfficeJet 590;HP OfficeJet 625;HP OfficeJet 635;HP OfficeJet 700;HP OfficeJet 710;HP OfficeJet 725	BK	250			
HP №29 (51629AE)	HP DeskJet 600;HP DeskJet 660;HP DeskJet 670;HP DeskJet 690;HP DeskJet 695;HP DeskWriter 600;HP DeskWriter 660;HP DeskWriter 670;HP OfficeJet 500;HP OfficeJet 590;HP OfficeJet 625;HP OfficeJet 635;HP OfficeJet 700;HP OfficeJet 710;HP OfficeJet 725	BK	300			
HP №33 (51633ME)	HP DeskJet 310;HP DeskJet 320;HP DeskJet 340;HP Portable;HP DeskWriter 310;HP DeskWriter 320	BK	250			
HP №45 (51645GE)	HP Color Copier 110;HP Color Copier 120;HP Color Copier 140;HP Color Copier 145;HP Color Copier 150;HP Color Copier 155;HP Color Copier 160;HP Color Copier 170;HP Color Copier 180;HP Color Copier 190;HP Color Copier 210;HP Color Copier 260;HP Color Copier 270;HP Color Copier 280;HP Color Copier 290;HP DesignJet 700;HP DesignJet 750;HP DesignJet 755;HP DeskJet 1100;HP DeskJet 1120;HP DeskJet 1125;HP DeskJet 1180;HP DeskJet 1220;HP DeskJet 1280;HP DeskJet 1600;HP DeskJet 6122;HP DeskJet 6127;HP DeskJet 710;HP DeskJet 712;HP DeskJet 720;HP DeskJet 722;HP DeskJet 815;HP DeskJet 820;HP DeskJet 830;HP DeskJet 832;HP DeskJet 850;HP DeskJet 855;HP DeskJet 870;HP DeskJet 880;HP DeskJet 882;HP DeskJet 890;HP DeskJet 895;HP DeskJet 930;HP DeskJet 9300;HP DeskJet 932;HP DeskJet 935;HP DeskJet 950;HP DeskJet 952;HP DeskJet 955;HP DeskJet 959;HP DeskJet 960;HP DeskJet 970;HP DeskJet 980;HP DeskJet 990;HP DeskJet 995;HP FAX 1220;HP OfficeJet G55;HP OfficeJet G85;HP OfficeJet G95;HP OfficeJet K60;HP OfficeJet K80;HP OfficeJet R45;HP OfficeJet R60;HP OfficeJet R65;HP OfficeJet R80;HP OfficeJet T45;HP OfficeJet T65;HP OfficeJet Pro 1150;HP OfficeJet Pro 1170;HP OfficeJet Pro 1175;HP PhotoSmart 1000;HP PhotoSmart 1100;HP PhotoSmart 1115;HP PhotoSmart 1215;HP PhotoSmart 1218;HP PhotoSmart 1315	BK	250			
HP №45 (51645AE)	HP Color Copier 110;HP Color Copier 120;HP Color Copier 140;HP Color Copier 145;HP Color Copier 150;HP Color Copier 155;HP Color Copier 160;HP Color Copier 170;HP Color Copier 180;HP Color Copier 190;HP Color Copier 210;HP Color Copier 260;HP Color Copier 270;HP Color Copier 280;HP Color Copier 290;HP DesignJet 700;HP DesignJet 750;HP DesignJet 755;HP DeskJet 1100;HP DeskJet 1120;HP DeskJet 1125;HP DeskJet 1180;HP DeskJet 1220;HP DeskJet 1280;HP DeskJet 1600;HP DeskJet 6122;HP DeskJet 6127;HP DeskJet 710;HP DeskJet 712;HP DeskJet 720;HP DeskJet 722;HP DeskJet 815;HP DeskJet 820;HP DeskJet 830;HP DeskJet 832;HP DeskJet 850;HP DeskJet 855;HP DeskJet 870;HP DeskJet 880;HP DeskJet 882;HP DeskJet 890;HP DeskJet 895;HP DeskJet 930;HP DeskJet 9300;HP DeskJet 932;HP DeskJet 935;HP DeskJet 950;HP DeskJet 952;HP DeskJet 955;HP DeskJet 959;HP DeskJet 960;HP DeskJet 970;HP DeskJet 980;HP DeskJet 990;HP DeskJet 995;HP FAX 1220;HP OfficeJet G55;HP OfficeJet G85;HP OfficeJet G95;HP OfficeJet K60;HP OfficeJet K80;HP OfficeJet R45;HP OfficeJet R60;HP OfficeJet R65;HP OfficeJet R80;HP OfficeJet T45;HP OfficeJet T65;HP OfficeJet Pro 1150;HP OfficeJet Pro 1170;HP OfficeJet Pro 1175;HP PhotoSmart 1000;HP PhotoSmart 1100;HP PhotoSmart 1115;HP PhotoSmart 1215;HP PhotoSmart 1218;HP PhotoSmart 1315	BK	300			
HP №49 (51649NE)	HP DeskJet 350;HP DeskJet 600;HP DeskJet 610;HP DeskJet 615;HP DeskJet 640;HP DeskJet 656;HP DeskJet 660;HP DeskJet 670;HP DeskJet 690;HP DeskJet 695;HP DeskWriter 600;HP DeskWriter 660;HP DeskWriter 670;HP OfficeJet 500;HP OfficeJet 590;HP OfficeJet 625;HP OfficeJet 635;HP OfficeJet 700;HP OfficeJet 710;HP OfficeJet 725	Color	250			
HP №49 (51649AE)	HP DeskJet 350;HP DeskJet 600;HP DeskJet 610;HP DeskJet 615;HP DeskJet 640;HP DeskJet 656;HP DeskJet 660;HP DeskJet 670;HP DeskJet 690;HP DeskJet 695;HP DeskWriter 600;HP DeskWriter 660;HP DeskWriter 670;HP OfficeJet 500;HP OfficeJet 590;HP OfficeJet 625;HP OfficeJet 635;HP OfficeJet 700;HP OfficeJet 710;HP OfficeJet 725	Color	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №58 (C6658AE)	HP Deskjet 3600ser;HP Deskjet 3620;HP Deskjet 3645;HP Deskjet 3647;HP Deskjet 3650;HP Deskjet 3653;HP Deskjet 3840ser;HP Deskjet 3843;HP Deskjet 3845;HP Deskjet 3847;HP Deskjet 3848;HP Deskjet 450;HP Deskjet 5100ser;HP Deskjet 5145;HP Deskjet 5150;HP Deskjet 5151;HP Deskjet 5160;HP Deskjet 5550;HP Deskjet 5552;HP Deskjet 5650;HP Deskjet 5652;HP Deskjet 5655;HP Deskjet HP Deskjet 5850;HP Deskjet 9650;HP Deskjet 9670;HP Deskjet 9680;HP Deskjet D2330;HP Deskjet D2360;HP Deskjet D2400ser;HP Deskjet D2430;HP Deskjet D2445;HP Deskjet D2460;HP Deskjet F2100ser;HP Deskjet F2110;HP Deskjet F2120;HP Deskjet F2128;HP Deskjet F2140;HP Deskjet F2149;HP Deskjet F2179;HP Deskjet F2180;HP Deskjet F2185;HP Deskjet F2187;HP Deskjet F2188;HP Deskjet F300ser;HP Deskjet F310;HP Deskjet F325;HP Deskjet F335;HP Deskjet F340;HP Deskjet F350;HP Deskjet F370;HP Deskjet F378;HP Deskjet F380;HP Deskjet F385;HP Deskjet F388;HP Deskjet F390;HP Deskjet F394;HP Deskjet F4100ser;HP Deskjet F4135;HP Deskjet F4140;HP Deskjet F4150;HP Deskjet F4172;HP Deskjet F4175;HP Deskjet F4180;HP Deskjet F4185;HP Deskjet F4188;HP Deskjet F4190;HP Deskjet F4194;HP Digital Copier 410;HP Officejet 4212;HP Officejet 4215;HP Officejet 4219;HP Officejet 4252;HP Officejet 4255;HP Officejet 5605;HP Officejet 5610;HP Officejet 5615;HP Officejet 6110;HP PhotoSmart 7150;HP PhotoSmart 7260;HP PhotoSmart 7345;HP PhotoSmart 7350;HP PhotoSmart 7450;HP PhotoSmart 7459;HP PhotoSmart 7550;HP PhotoSmart 7655;HP PhotoSmart 7660;HP PhotoSmart 7755;HP PhotoSmart 7760;HP PhotoSmart 7762;HP PhotoSmart 7960;HP PSC 1310;HP PSC 1311;HP PSC 1312;HP PSC 1315;HP PSC 1317;HP PSC 1340;HP PSC 1350;HP PSC 1355;HP PSC 2105;HP PSC 2108;HP PSC 2110;HP PSC 2115;HP PSC 2171;HP PSC 2175;HP PSC 2179;HP PSC 2210;HP PSC 2410;HP PSC 2510	Photo Color	250			
HP №78 (C6578DE)	HP Color Copier 180;HP Color Copier 190;HP Color Copier 280;HP Color Copier 290;HP Deskjet 1180;HP Deskjet 1220;HP Deskjet 1280;HP Deskjet 3810;HP Deskjet HP Deskjet 3816;HP Deskjet 3820;HP Deskjet 3822;HP Deskjet 6122;HP Deskjet 6127;HP Deskjet 916;HP Deskjet 920;HP Deskjet 930;HP Deskjet 9300;HP Deskjet 932;HP Deskjet 935;HP Deskjet 940;HP Deskjet 950;HP Deskjet 952;HP Deskjet 955;HP Deskjet 959;HP Deskjet 960;HP Deskjet 970;HP Deskjet 980;HP Deskjet 990;HP Deskjet 995;HP Digital Copier 310;HP FAX 1220;HP FAX 1230;HP Officejet 5105HP Officejet ;5110;HP Officejet G55;HP Officejet G85;HP Officejet G95;HP Officejet K60;HP Officejet K80;HP Officejet V30;HP Officejet V40;HP Officejet V45;HP PhotoSmart 1000;HP PhotoSmart 1100;HP PhotoSmart 1115;HP PhotoSmart 1215;HP PhotoSmart 1218;HP PhotoSmart 1315;HP PSC 750;HP PSC 950	Color	300			
HP №78XL (C6578AE)	HP Color Copier 180;HP Color Copier 190;HP Color Copier 280;HP Color Copier 290;HP Deskjet 1180;HP Deskjet 1220;HP Deskjet 1280;HP Deskjet 3810;HP Deskjet HP Deskjet 3816;HP Deskjet 3820;HP Deskjet 3822;HP Deskjet 6122;HP Deskjet 6127;HP Deskjet 916;HP Deskjet 920;HP Deskjet 930;HP Deskjet 9300;HP Deskjet 932;HP Deskjet 935;HP Deskjet 940;HP Deskjet 950;HP Deskjet 952;HP Deskjet 955;HP Deskjet 959;HP Deskjet 960;HP Deskjet 970;HP Deskjet 980;HP Deskjet 990;HP Deskjet 995;HP Digital Copier 310;HP FAX 1220;HP FAX 1230;HP Officejet 5105HP Officejet ;5110;HP Officejet G55;HP Officejet G85;HP Officejet G95;HP Officejet K60;HP Officejet K80;HP Officejet V30;HP Officejet V40;HP Officejet V45;HP PhotoSmart 1000;HP PhotoSmart 1100;HP PhotoSmart 1115;HP PhotoSmart 1215;HP PhotoSmart 1218;HP PhotoSmart 1315;HP PSC 750;HP PSC 950	Color	350			
HP №110 (CB304AE)	HP PhotoSmart A310;HP PhotoSmart A311;HP PhotoSmart HP PhotoSmart A314;HP PhotoSmart A316;HP PhotoSmart A320;HP PhotoSmart A321;HP PhotoSmart A430;HP PhotoSmart A432;HP PhotoSmart A433;HP PhotoSmart A434;HP PhotoSmart A436;HP PhotoSmart A440;HP PhotoSmart A441;HP PhotoSmart A442;HP PhotoSmart A444;AHP PhotoSmart 446;HP PhotoSmart A510;HP PhotoSmart A512;HP PhotoSmart A516;HP PhotoSmart A526;HP PhotoSmart A532;HP PhotoSmart A610;HP PhotoSmart A612;HP PhotoSmart A616;HP PhotoSmart A617;HP PhotoSmart A618;HP PhotoSmart A626;HP PhotoSmart A636;HP PhotoSmart A712;HP PhotoSmart A716;HP PhotoSmart A717;HP PhotoSmart A826	Color	250			
HP №129 (C9364HE)	HP Deskjet 5943;HP Deskjet 6943;HP Deskjet 6983;HP Deskjet D4163;HP Officejet 6213;HP Officejet 6313;HP Officejet H470;HP Officejet K7103;HP PhotoSmart 2573;HP PhotoSmart 8053;HP PhotoSmart 8753;HP PhotoSmart C4183;HP PhotoSmart D5063;HP PhotoSmart D5100ser;HP PhotoSmart D5145;HP PhotoSmart D5155;HP PhotoSmart D5160;HP PhotoSmart D5163;HP PhotoSmart D5168	BK	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №130 (C8767HE)	HP DeskJet 5743;HP DeskJet 5943;HP DeskJet 6543;HP DeskJet 6623;HP DeskJet 6843;HP DeskJet 6943;HP DeskJet 6983;HP DeskJet 9803;HP OfficeJet 6313;HP OfficeJet 7213;HP OfficeJet 7313;HP OfficeJet 7413;HP OfficeJet K7103;HP PhotoSmart 2573;HP PhotoSmart 2613;HP PhotoSmart 2713;HP PhotoSmart 8053;HP PhotoSmart 8153;HP PhotoSmart 8453;HP PhotoSmart 8753;HP PhotoSmart 5063; HP PhotoSmart Pro B8353	БК	300			
HP №131 (C8765HE)	HP DeskJet 460;HP DeskJet 5743;HP DeskJet 6543;HP DeskJet 6623;HP DeskJet 6843;HP DeskJet 9803;HP OfficeJet 6213;HP OfficeJet 7213;HP OfficeJet 7313;HP OfficeJet 7413;HP OfficeJet H470;HP OfficeJet K7103;HP PhotoSmart 2573;HP PhotoSmart 2613;HP PhotoSmart 2713;HP PhotoSmart 8153;HP PhotoSmart 8453;HP PhotoSmart 8753;HP PhotoSmart C3183;HP PhotoSmart Pro B8353;HP PSC 1513;HP PSC 1613;HP PSC 2353	БК	250			
HP №132 (C9362HE)	HP DeskJet 5443;D4163;HP OfficeJet 6313;HP PhotoSmart 2573;C3183;HP PSC 1513	БК	200			
HP №134 (C9363HE)	HP DeskJet 5743;HP DeskJet 5943;HP DeskJet 6543;HP DeskJet 6623;HP DeskJet 6843;HP DeskJet 6943;HP DeskJet 6983;HP DeskJet 9803;HP DeskJet D4163;HP OfficeJet 6213;HP OfficeJet 7213;HP OfficeJet 7313;HP OfficeJet 7413;HP OfficeJet H470;HP OfficeJet K7103;HP PhotoSmart 2573;HP PhotoSmart 2613;HP PhotoSmart 2713;HP PhotoSmart 325;HP PhotoSmart 335;HP PhotoSmart 375;HP PhotoSmart 385;HP PhotoSmart 428;HP PhotoSmart 475;HP PhotoSmart 8053;HP PhotoSmart 8153;HP PhotoSmart 8453;HP PhotoSmart 8753;HP PhotoSmart D5063;HP PhotoSmart Pro B8353;HP PSC 1613;HP PSC 2353	Color	250			
HP №135 (C8766HE)	HP DeskJet 460;HP DeskJet 5743;HP DeskJet 5943;HP DeskJet 6543;HP DeskJet 6623;HP DeskJet 6843;HP DeskJet 6943;HP DeskJet 6983;HP DeskJet 9803;HP DeskJet D4163;HP OfficeJet 6213;HP OfficeJet 6313;HP OfficeJet 7213;HP OfficeJet 7313;HP OfficeJet 7413;HP OfficeJet H470;HP OfficeJet K7103;HP PhotoSmart 2573;HP PhotoSmart 2613;HP PhotoSmart 2713;HP PhotoSmart 325;HP PhotoSmart 335;HP PhotoSmart 375;HP PhotoSmart 385;HP PhotoSmart 428;HP PhotoSmart 475;HP PhotoSmart 8053;HP PhotoSmart 8153;HP PhotoSmart 8453;HP PhotoSmart 8753;HP PhotoSmart C3183;HP PhotoSmart C4183;HP PhotoSmart D5063;HP PhotoSmart D5100ser;HP PhotoSmart D5145;HP PhotoSmart D5155;HP PhotoSmart D5160;HP PhotoSmart D5163;HP PhotoSmart D5168;HP PhotoSmart Pro B8353;HP PSC 1513;HP PSC 1613;HP PSC 2353	Color	250			
HP №16 (C1816AE)	HP DeskJet 610;HP DeskJet 615;HP DeskJet 640;HP DeskJet 690;HP DeskJet 695;HP OfficeJet 700;HP OfficeJet 710;HP OfficeJet 725	Photo Color	250			
HP №17 (C6625AE)	HP DeskJet 816;HP DeskJet 825;HP DeskJet 840;HP DeskJet 842;HP DeskJet 843;HP DeskJet 845	Color	250			
HP №59 (C9359AE)	HP DeskJet 450;HP PhotoSmart 145;HP PhotoSmart 245;HP PhotoSmart 7660;HP PhotoSmart 7755;HP PhotoSmart 7760;HP PhotoSmart 7762;HP PhotoSmart 7960	Grey Photo	250			
HP №88 (C9385AE)	HP OfficeJet Pro K5400;HP OfficeJet Pro K550;HP OfficeJet Pro K8600;HP OfficeJet Pro L7480;HP OfficeJet Pro L7580;HP OfficeJet Pro L7590;HP OfficeJet Pro L7680;HP OfficeJet Pro L7780	БК				
HP №88 (C9386AE)	HP OfficeJet Pro K5400;HP OfficeJet Pro K550;HP OfficeJet Pro K8600;HP OfficeJet Pro L7480;HP OfficeJet Pro L7580;HP OfficeJet Pro L7590;HP OfficeJet Pro L7680;HP OfficeJet Pro L7780	C				
HP №88 (C9387AE)	HP OfficeJet Pro K5400;HP OfficeJet Pro K550;HP OfficeJet Pro K8600;HP OfficeJet Pro L7480;HP OfficeJet Pro L7580;HP OfficeJet Pro L7590;HP OfficeJet Pro L7680;HP OfficeJet Pro L7780	M				
HP №88 (C9388AE)	HP OfficeJet Pro K5400;HP OfficeJet Pro K550;HP OfficeJet Pro K8600;HP OfficeJet Pro L7480;HP OfficeJet Pro L7580;HP OfficeJet Pro L7590;HP OfficeJet Pro L7680;HP OfficeJet Pro L7780	Y				
HP №136 (C9361HE)	HP DeskJet 5743;D4163;D5443;HP OfficeJet 6313;HP PhotoSmart 2573;HP PhotoSmart 375;HP PhotoSmart 385;HP PhotoSmart 428;HP PhotoSmart 475;HP PhotoSmart 8153;HP PhotoSmart 8453;HP PhotoSmart 8753;HP PhotoSmart C3183;HP PhotoSmart C4183;HP PhotoSmart D5063;HP PSC 1513	Color	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №138 (C9369HE)	HP DeskJet 460;HP DeskJet 5443;HP DeskJet 5743;HP DeskJet 5943;HP DeskJet 6543;HP DeskJet 6623;HP DeskJet 6843;HP DeskJet 6943;HP DeskJet 6983;HP DeskJet 9803;HP DeskJet D4163;HP DeskJet D4263;HP DeskJet D4363;HP OfficeJet 6213;HP OfficeJet 6313;HP OfficeJet 7213;HP OfficeJet 7313;HP OfficeJet 7413;HP OfficeJet H470;HP OfficeJet J5783;HP OfficeJet J6410;HP OfficeJet J6413;HP PhotoSmart 2573;HP OfficeJet 2613;HP OfficeJet 2713;HP OfficeJet 8053;HP OfficeJet 8153;HP OfficeJet 8453;HP OfficeJet 8753;HP OfficeJet C3183;HP OfficeJet C4183;HP OfficeJet C4340ser;HP OfficeJet C4342;HP OfficeJet C4343;HP OfficeJet C4344;HP OfficeJet C4345;HP OfficeJet C4348;HP OfficeJet C4400ser;HP OfficeJet C4435;HP OfficeJet C4440;HP OfficeJet C4450;HP OfficeJet C4472;HP OfficeJet C4473;HP OfficeJet C4480;HP OfficeJet C4483;HP OfficeJet C4485;HP OfficeJet C4500ser;HP OfficeJet C4580;HP OfficeJet C4583;HP OfficeJet C4585;HP OfficeJet C4599;HP OfficeJet C5500ser;HP OfficeJet D5063;HP OfficeJet D5100ser;HP OfficeJet D5145;HP OfficeJet D5155;HP OfficeJet D5160;HP OfficeJet D5163;HP OfficeJet D5168;HP PhotoSmart Pro B8353;HP PSC 1513;HP PSC 1613;HP PSC 2353	Photo Color	250			
HP №140 (CB335HE)	HP DeskJet D4200ser;HP DeskJet D4260;HP DeskJet D4263;HP DeskJet D4268;HP DeskJet D4283;HP DeskJet D4300ser;HP DeskJet D4360;HP DeskJet D4363;HP DeskJet D4368;HP OfficeJet J5700serHP OfficeJet ;J5730;HP OfficeJet J5740;HP OfficeJet J5750;HP OfficeJet J5780;HP OfficeJet J5783;HP OfficeJet J5785;HP OfficeJet J5788;HP OfficeJet J6400ser;HP OfficeJet J6410;HP OfficeJet J6413;HP OfficeJet J6415;HP OfficeJet J6450;HP OfficeJet J6480;HP PhotoSmart C4200ser;HP PhotoSmart C4205;HP PhotoSmart C4210;HP PhotoSmart C4225;HP PhotoSmart C4240;HP PhotoSmart C4250;HP PhotoSmart C4270;HP PhotoSmart C4272;HP PhotoSmart C4273;HP PhotoSmart C4275;HP PhotoSmart C4280;HP PhotoSmart C4283;HP PhotoSmart C4288;HP PhotoSmart C4340ser;HP PhotoSmart C4342;HP PhotoSmart C4343;HP PhotoSmart C4344;HP PhotoSmart C4345;HP PhotoSmart C4348;HP PhotoSmart C4380ser;HP PhotoSmart C4383;HP PhotoSmart C4384;HP PhotoSmart C4385;HP PhotoSmart C4388;HP PhotoSmart C4400ser;HP PhotoSmart C4435;HP PhotoSmart C4440;HP PhotoSmart C4450;HP PhotoSmart C4472;HP PhotoSmart C4473;HP PhotoSmart C4480;HP PhotoSmart C4483;HP PhotoSmart C4485;HP PhotoSmart C4500ser;HP PhotoSmart C4580;HP PhotoSmart C4583;HP PhotoSmart C4585;HP PhotoSmart C4599;HP PhotoSmart C5200ser;HP PhotoSmart C5240;HP PhotoSmart C5250;HP PhotoSmart C5275;HP PhotoSmart C5280;HP PhotoSmart C5283;HP PhotoSmart C5288;HP PhotoSmart C5290;HP PhotoSmart C5500ser;HP PhotoSmart C5540;HP PhotoSmart C5550;HP PhotoSmart C5580;HP PhotoSmart D5300ser;HP PhotoSmart D5345;HP PhotoSmart D5360;HP PhotoSmart D5363;HP PhotoSmart D5368;HP PhotoSmart D5383	BK	200			
HP №140XL (CB336HE)	HP DeskJet D4200ser;HP DeskJet D4260;HP DeskJet D4263;HP DeskJet D4268;HP DeskJet D4283;HP DeskJet D4300ser;HP DeskJet D4360;HP DeskJet D4363;HP DeskJet D4368;HP OfficeJet J5700serHP OfficeJet ;J5730;HP OfficeJet J5740;HP OfficeJet J5750;HP OfficeJet J5780;HP OfficeJet J5783;HP OfficeJet J5785;HP OfficeJet J5788;HP OfficeJet J6400ser;HP OfficeJet J6410;HP OfficeJet J6413;HP OfficeJet J6415;HP OfficeJet J6450;HP OfficeJet J6480;HP PhotoSmart C4200ser;HP PhotoSmart C4205;HP PhotoSmart C4210;HP PhotoSmart C4225;HP PhotoSmart C4240;HP PhotoSmart C4250;HP PhotoSmart C4270;HP PhotoSmart C4272;HP PhotoSmart C4273;HP PhotoSmart C4275;HP PhotoSmart C4280;HP PhotoSmart C4283;HP PhotoSmart C4288;HP PhotoSmart C4340ser;HP PhotoSmart C4342;HP PhotoSmart C4343;HP PhotoSmart C4344;HP PhotoSmart C4345;HP PhotoSmart C4348;HP PhotoSmart C4380ser;HP PhotoSmart C4383;HP PhotoSmart C4384;HP PhotoSmart C4385;HP PhotoSmart C4388;HP PhotoSmart C4400ser;HP PhotoSmart C4435;HP PhotoSmart C4440;HP PhotoSmart C4450;HP PhotoSmart C4472;HP PhotoSmart C4473;HP PhotoSmart C4480;HP PhotoSmart C4483;HP PhotoSmart C4485;HP PhotoSmart C4500ser;HP PhotoSmart C4580;HP PhotoSmart C4583;HP PhotoSmart C4585;HP PhotoSmart C4599;HP PhotoSmart C5200ser;HP PhotoSmart C5240;HP PhotoSmart C5250;HP PhotoSmart C5275;HP PhotoSmart C5280;HP PhotoSmart C5283;HP PhotoSmart C5288;HP PhotoSmart C5290;HP PhotoSmart C5500ser;HP PhotoSmart C5540;HP PhotoSmart C5550;HP PhotoSmart C5580;HP PhotoSmart D5300ser;HP PhotoSmart D5345;HP PhotoSmart D5360;HP PhotoSmart D5363;HP PhotoSmart D5368;HP PhotoSmart D5383	BK	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №141 (CB337HE)	HP DeskJet D4200ser;HP DeskJet D4260;HP DeskJet D4263;HP DeskJet D4268;HP DeskJet D4283;HP DeskJet D4300ser;HP DeskJet D4360;HP DeskJet D4363;HP DeskJet D4368;HP OfficeJet J5700serHP OfficeJet J5730;HP OfficeJet J5740;HP OfficeJet J5750;HP OfficeJet J5780;HP OfficeJet J5783;HP OfficeJet J5785;HP OfficeJet J5788;HP OfficeJet J6400ser;HP OfficeJet J6410;HP OfficeJet J6413;HP OfficeJet J6415;HP OfficeJet J6450;HP OfficeJet J6480;HP PhotoSmart C4200ser;HP PhotoSmart C4205;HP PhotoSmart C4210;HP PhotoSmart C4225;HP PhotoSmart C4240;HP PhotoSmart C4250;HP PhotoSmart C4270;HP PhotoSmart C4272;HP PhotoSmart C4273;HP PhotoSmart C4275;HP PhotoSmart C4280;HP PhotoSmart C4283;HP PhotoSmart C4288;HP PhotoSmart C4340ser;HP PhotoSmart C4342;HP PhotoSmart C4343;HP PhotoSmart C4344;HP PhotoSmart C4345;HP PhotoSmart C4348;HP PhotoSmart C4380ser;HP PhotoSmart C4383;HP PhotoSmart C4384;HP PhotoSmart C4385;HP PhotoSmart C4388;HP PhotoSmart C4400ser;HP PhotoSmart C4435;HP PhotoSmart C4440;HP PhotoSmart C4450;HP PhotoSmart C4472;HP PhotoSmart C4473;HP PhotoSmart C4480;HP PhotoSmart C4483;HP PhotoSmart C4485;HP PhotoSmart C4500ser;HP PhotoSmart C4580;HP PhotoSmart C4583;HP PhotoSmart C4585;HP PhotoSmart C4599;HP PhotoSmart C5200ser;HP PhotoSmart C5240;HP PhotoSmart C5250;HP PhotoSmart C5275;HP PhotoSmart C5280;HP PhotoSmart C5283;HP PhotoSmart C5288;HP PhotoSmart C5290;HP PhotoSmart C5500ser;HP PhotoSmart C5540;HP PhotoSmart C5550;HP PhotoSmart C5580;HP PhotoSmart D5300ser;HP PhotoSmart D5345;HP PhotoSmart D5360;HP PhotoSmart D5363;HP PhotoSmart D5368;HP PhotoSmart D5383	Color	250			
HP №141XL (CB338HE)	HP DeskJet D4200ser;HP DeskJet D4260;HP DeskJet D4263;HP DeskJet D4268;HP DeskJet D4283;HP DeskJet D4300ser;HP DeskJet D4360;HP DeskJet D4363;HP DeskJet D4368;HP OfficeJet J5700serHP OfficeJet J5730;HP OfficeJet J5740;HP OfficeJet J5750;HP OfficeJet J5780;HP OfficeJet J5783;HP OfficeJet J5785;HP OfficeJet J5788;HP OfficeJet J6400ser;HP OfficeJet J6410;HP OfficeJet J6413;HP OfficeJet J6415;HP OfficeJet J6450;HP OfficeJet J6480;HP PhotoSmart C4200ser;HP PhotoSmart C4205;HP PhotoSmart C4210;HP PhotoSmart C4225;HP PhotoSmart C4240;HP PhotoSmart C4250;HP PhotoSmart C4270;HP PhotoSmart C4272;HP PhotoSmart C4273;HP PhotoSmart C4275;HP PhotoSmart C4280;HP PhotoSmart C4283;HP PhotoSmart C4288;HP PhotoSmart C4340ser;HP PhotoSmart C4342;HP PhotoSmart C4343;HP PhotoSmart C4344;HP PhotoSmart C4345;HP PhotoSmart C4348;HP PhotoSmart C4380ser;HP PhotoSmart C4383;HP PhotoSmart C4384;HP PhotoSmart C4385;HP PhotoSmart C4388;HP PhotoSmart C4400ser;HP PhotoSmart C4435;HP PhotoSmart C4440;HP PhotoSmart C4450;HP PhotoSmart C4472;HP PhotoSmart C4473;HP PhotoSmart C4480;HP PhotoSmart C4483;HP PhotoSmart C4485;HP PhotoSmart C4500ser;HP PhotoSmart C4580;HP PhotoSmart C4583;HP PhotoSmart C4585;HP PhotoSmart C4599;HP PhotoSmart C5200ser;HP PhotoSmart C5240;HP PhotoSmart C5250;HP PhotoSmart C5275;HP PhotoSmart C5280;HP PhotoSmart C5283;HP PhotoSmart C5288;HP PhotoSmart C5290;HP PhotoSmart C5500ser;HP PhotoSmart C5540;HP PhotoSmart C5550;HP PhotoSmart C5580;HP PhotoSmart D5300ser;HP PhotoSmart D5345;HP PhotoSmart D5360;HP PhotoSmart D5363;HP PhotoSmart D5368;HP PhotoSmart D5383	Color	300			
HP №177XL (C8719HE)	HP PhotoSmart 3100ser;3200ser;3213;HP PhotoSmart 3300ser;HP PhotoSmart 3310;HP PhotoSmart 3313;HP PhotoSmart 8200ser;HP PhotoSmart 8230;HP PhotoSmart 8253;HP PhotoSmart C5100ser;HP PhotoSmart C5183;HP PhotoSmart C6100ser;HP PhotoSmart C6183;HP PhotoSmart C6200ser;HP PhotoSmart C6283;HP PhotoSmart C7100ser;HP PhotoSmart C7183;HP PhotoSmart C7200se;HP PhotoSmart C7283;HP PhotoSmart C8100ser;HP PhotoSmart C8183;HP PhotoSmart D7100ser;HP PhotoSmart D7163;HP PhotoSmart 7200ser;HP PhotoSmart D7263;HP PhotoSmart 7300ser;HP PhotoSmart D7363;HP PhotoSmart D7400ser;HP PhotoSmart D7463	BK	250			
HP №177 (C8721HE)	HP PhotoSmart 3100ser;3200ser;3213;HP PhotoSmart 3300ser;HP PhotoSmart 3310;HP PhotoSmart 3313;HP PhotoSmart 8200ser;HP PhotoSmart 8230;HP PhotoSmart 8253;HP PhotoSmart C5100ser;HP PhotoSmart C5183;HP PhotoSmart C6100ser;HP PhotoSmart C6183;HP PhotoSmart C6200ser;HP PhotoSmart C6283;HP PhotoSmart C7100ser;HP PhotoSmart C7183;HP PhotoSmart C7200se;HP PhotoSmart C7283;HP PhotoSmart C8100ser;HP PhotoSmart C8183;HP PhotoSmart D7100ser;HP PhotoSmart D7163;HP PhotoSmart 7200ser;HP PhotoSmart D7263;HP PhotoSmart 7300ser;HP PhotoSmart D7363;HP PhotoSmart D7400ser;HP PhotoSmart D7463	BK	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №178XL (CB324HE)	HP PhotoSmart C5383;HP PhotoSmart C6383;HP PhotoSmart D5463;HP PhotoSmart Plus;HP PhotoSmart Premium Fax C309;HP PhotoSmart Pro B8553	M	250			
HP №178XL (CB325HE)	HP PhotoSmart C5383;HP PhotoSmart C6383;HP PhotoSmart D5463;HP PhotoSmart Plus;HP PhotoSmart Premium Fax C309;HP PhotoSmart Pro B8553	Y	250			
HP №901 (CC653AE)	HP OfficeJet 4580;HP OfficeJet J4660;HP OfficeJet J4680	BK	200			
HP №901XL (CC654AE)	HP OfficeJet 4580;HP OfficeJet J4660;HP OfficeJet J4680	BK	250			
HP №901 (CC656AE)	HP OfficeJet 4580;HP OfficeJet J4660;HP OfficeJet J4680	Color	250			
HP №901XL (CC655AE)	HP OfficeJet 4580;HP OfficeJet J4660;HP OfficeJet J4680	Color	300			
HP №920 (CD971AE)	HP Officejet 6000;HP Officejet 6500;HP Officejet 6500a;HP Officejet 6500a Plus;HP Officejet 7000;HP Officejet 7500A	BK	200			
HP №920XL (CD975AE)	HP Officejet 6000;HP Officejet 6500;HP Officejet 6500a;HP Officejet 6500a Plus;HP Officejet 7000;HP Officejet 7500A	BK	250			
HP №920 (CH634A)	HP Officejet 6000;HP Officejet 6500;HP Officejet 6500a;HP Officejet 6500a Plus;HP Officejet 7000;HP Officejet 7500A	C	200			
HP №920 (CH635A)	HP Officejet 6000;HP Officejet 6500;HP Officejet 6500a;HP Officejet 6500a Plus;HP Officejet 7000;HP Officejet 7500A	M	200			
HP №920 (CH636A)	HP Officejet 6000;HP Officejet 6500;HP Officejet 6500a;HP Officejet 6500a Plus;HP Officejet 7000;HP Officejet 7500A	Y	200			
HP №920XL (CD972AE)	HP Officejet 6000;HP Officejet 6500;HP Officejet 6500a;HP Officejet 6500a Plus;HP Officejet 7000;HP Officejet 7500A	C	250			
HP №920XL (CD973AE)	HP Officejet 6000;HP Officejet 6500;HP Officejet 6500a;HP Officejet 6500a Plus;HP Officejet 7000;HP Officejet 7500A	M	250			
HP №920XL (CD974AE)	HP Officejet 6000;HP Officejet 6500;HP Officejet 6500a;HP Officejet 6500a Plus;HP Officejet 7000;HP Officejet 7500A	Y	250			
HP №940 (C4902A)	HP OfficeJet Pro 8000;HP OfficeJet Pro 8500	BK	250			
HP №940 (C4903A)	HP OfficeJet Pro 8000;HP OfficeJet Pro 8500	C	250			
HP №940 (C4904A)	HP OfficeJet Pro 8000;HP OfficeJet Pro 8500	M	250			
HP №940 (C4905A)	HP OfficeJet Pro 8000;HP OfficeJet Pro 8500	Y	250			
HP №940XL (C4906A)	HP OfficeJet Pro 8000;HP OfficeJet Pro 8500	BK	350			
HP №940XL (C4907A)	HP OfficeJet Pro 8000;HP OfficeJet Pro 8500	C	350			
HP №940XL (C4908A)	HP OfficeJet Pro 8000;HP OfficeJet Pro 8500	M	350			
HP №940XL (C4909A)	HP OfficeJet Pro 8000;HP OfficeJet Pro 8500	Y	350			
HP №13 (C4814A)	HP Business InkJet 1000;HP Business InkJet 2000;HP Business InkJet 3000;HP OfficeJet Pro K850	BK				
HP №13 (C4815A)	HP Business InkJet 1000;HP Business InkJet 2000;HP Business InkJet 3000;HP OfficeJet Pro K850	C				
HP №13 (C4816A)	HP Business InkJet 1000;HP Business InkJet 2000;HP Business InkJet 3000;HP OfficeJet Pro K850	M				
HP №13 (C4817A)	HP Business InkJet 1000;HP Business InkJet 2000;HP Business InkJet 3000;HP OfficeJet Pro K850	Y				
HP №20 (C4804A)	HP Business InkJet 3000	C				
HP №20 (C4805A)	HP Business InkJet 3000	M				
HP №20 (C4806A)	HP Business InkJet 3000	Y				
HP №40 (51640A)	HP CopyJet CopyJet;HP CopyJet CopyJet M;HP DesignJet 230;HP DesignJet 250;HP DesignJet 330;HP DesignJet 350;HP DesignJet 430;HP DesignJet 450;HP DesignJet 455;HP DesignJet 488;HP DesignJet 650;HP DeskJet 1200	BK	300			
HP №40 (51640C)	HP Color Copier 210;HP DeskJet 1200;HP DeskJet 1600	C	300			
HP №40 (51640M)	HP Color Copier 210;HP DeskJet 1200;HP DeskJet 1600	M	300			
HP №40 (51640Y)	HP Color Copier 210;HP DeskJet 1200;HP DeskJet 1600	Y	300			
HP №41 (51641A)	HP Color Copier 110;HP Color Copier 120;HP DeskJet 1100;HP DeskJet 820;HP DeskJet 850;HP DeskJet 855;HP DeskJet 870;OfficeJet Pro 1150	Color	300			
HP №122 (CH561HE)	HP DeskJet 1000;HP DeskJet 1050;HP DeskJet 1510;HP DeskJet 2000;HP DeskJet 2050;HP DeskJet 3000;HP DeskJet 3050	BK	200			
HP №122 (CH562HE)	HP DeskJet 1000;HP DeskJet 1050;HP DeskJet 1510;HP DeskJet 2000;HP DeskJet 2050;HP DeskJet 3000;HP DeskJet 3050	Color	250			
HP №82 (C4911A)	HP DesignJet 500;HP DesignJet 510;HP DesignJet 800;HP DesignJet 815;HP DesignJet 820	C				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №82 (C4912A)	HP DesignJet 500;HP DesignJet 510;HP DesignJet 800;HP DesignJet 815;HP DesignJet 820	M				
HP №82 (C4913A)	HP DesignJet 500;HP DesignJet 510;HP DesignJet 800;HP DesignJet 815;HP DesignJet 820	Y				
HP №650 (CZ101AE)	HP Deskjet Ink Advantage 2515;HP Deskjet Ink Advantage 3515;HP Deskjet Ink Advantage 3545;HP Deskjet Ink Advantage 4645;HP Deskjet Ink Advantage 4515;HP Deskjet Ink Advantage 2645;HP Deskjet Ink Advantage 2545;HP Deskjet Ink Advantage 1515;HP Deskjet Ink Advantage 1015	BK	200			
HP №650 (CZ102AE)	HP Deskjet Ink Advantage 2515;HP Deskjet Ink Advantage 3515;HP Deskjet Ink Advantage 3545;HP Deskjet Ink Advantage 4645;HP Deskjet Ink Advantage 4515;HP Deskjet Ink Advantage 2645;HP Deskjet Ink Advantage 2545;HP Deskjet Ink Advantage 1515;HP Deskjet Ink Advantage 1015	Color	250			
HP №46 (CZ638AE)	HP Deskjet Ink Advantage 2520hc;HP Deskjet Ink Advantage 2020hc;HP Deskjet Ink Advantage 4729 (F5S66A);HP Deskjet Ink Advantage 2529 (K7W99A);HP Deskjet Ink Advantage 2029 (K7X13A)	Color	250			
HP №46 (CZ637AE)	HP Deskjet Ink Advantage 2520hc;HP Deskjet Ink Advantage 2020hc;HP Deskjet Ink Advantage 4729 (F5S66A);HP Deskjet Ink Advantage 2529 (K7W99A);HP Deskjet Ink Advantage 2029 (K7X13A)	BK	200			
HP №934 (C2P19AE)	HP Officejet Pro 6830;HP Officejet Pro 6230	BK	250			
HP №934 XL (C2P23AE)	HP Officejet Pro 6830;HP Officejet Pro 6230	BK	250			
HP №935 (C2P20AE)	HP Officejet Pro 6830;HP Officejet Pro 6230	C	250			
HP №935 (C2P22AE)	HP Officejet Pro 6830;HP Officejet Pro 6230	Y	250			
HP №935 (C2P21AE)	HP Officejet Pro 6830;HP Officejet Pro 6230	M	250			
HP №935XL (C2P20AE)	HP Officejet Pro 6830;HP Officejet Pro 6230	C	250			
HP №935XL (C2P22AE)	HP Officejet Pro 6830;HP Officejet Pro 6230	Y	250			
HP №935XL (C2P21AE)	HP Officejet Pro 6830;HP Officejet Pro 6230	M	250			
HP №932 (CN057AE)	HP Officejet 6100;HP Officejet 6600;HP Officejet 6700;HP Officejet 7110;HP Officejet 7610;HP Officejet 7612;HP Officejet 7510	BK	250			
HP №932XL (CN053AE)	HP Officejet 6100;HP Officejet 6600;HP Officejet 6700;HP Officejet 7110;HP Officejet 7610;HP Officejet 7612;HP Officejet 7510	BK	250			
HP №933XL (CN054AE)	HP Officejet 6100;HP Officejet 6600;HP Officejet 6700;HP Officejet 7110;HP Officejet 7610;HP Officejet 7612;HP Officejet 7510	C	250			
HP №933XL (CN056AE)	HP Officejet 6100;HP Officejet 6600;HP Officejet 6700;HP Officejet 7110;HP Officejet 7610;HP Officejet 7612;HP Officejet 7510	Y	250			
HP №933XL (CN055AE)	HP Officejet 6100;HP Officejet 6600;HP Officejet 6700;HP Officejet 7110;HP Officejet 7610;HP Officejet 7612;HP Officejet 7510	M	250			
HP №950 (CN045AE)	HP Officejet Pro 8620;HP Officejet Pro 8610;HP Officejet Pro 251dw;HP Officejet Pro 276dw;HP Officejet Pro 8100	BK				
HP №951 (CN046AE)	HP Officejet Pro 8620;HP Officejet Pro 8610;HP Officejet Pro 251dw;HP Officejet Pro 276dw;HP Officejet Pro 8100	C				
HP №951 (CN047AE)	HP Officejet Pro 8620;HP Officejet Pro 8610;HP Officejet Pro 251dw;HP Officejet Pro 276dw;HP Officejet Pro 8100	M				
HP №951 (CN048AE)	HP Officejet Pro 8620;HP Officejet Pro 8610;HP Officejet Pro 251dw;HP Officejet Pro 276dw;HP Officejet Pro 8100	Y				
HP №652 (F6V25AE)	HP Deskjet 3635;HP Deskjet 2135;HP Deskjet 3835;HP Deskjet 675 (F1H97C);HP Deskjet 4535 (F0V64C);HP Deskjet 3785 (T8W46C);HP Deskjet 3775 (T8W46C);HP Deskjet 3775 (T8W42C);HP Deskjet 1115 (F5S21C)	BK	250			
HP №652 (F6V24AE)	HP Deskjet 3635;HP Deskjet 2135;HP Deskjet 3835;HP Deskjet 675 (F1H97C);HP Deskjet 4535 (F0V64C);HP Deskjet 3785 (T8W46C);HP Deskjet 3775 (T8W46C);HP Deskjet 3775 (T8W42C);HP Deskjet 1115 (F5S21C)	Color	300			
HP №953 (L0S58AE)	HP Officejet Pro 8715 (J6X76A);HP Officejet Pro 8710(D9L18A);HP Officejet Pro 8730(D9L20A);HP Officejet Pro 8725(M9L80A);HP Officejet Pro 8720(D9L19A);HP Officejet Pro 8210	BK				
HP №953XL (F6U16AE)	HP Officejet Pro 8715 (J6X76A);HP Officejet Pro 8710(D9L18A);HP Officejet Pro 8730(D9L20A);HP Officejet Pro 8725(M9L80A);HP Officejet Pro 8720(D9L19A);HP Officejet Pro 8210	C				
HP №953XL (F6U17AE)	HP Officejet Pro 8715 (J6X76A);HP Officejet Pro 8710(D9L18A);HP Officejet Pro 8730(D9L20A);HP Officejet Pro 8725(M9L80A);HP Officejet Pro 8720(D9L19A);HP Officejet Pro 8210	M				
HP №953XL (F6U18AE)	HP Officejet Pro 8715 (J6X76A);HP Officejet Pro 8710(D9L18A);HP Officejet Pro 8730(D9L20A);HP Officejet Pro 8725(M9L80A);HP Officejet Pro 8720(D9L19A);HP Officejet Pro 8210	Y				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
HP №953 (F6U12AE)	HP OfficeJet Pro 8715 (J6X76A);HP OfficeJet Pro 8710(D9L18A);HP Officejet Pro 8730(D9L20A);HP Officejet Pro 8725(M9L80A);HP Officejet Pro 8720(D9L19A);HP Officejet Pro 8210	C				
HP №953 (F6U13AE)	HP OfficeJet Pro 8715 (J6X76A);HP OfficeJet Pro 8710(D9L18A);HP Officejet Pro 8730(D9L20A);HP Officejet Pro 8725(M9L80A);HP Officejet Pro 8720(D9L19A);HP Officejet Pro 8210	M				
HP №953 (F6U14AE)	HP OfficeJet Pro 8715 (J6X76A);HP OfficeJet Pro 8710(D9L18A);HP Officejet Pro 8730(D9L20A);HP Officejet Pro 8725(M9L80A);HP Officejet Pro 8720(D9L19A);HP Officejet Pro 8210	Y				
HP №953XL (L0S70AE)	HP OfficeJet Pro 8715 (J6X76A);HP OfficeJet Pro 8710(D9L18A);HP Officejet Pro 8730(D9L20A);HP Officejet Pro 8725(M9L80A);HP Officejet Pro 8720(D9L19A);HP Officejet Pro 8210	BK				
HP №651 (C2P11AE)	HP Officejet 202 (N4K99C);HP Officejet 252 (N4L16C);HP Advantage 5645 (B9S57C);HP Advantage 5575 All-in-One (G0V48C)	Color	250			
HP №651 (C2P10AE)	HP Officejet 202 (N4K99C);HP Officejet 252 (N4L16C);HP Advantage 5645 (B9S57C);HP Advantage 5575 All-in-One (G0V48C)	BK	200			
HP №903 (T6L99AE)	HP Officejet Pro 6970 (J7K34A);HP OfficeJet Pro 6960 (J7K33A)	BK	200			
HP №903 (T6L87AE)	HP Officejet Pro 6970 (J7K34A);HP OfficeJet Pro 6960 (J7K33A)	C	200			
HP №903 (T6L91AE)	HP Officejet Pro 6970 (J7K34A);HP OfficeJet Pro 6960 (J7K33A)	M	200			
HP №903 (T6L95AE)	HP Officejet Pro 6970 (J7K34A);HP OfficeJet Pro 6960 (J7K33A)	Y	200			
HP №903XL (T6M15AE)	HP Officejet Pro 6970 (J7K34A);HP OfficeJet Pro 6960 (J7K33A)	BK	300			
HP №903XL (T6M03AE)	HP Officejet Pro 6970 (J7K34A);HP OfficeJet Pro 6960 (J7K33A)	C	300			
HP №903XL (T6M07AE)	HP Officejet Pro 6970 (J7K34A);HP OfficeJet Pro 6960 (J7K33A)	M	300			
HP №903XL (T6M11AE)	HP Officejet Pro 6970 (J7K34A);HP OfficeJet Pro 6960 (J7K33A)	Y	300			
HP №907XL (T6M19AE)	HP Officejet Pro 6970 (J7K34A);HP OfficeJet Pro 6960 (J7K33A)	BK	400			
HP №123 (F6V17AE)	HP Deskjet 2130 (K7N77C)	BK	200			
HP №123 (F6V16AE)	HP Deskjet 2130 (K7N77C)	Color	250			
HP №123XL (F6V19AE)	HP Deskjet 2130 (K7N77C)	BK	300			
HP №123XL (F6V18AE)	HP Deskjet 2130 (K7N77C)	Color	350			
HP №655 (CZ109AE)	HP Deskjet Ink Advantage 3525;HP Deskjet Ink Advantage 4615;HP Deskjet Ink Advantage 4625;HP Deskjet Ink Advantage 5525;HP Deskjet Ink Advantage 6525	BK	300			
HP №655 (CZ110AE)	HP Deskjet Ink Advantage 3525;HP Deskjet Ink Advantage 4615;HP Deskjet Ink Advantage 4625;HP Deskjet Ink Advantage 5525;HP Deskjet Ink Advantage 6525	C	250			
HP №655 (CZ111AE)	HP Deskjet Ink Advantage 3525;HP Deskjet Ink Advantage 4615;HP Deskjet Ink Advantage 4625;HP Deskjet Ink Advantage 5525;HP Deskjet Ink Advantage 6525	M	250			
HP №655 (CZ112AE)	HP Deskjet Ink Advantage 3525;HP Deskjet Ink Advantage 4615;HP Deskjet Ink Advantage 4625;HP Deskjet Ink Advantage 5525;HP Deskjet Ink Advantage 6525	Y	250			
HP №950XL (CN045AE)	HP Officejet Pro 8620;HP Officejet Pro 8610;HP Officejet Pro 251dw;HP Officejet Pro 276dw;HP Officejet Pro 8100	BK				
HP №951XL (CN046AE)	HP Officejet Pro 8620;HP Officejet Pro 8610;HP Officejet Pro 251dw;HP Officejet Pro 276dw;HP Officejet Pro 8100	C				
HP №951XL (CN047AE)	HP Officejet Pro 8620;HP Officejet Pro 8610;HP Officejet Pro 251dw;HP Officejet Pro 276dw;HP Officejet Pro 8100	M				
HP №951XL (CN048AE)	HP Officejet Pro 8620;HP Officejet Pro 8610;HP Officejet Pro 251dw;HP Officejet Pro 276dw;HP Officejet Pro 8100	Y				
Kyocera TK-17	Kyocera FS 1000;Kyocera FS 1010;Kyocera FS 1050	BK	950			
Kyocera TK-5140K	Kyocera ECOSYS M6030cdn;Kyocera ECOSYS M6530cdn;Kyocera ECOSYS P6130cdn	BK	3180	3900		
Kyocera TK-5140C	Kyocera ECOSYS M6030cdn;Kyocera ECOSYS M6530cdn;Kyocera ECOSYS P6130cdn	C	3180	3900		
Kyocera TK-5140M	Kyocera ECOSYS M6030cdn;Kyocera ECOSYS M6530cdn;Kyocera ECOSYS P6130cdn	M	3180	3900		
Kyocera TK-5140Y	Kyocera ECOSYS M6030cdn;Kyocera ECOSYS M6530cdn;Kyocera ECOSYS P6130cdn	Y	3180	3900		
Kyocera TK-5150K	Kyocera ECOSYS P6035cdn;Kyocera ECOSYS M6035cdn;Kyocera ECOSYS M6535cdn	BK	4900	5500		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Kyocera TK-5150C	Kyocera ECOSYS P6035cdn;Kyocera ECOSYS M6035cidn;Kyocera ECOSYS M6535cidn	C	4900	5500		
Kyocera TK-5150M	Kyocera ECOSYS P6035cdn;Kyocera ECOSYS M6035cidn;Kyocera ECOSYS M6535cidn	M	4900	5500		
Kyocera TK-5150Y	Kyocera ECOSYS P6035cdn;Kyocera ECOSYS M6035cidn;Kyocera ECOSYS M6535cidn	Y	4900	5500		
Kyocera TK-18	Kyocera FS 1020D;Kyocera FS 1020DN;Kyocera FS 1018MFP;Kyocera FS 1118MFP	BK	950			
Kyocera TK-20H	Kyocera FS 1700;Kyocera FS 1700+;Kyocera FS 1750;Kyocera FS 3700;Kyocera FS 3700+;Kyocera FS 3750;Kyocera FS 6700;Kyocera FS 6900	BK	1700			
Kyocera TK-50H	Kyocera FS 1900	BK	1150			
Kyocera TK-55	Kyocera FS 1920	BK	1450			
Kyocera TK-57	Kyocera FS 1920	BK	1450			
Kyocera TK-60	Kyocera FS 1800;Kyocera FS 1800+;Kyocera FS 3800	BK	1700			
Kyocera TK-65	Kyocera FS 3820N;Kyocera FS 3830N	BK	1700			
Kyocera TK-67	Kyocera FS 3820N;Kyocera FS 3830N	BK	1700			
Kyocera TK-70	Kyocera FS 9100;Kyocera FS 9120;Kyocera 9500;Kyocera FS 9520DN	BK	2550			
Kyocera TK-100	Kyocera KM 1500	BK	900			
Kyocera TK-110	Kyocera FS 720;Kyocera FS 820;Kyocera FS 920;Kyocera FS 1016MFP;Kyocera FS 1116MFP	BK	750	900		
Kyocera TK-120	Kyocera FS 1030D	BK	750	900		
Kyocera TK-130	Kyocera FS 1300D;Kyocera FS 1300DN;Kyocera FS 1350DN;Kyocera FS 1028MFP;Kyocera FS 1028MFP DP;Kyocera FS 1128MFP	BK	880	1030		
Kyocera TK-140	Kyocera FS-1100;Kyocera FS 1100N	BK	750	950		
Kyocera TK-310	Kyocera FS 2000;Kyocera FS 3900DN;Kyocera FS 4000	BK	1250	1450		
Kyocera TK-320	Kyocera FS 3900;Kyocera FS 4000	BK	1550	1650		
Kyocera TK-330	Kyocera FS 4000	BK	1200	1350		
Kyocera TK-340	Kyocera FS 2020D;Kyocera FS 2020DN	BK	1200	1350		
Kyocera TK-410	Kyocera KM 1620;Kyocera KM 1635;Kyocera KM 1650;Kyocera KM 2020;Kyocera KM 2050;Kyocera KM 2550	BK	1590	1740		
Kyocera TK-420	Kyocera KM 1620;Kyocera KM 1635;Kyocera KM 1650;Kyocera KM 2020;Kyocera KM 2050;Kyocera KM 2550	BK	1590	1740		
Kyocera TK-435	Kyocera TASKalfa 180;Kyocera TASKalfa 181;Kyocera TASKalfa 220;Kyocera TASKalfa 221	BK	2050	2300		
Kyocera TK-540K	Kyocera FS C5100DN	BK	2100	2200		
Kyocera TK-540C	Kyocera FS C5100DN	C	2100	2200		
Kyocera TK-540M	Kyocera FS C5100DN	M	2100	2200		
Kyocera TK-540Y	Kyocera FS C5100DN	Y	2100	2200		
Kyocera TK-710	Kyocera FS 9100;KyoceraFS 9120;Kyocera FS 9500;Kyocera FS 9520DN;Kyocera FS 9530DN	BK	2900	3100		
Kyocera TK-715	Kyocera KM 3050;Kyocera FS 4050;Kyocera FS 5050	BK	2600	2750		
Kyocera DK-110	Kyocera FS-1016MFP;Kyocera FS-1116MFP;Kyocera FS-720;Kyocera FS-820;Kyocera FS-820N;Kyocera FS-920;Kyocera FS-920N	BK				2100
Kyocera TK-350	Kyocera FS-3040MFP;Kyocera FS-3140MFP;Kyocera FS-3540MFP;Kyocera FS-3640MFP;Kyocera FS-3920DN	BK	1280	1490		
Kyocera TK-360	Kyocera FS-4020DN	BK	1800	1900		
Kyocera TK-400	Kyocera FS-6020	BK	1150			
Kyocera TK-440	Kyocera FS-6950DN	BK	1350	1550		
Kyocera TK-603	Kyocera KM 4530;Kyocera KM 5530;Kyocera KM 6330;Kyocera KM 7530	BK				
Kyocera TK-665	Kyocera KM 6030;8030	BK				
Kyocera TK-675	Kyocera KM 2560	BK	1850	2050		
Kyocera TK-160	Kyocera ECOSYS P2035d;Kyocera FS-1120D;Kyocera FS-1120DN	BK	780	950		
Kyocera TK-170	Kyocera FS 1320D;Kyocera FS-1370DN;Kyocera ECOSYS P2135d;Kyocera ECOSYS P2135dn	BK	1100	1250		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Kyocera TK-450	Kyocera FS 6970DN	BK	1550	1700		
Kyocera TK-110E	Kyocera FS 720;Kyocera FS 820;Kyocera FS 920;Kyocera FS 1016MFP;Kyocera FS 1116MFP	BK	700	900		
Kyocera TK-520K	Kyocera FS C5015N	BK	2100	2200		
Kyocera TK-520C	Kyocera FS C5015N	C	2100	2200		
Kyocera TK-520M	Kyocera FS C5015N	M	2100	2200		
Kyocera TK-520Y	Kyocera FS C5015N	Y	2100	2200		
Kyocera TK-510K	Kyocera FS C5020N;Kyocera FS C5025N;Kyocera FS C5030N	BK	2650	2900		
Kyocera TK-510C	Kyocera FS C5020N;Kyocera FS C5025N;Kyocera FS C5030N	C	2650	2900		
Kyocera TK-510M	Kyocera FS C5020N;Kyocera FS C5025N;Kyocera FS C5030N	M	2650	2900		
Kyocera TK-510Y	Kyocera FS C5020N;Kyocera FS C5025N;Kyocera FS C5030N	Y	2650	2990		
Kyocera TK-580K	Kyocera FS C5150DN;Kyocera ECOSYS P6021cdn	BK	1790	1890		
Kyocera TK-580C	Kyocera FS C5150DN;Kyocera ECOSYS P6021cdn	C	1790	1890		
Kyocera TK-580M	Kyocera FS C5150DN;Kyocera ECOSYS P6021cdn	M	1790	1890		
Kyocera TK-580Y	Kyocera FS C5150DN;Kyocera ECOSYS P6021cdn	Y	1790	1890		
Kyocera TK-550K	Kyocera FS C5200DN	BK	2750	2700		
Kyocera TK-550C	Kyocera FS C5200DN	C	2750	2700		
Kyocera TK-550M	Kyocera FS C5200DN	M	2750	2700		
Kyocera TK-550Y	Kyocera FS C5200DN	Y	2750	2700		
Kyocera TK-560K	Kyocera FS C5300DN;Kyocera FS C5350DN;Kyocera ECOSYS P6030cdn;Kyocera ECOSYS P7035cdn	BK	3750	3900		
Kyocera TK-560C	Kyocera FS C5300DN;Kyocera FS C5350DN;Kyocera ECOSYS P6030cdn;Kyocera ECOSYS P7035cdn	C	3750	3900		
Kyocera TK-560M	Kyocera FS C5300DN;Kyocera FS C5350DN;Kyocera ECOSYS P6030cdn;Kyocera ECOSYS P7035cdn	M	3750	3900		
Kyocera TK-560Y	Kyocera FS C5300DN;Kyocera FS C5350DN;Kyocera ECOSYS P6030cdn;Kyocera ECOSYS P7035cdn	Y	3750	3900		
Kyocera TK-570K	Kyocera FS C5400DN	BK	4050	4250		
Kyocera TK-570C	Kyocera FS C5400DN	C	4050	4250		
Kyocera TK-570M	Kyocera FS C5400DN	M	4050	4250		
Kyocera TK-570Y	Kyocera FS C5400DN	Y	4050	4250		
Kyocera TK-1100	Kyocera FS 1024MFP;Kyocera FS 1124MFP;Kyocera FS 1110	BK	900	1150		
Kyocera TK-1130	Kyocera FS 1030MFP;Kyocera FS 1130MFP;Kyocera ECOSYS M2030dn;Kyocera ECOSYS M2530dn	BK	880	1000		
Kyocera TK-1140	Kyocera FS 1035MFP/DP;Kyocera FS 1135MFP;Kyocera ECOSYS M2035dn;Kyocera ECOSYS M2535dn	BK	1090	1290		
Kyocera TK-475	Kyocera FS 6025MFP;Kyocera FS 6030MFP;Kyocera FS 6530MFP;Kyocera FS 6525MFP	BK	2050	2300		
Kyocera TK-150K	Kyocera FS C1020MFP	BK	2750	2900		
Kyocera TK-150C	Kyocera FS C1020MFP	C	2750	2900		
Kyocera TK-150M	Kyocera FS C1020MFP	M	2750	2900		
Kyocera TK-150Y	Kyocera FS C1020MFP	Y	2750	2900		
Kyocera TK-590K	Kyocera FS C2026MFP;Kyocera FS C2126MFP;Kyocera FS C2526MFP;Kyocera FS C2626MFP;Kyocera FS C5250DN;Kyocera ECOSYS M6026cdn;Kyocera ECOSYS P6026cdn;Kyocera ECOSYS M6526cidn	BK	2350	2450		
Kyocera TK-590C	Kyocera FS C2026MFP;Kyocera FS C2126MFP;Kyocera FS C2526MFP;Kyocera FS C2626MFP;Kyocera FS C5250DN;Kyocera ECOSYS M6026cdn;Kyocera ECOSYS P6026cdn;Kyocera ECOSYS M6526cidn	C	2350	2450		
Kyocera TK-590M	Kyocera FS C2026MFP;Kyocera FS C2126MFP;Kyocera FS C2526MFP;Kyocera FS C2626MFP;Kyocera FS C5250DN;Kyocera ECOSYS M6026cdn;Kyocera ECOSYS P6026cdn;Kyocera ECOSYS M6526cidn	M	2350	2450		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Kyocera TK-590Y	Kyocera FS C2026MFP;Kyocera FS C2126MFP;Kyocera FS C2526MFP;Kyocera FS C2626MFP;Kyocera FS C5250DN;Kyocera ECOSYS M6026cdn;Kyocera ECOSYS P6026cdn;Kyocera ECOSYS M6526cidn	Y	2350	2450		
Kyocera TK-1120	Kyocera FS-1025MFP;Kyocera FS-1125MFP;Kyocera FS-1060DN	BK	680	800		
Kyocera TK-3130	Kyocera FS-4200DN;Kyocera FS-4300DN;Kyocera FS-M3550idn;Kyocera FS-M3560idn	BK	2400	2550		
Kyocera TK-3110	Kyocera FS-4100DN	BK	2250	2450		
Kyocera TK-1110	Kyocera FS-1020 MFP;Kyocera FS-1040;Kyocera FS-1024 MFP;Kyocera FS-1120 MFP;Kyocera FS-1124 MFP	BK	580	730		
Kyocera DK-130	Kyocera FS-1100;Kyocera FS-1100N;Kyocera FS-1300D;Kyocera FS-1300DN	BK				2200
Kyocera DK-150	Kyocera FS-1128MFP;Kyocera 1130MFP;Kyocera 1120D;Kyocera 1350DN	BK				2200
Kyocera DK-170	Kyocera FS-1035MFP;Kyocera FS-1135MFP;Kyocera FS-1320D;Kyocera 1370DN	BK				2200
Kyocera TK-825K	Kyocera KM C2520;Kyocera KM C2525E;Kyocera KM C3225;Kyocera KM C3232;Kyocera KM C3232E;Kyocera KM C4035E	BK	3200	3400		
Kyocera TK-825C	Kyocera KM C2520;Kyocera KM C2525E;Kyocera KM C3225;Kyocera KM C3232;Kyocera KM C3232E;Kyocera KM C4035E	C	3100	3300		
Kyocera TK-865M	Kyocera KM C2520;Kyocera KM C2525E;Kyocera KM C3225;Kyocera KM C3232;Kyocera KM C3232E;Kyocera KM C4035E	M	3100	3300		
Kyocera TK-865Y	Kyocera KM C2520;Kyocera KM C2525E;Kyocera KM C3225;Kyocera KM C3232;Kyocera KM C3232E;Kyocera KM C4035E	Y	3100	3300		
Kyocera TK-865K	Kyocera TASKalfa 250ci;Kyocera TASKalfa 300ci	BK	4300	4650		
Kyocera TK-865C	Kyocera TASKalfa 250ci;Kyocera TASKalfa 300ci	C	4300	4650		
Kyocera TK-865M	Kyocera TASKalfa 250ci;Kyocera TASKalfa 300ci	M	4300	4650		
Kyocera TK-865Y	Kyocera TASKalfa 250ci;Kyocera TASKalfa 300ci	Y	4300	4650		
Kyocera TK-805C	Kyocera KM C850;Kyocera KM C850D	C				
Kyocera TK-805M	Kyocera KM C850;Kyocera KM C850D	M				
Kyocera TK-805Y	Kyocera KM C850;Kyocera KM C850D	Y				
Kyocera TK-805K	Kyocera KM C850;Kyocera KM C850D	BK				
Kyocera TK-810K	Kyocera FS-C8026N	BK				
Kyocera TK-810C	Kyocera FS-C8026N	C				
Kyocera TK-810M	Kyocera FS-C8026N	M				
Kyocera TK-810Y	Kyocera FS-C8026N	Y				
Kyocera TK-820K	Kyocera FS-C8100DN	BK	3200	3400		
Kyocera TK-820C	Kyocera FS-C8100DN	C	3100	3300		
Kyocera TK-820M	Kyocera FS-C8100DN	M	3100	3300		
Kyocera TK-820Y	Kyocera FS-C8100DN	Y	3100	3300		
Kyocera TK-855K	Kyocera TASKalfa 400ci;Kyocera TASKalfa 500ci;Kyocera TASKalfa 552ci	BK	4400	4850		
Kyocera TK-855C	Kyocera TASKalfa 400ci;Kyocera TASKalfa 500ci;Kyocera TASKalfa 552ci	C	5400	5850		
Kyocera TK-855M	Kyocera TASKalfa 400ci;Kyocera TASKalfa 500ci;Kyocera TASKalfa 552ci	M	5400	5850		
Kyocera TK-855Y	Kyocera TASKalfa 400ci;Kyocera TASKalfa 500ci;Kyocera TASKalfa 552ci	Y	5400	5850		
Kyocera TK-880K	Kyocera FS-C8500DN	BK	4400	4850		
Kyocera TK-880C	Kyocera FS-C8500DN	C	4400	4850		
Kyocera TK-880M	Kyocera FS-C8500DN	M	4400	4850		
Kyocera TK-880Y	Kyocera FS-C8500DN	Y	4400	4850		
Kyocera TK-895K	Kyocera FS-C8020MFP;Kyocera FS-C8025MFP;Kyocera FS-C8520MFP;Kyocera FS-C8525MFP	BK	2750	2800		
Kyocera TK-895C	Kyocera FS-C8020MFP;Kyocera FS-C8025MFP;Kyocera FS-C8520MFP;Kyocera FS-C8525MFP	C	2750	2800		
Kyocera TK-895M	Kyocera FS-C8020MFP;Kyocera FS-C8025MFP;Kyocera FS-C8520MFP;Kyocera FS-C8525MFP	M	2750	2800		
Kyocera TK-895Y	Kyocera FS-C8020MFP;Kyocera FS-C8025MFP;Kyocera FS-C8520MFP;Kyocera FS-C8525MFP	Y	2750	2800		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Kyocera TK-8305 Bk	Kyocera TASKalfa 3050ci;Kyocera TASKalfa 3051ci;Kyocera TASKalfa 3550ci;Kyocera TASKalfa 3551ci	BK	4400	4500		
Kyocera TK-8305 C	Kyocera TASKalfa 3050ci;Kyocera TASKalfa 3051ci;Kyocera TASKalfa 3550ci;Kyocera TASKalfa 3551ci	C	5050	5200		
Kyocera TK-8305 M	Kyocera TASKalfa 3050ci;Kyocera TASKalfa 3051ci;Kyocera TASKalfa 3550ci;Kyocera TASKalfa 3551ci	M	5050	5200		
Kyocera TK-8305 Y	Kyocera TASKalfa 3050ci;Kyocera TASKalfa 3051ci;Kyocera TASKalfa 3550ci;Kyocera TASKalfa 3551ci	Y	5050	5200		
Kyocera TK-3100	Kyocera FS-2100D;Kyocera FS-2100DN ;Kyocera ECOSYS M3040dn;Kyocera ECOSYS M3540dn	BK	1450	1650		
Kyocera TK-7205	Kyocera TASKalfa 3510i	BK	2750	2900		
Kyocera TK-6305	Kyocera TASKalfa 3500i;Kyocera TASKalfa 3501i;Kyocera TASKalfa 4500i;Kyocera TASKalfa 4501i;Kyocera TASKalfa 5500i;Kyocera TASKalfa 5501i	BK	3900	4000		
Kyocera TK-4105	Kyocera TASKalfa 1800;Kyocera TASKalfa 2200;Kyocera TASKalfa 2201	BK	1650			
Kyocera TK-8315 Bk	Kyocera TASKalfa 2550ci;Kyocera TASKalfa 2551ci	BK	2550	2650		
Kyocera TK-8315 C	Kyocera TASKalfa 2550ci;Kyocera TASKalfa 2551ci	C	2550	2650		
Kyocera TK-8315 M	Kyocera TASKalfa 2550ci;Kyocera TASKalfa 2551ci	M	2550	2650		
Kyocera TK-8315 Y	Kyocera TASKalfa 2550ci;Kyocera TASKalfa 2551ci	Y	2550	2650		
Kyocera TK-725	Kyocera TASKalfa 420i;Kyocera TASKalfa 520i	BK	2600	2750		
Kyocera TK-685	Kyocera TASKalfa 300i	BK	1800	2000		
Kyocera TK-8505 Bk	Kyocera TASKalfa 4550ci;Kyocera TASKalfa 4551ci;Kyocera TASKalfa 5550ci;Kyocera TASKalfa 5551ci	BK	5150	5300		
Kyocera TK-8505 C	Kyocera TASKalfa 4550ci;Kyocera TASKalfa 4551ci;Kyocera TASKalfa 5550ci;Kyocera TASKalfa 5551ci	C	5700	6150		
Kyocera TK-8505 M	Kyocera TASKalfa 4550ci;Kyocera TASKalfa 4551ci;Kyocera TASKalfa 5550ci;Kyocera TASKalfa 5551ci	M	5700	6150		
Kyocera TK-8505 Y	Kyocera TASKalfa 4550ci;Kyocera TASKalfa 4551ci;Kyocera TASKalfa 5550ci;Kyocera TASKalfa 5551ci	Y	5700	6150		
Kyocera TK-500 Bk	Kyocera FS-C5016N	BK	3300	3750		
Kyocera TK-500 C	Kyocera FS-C5016N	C	3300	3750		
Kyocera TK-500 M	Kyocera FS-C5016N	M	3300	3750		
Kyocera TK-500 Y	Kyocera FS-C5016N	Y	3300	3750		
Kyocera TK-875 Bk	Kyocera TASKalfa 550c;Kyocera TASKalfa 650c;Kyocera TASKalfa 750c	BK				
Kyocera TK-875 C	Kyocera TASKalfa 550c;Kyocera TASKalfa 650c;Kyocera TASKalfa 750c	C				
Kyocera TK-875 M	Kyocera TASKalfa 550c;Kyocera TASKalfa 650c;Kyocera TASKalfa 750c	M				
Kyocera TK-875 Y	Kyocera TASKalfa 550c;Kyocera TASKalfa 650c;Kyocera TASKalfa 750c	Y				
Kyocera TK-3150	Kyocera ECOSYS M3040idn;Kyocera ECOSYS M3540idn	BK	1550	1800		
Kyocera TK-6705	Kyocera TASKalfa 6500;Kyocera TASKalfa 6501;Kyocera TASKalfa 8000;Kyocera TASKalfa 8001	BK		3400		
Kyocera TK-7105	Kyocera TASKalfa-3010	BK		2550		
Lexmark 13T0101	Lexmark E310;Lexmark 312;Lexmark 312L	BK	600	1150		
Lexmark 13T0301	Lexmark E310;Lexmark 312;Lexmark 312L	BK	500	900		
Lexmark 08A0476	Lexmark E320;Lexmark 322	BK	1300	1450		
Lexmark 12036SE	Lexmark E120;Lexmark 120n	BK	500	550		
Lexmark 12016SE	Lexmark E120;Lexmark 120n	BK	500	550		
Lexmark E450H11E	Lexmark E450	BK	1650	2000		
Lexmark E450A11E	Lexmark E450	BK	900	1200		
Lexmark 12S0300	Lexmark E220;Lexmark 321;Lexmark 323;Lexmark 323n	BK	550	650		
Lexmark 12S0400	Lexmark E220;Lexmark 321;Lexmark 323;Lexmark 323n	BK	550	650		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Lexmark 12A8400	Lexmark E230;Lexmark E232;Lexmark E330;Lexmark E332	BK	650	750		
Lexmark 12A7310	Lexmark T420d;Lexmark T420dn	BK	500	700		
Lexmark 12A7410	Lexmark T420d;Lexmark T420dn	BK	500	700		
Lexmark 12A7315	Lexmark T420d;Lexmark T420dn	BK	700	1000		
Lexmark 12A7415	Lexmark T420d;Lexmark T420dn	BK	700	1000		
Lexmark 12A8320	Lexmark T430d;Lexmark T430dn	BK	700	1050		
Lexmark 12A8420	Lexmark T430d;Lexmark T430dn	BK	700	1050		
Lexmark 12A8325	Lexmark T430d;Lexmark T430dn	BK	1000	1350		
Lexmark 12A8425	Lexmark T430d;Lexmark T430dn	BK	1000	1350		
Lexmark 69G8256	Lexmark E;Lexmark EP;Lexmark E+	BK	500	800		
Lexmark 12A6730	Lexmark T520;Lexmark T522	BK	700	950		
Lexmark 12A6830	Lexmark T520;Lexmark T522	BK	700	950		
Lexmark 12A7362	Lexmark T630;Lexmark T632;Lexmark T634	BK	1150	1350		
Lexmark 12A7462	Lexmark T630;Lexmark T632;Lexmark T634	BK	1150	1350		
Lexmark 12A7465	Lexmark T630;Lexmark T632;Lexmark T634	BK	1150	1350		
Lexmark 12A7468	Lexmark T630;Lexmark T632;Lexmark T634	BK	1150	1350		
Lexmark 127469	Lexmark T630;Lexmark T632;Lexmark T634	BK	1150	1350		
Lexmark 12A7460	Lexmark T630;Lexmark T632;Lexmark T634	BK	700	950		
Lexmark 12A6760	Lexmark T620;Lexmark T622	BK	1150	1250		
Lexmark 12A6860	Lexmark T620;Lexmark T622	BK	1150	1250		
Lexmark 12A6765	Lexmark T620;Lexmark T622	BK	1150	1250		
Lexmark 12A6865	Lexmark T620;Lexmark T622	BK	1150	1250		
Lexmark 12A6869	Lexmark T620;Lexmark T622	BK	1150	1250		
Lexmark 12A6865	Lexmark T620;Lexmark T622	BK	2700	2800		
Lexmark 1382620	Lexmark Optra-S;Lexmark Optra-S1250;Lexmark Optra-S1255;Lexmark Optra-S1650;Lexmark Optra-S1855;Lexmark Optra-S2455	BK	1450			
Lexmark LX-1382620	Lexmark Optra-S;Lexmark Optra-S1250;Lexmark Optra-S1255;Lexmark Optra-S1650;Lexmark Optra-S1855;Lexmark Optra-S2455	BK	1450			
Lexmark C930H2CG	Lexmark LaserPrinter C935	C	3100			
Lexmark C930H2KG	Lexmark LaserPrinter C936	BK	3350			
Lexmark C930H2MG	Lexmark LaserPrinter C937	M	3100			
Lexmark C930H2YG	Lexmark LaserPrinter C938	Y	3100			
Lexmark 10S0150	Lexmark Optra E210	BK	500	800		
Lexmark 12A8300	Lexmark LaserPrinter-E230;Lexmark LaserPrinter-E232;Lexmark LaserPrinter-E330;Lexmark LaserPrinter-E332	BK	500	600		
Lexmark 12A8400	Lexmark LaserPrinter-E230;Lexmark LaserPrinter-E232;Lexmark LaserPrinter-E330;Lexmark LaserPrinter-E332	BK	500	600		
Lexmark 0E250A21E	Lexmark LaserPrinter-E250;Lexmark LaserPrinter-E350;Lexmark LaserPrinter-E352;Lexmark LaserPrinter-E450	BK	900	1100		
Lexmark E260A21E	Lexmark LaserPrinter-E260;Lexmark LaserPrinter-E360;Lexmark LaserPrinter-E460	BK	700	1800		
Lexmark 12A5740	Lexmark LaserPrinter-T610;Lexmark LaserPrinter-T612;Lexmark LaserPrinter-T614;Lexmark LaserPrinter-T616	BK	1000			
Lexmark 12A5745	Lexmark LaserPrinter-T610;Lexmark T612;Lexmark T614;Lexmark T616	BK	1000			
Lexmark 20K0503	Lexmark LaserPrinter-C510	BK	2350	3900		
Lexmark 20K0500	Lexmark LaserPrinter-C510	C	2350	3900		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Lexmark 20K0501	Lexmark LaserPrinter-C510	M	2350	3900		
Lexmark 20K0502	Lexmark LaserPrinter-C510	Y	2350	3900		
Lexmark 10E0043	Lexmark LaserPrinter-C710	BK	3400			
Lexmark 10E0040	Lexmark LaserPrinter-C710	C	3400			
Lexmark 10E0041	Lexmark LaserPrinter-C710	M	3400			
Lexmark 10E0042	Lexmark LaserPrinter-C710	Y	3400			
Lexmark 15W0903	Lexmark LaserPrinter-C720;Lexmark LaserPrinter-X720	BK	3400			
Lexmark 15W0900	Lexmark LaserPrinter-C720;Lexmark LaserPrinter-X720	C	3400			
Lexmark 15W0901	Lexmark LaserPrinter-C720;Lexmark LaserPrinter-X720	M	3400			
Lexmark 15W0902	Lexmark LaserPrinter-C720;Lexmark LaserPrinter-X720	Y	3400			
Lexmark 08A0475	Lexmark E320;Lexmark E322;Lexmark E322n	BK	500	600		
Lexmark 08A0476	Lexmark E320;Lexmark E322;Lexmark E322n	BK	500	600		
Lexmark 08A0477	Lexmark E320;Lexmark E322;Lexmark E322n	BK	650	750		
Lexmark 12A7305	Lexmark E321;Lexmark E323;Lexmark E323n	BK	650			
Lexmark 1382100	Lexmark Optra L;Lexmark Optra L+;Lexmark Optra LX+;Lexmark Optra R;Lexmark Optra R+;Lexmark Optra 4049;Lexmark Optra 4039 model 10 Plus	BK	700			
Lexmark 1382150	Lexmark Optra L;Lexmark Optra L+;Lexmark Optra LX+;Lexmark Optra R;Lexmark Optra R+;Lexmark Optra 4049;Lexmark Optra 4039 model 10 Plus	BK	1000			
Lexmark 17G0152	Lexmark Optra M410;Lexmark Optra M412	BK	700			
Lexmark 17G0154	Lexmark Optra M410;Lexmark Optra M412	BK	1000			
Lexmark 17G0152	Lexmark Optra M410;Lexmark Optra M412	BK				
Lexmark 17G0154	Lexmark Optra M410;Lexmark Optra M412	BK				
Lexmark 1382920	Lexmark Optra S;Lexmark Optra S2450;Lexmark Optra S1855;Lexmark Optra S1650;Lexmark Optra S1625;Lexmark Optra S1620;Lexmark Optra S1255;Lexmark Optra S1250	BK	650			
Lexmark 1382925	Lexmark Optra S;Lexmark Optra S2450;Lexmark Optra S1855;Lexmark Optra S1650;Lexmark Optra S1625;Lexmark Optra S1620;Lexmark Optra S1255;Lexmark Optra S1250	BK	1000			
Lexmark 12A6735	Lexmark X520;Lexmark X522;Lexmark T520;Lexmark T522	BK	1100	1200		
Lexmark 12A6835	Lexmark X520;Lexmark X522;Lexmark T520;Lexmark T522	BK	1100	1200		
Lexmark 12A6839	Lexmark X520;Lexmark X522;Lexmark T520;Lexmark T522	BK	1100	1200		
Lexmark 640365E	Lexmark Optra T640;Lexmark Optra 642;Lexmark Optra 644	BK	700	800		
Lexmark 64036HE	Lexmark Optra T640;Lexmark Optra 642;Lexmark Optra 644	BK	1000	1100		
Lexmark 08A0478	Lexmark E320;Lexmark E322	BK	1450	1550		
Lexmark 12A7360	Lexmark T630;Lexmark T632;Lexmark T634;Lexmark X630;Lexmark X632;Lexmark X634	BK	1650	1850		
Lexmark 12A7365	Lexmark T630;Lexmark T632;Lexmark T634;Lexmark X630;Lexmark X632;Lexmark X634	BK				
Lexmark 12A7462	Lexmark T630;Lexmark T632;Lexmark T634;Lexmark X630;Lexmark X632;Lexmark X634	BK				
Lexmark 12A7465	Lexmark T630;Lexmark T632;Lexmark T634;Lexmark X630;Lexmark X632;Lexmark X634	BK				
Lexmark 12A7468	Lexmark T630;Lexmark T632;Lexmark T634;Lexmark X630;Lexmark X632;Lexmark X634	BK				
Lexmark 24016SE	Lexmark E230;Lexmark E232;Lexmark E234;Lexmark E240;Lexmark E330;Lexmark E332;Lexmark E340;Lexmark E342	BK	550	700		
Lexmark 24036SE	Lexmark E230;Lexmark E232;Lexmark E234;Lexmark E240;Lexmark E330;Lexmark E332;Lexmark E340;Lexmark E342	BK	550	700		
Lexmark E250A11E	Lexmark E250;Lexmark E350;Lexmark E352	BK				
Lexmark E250X22G	Lexmark E250;Lexmark E350;Lexmark E352	Drum				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Lexmark E360H11E	Lexmark E360;Lexmark E460;Lexmark E462	BK	1850			
Lexmark E360H21E	Lexmark E360;Lexmark E460;Lexmark E462	BK	1850			
Lexmark E460X11E	Lexmark E460	BK				
Lexmark E460X21E	Lexmark E460	BK				
Lexmark X264A11G	Lexmark X264;Lexmark X363;Lexmark X364	BK	650	800		
Lexmark X264A21G	Lexmark X264;Lexmark X363;Lexmark X364	BK	650	800		
Lexmark X264H11G	Lexmark X264;Lexmark X363;Lexmark X364	BK	2450	2800		
Lexmark X264H21G	Lexmark X264;Lexmark X363;Lexmark X364	BK	2450	2800		
Lexmark 12A7300	Lexmark E321;Lexmark E323	BK	550	700		
Lexmark 12A7305	Lexmark E321;Lexmark E323	BK	700	900		
Lexmark 12A7400	Lexmark E321;Lexmark E323	BK	550	700		
Lexmark 12A7405	Lexmark E321;Lexmark E323	BK	1550	1700		
Lexmark 60F0HA0	Lexmark MX310dn;Lexmark MX410de;Lexmark MX510de;Lexmark MX511de;Lexmark MX611de	BK	1750	3950		
Lexmark 60F5H00	Lexmark MX310dn;Lexmark MX410de;Lexmark MX510de;Lexmark MX511de;Lexmark MX611de	BK	1750	3950		
Lexmark 60F5000	Lexmark MX310dn;Lexmark MX410de;Lexmark MX510de;Lexmark MX511de;Lexmark MX611de	BK	750	2100		
Lexmark X340A11G	Lexmark X340;Lexmark X342N	BK	800	1250		
Lexmark X340A21G	Lexmark X340;Lexmark X342N	BK	800	1250		
Lexmark X340H11G	Lexmark X342N	BK	2050	2450		
Lexmark X340H21G	Lexmark X342N	BK	2050	2450		
Lexmark X644A11E	Lexmark X642e;Lexmark X644e;Lexmark X646	BK	1000			
Lexmark X644A21E	Lexmark X642e;Lexmark X644e;Lexmark X646	BK	1000			
Lexmark X644H11E	Lexmark X642e;Lexmark X644e;Lexmark X646	BK	1650			
Lexmark X644H21E	Lexmark X642e;Lexmark X644e;Lexmark X646	BK	1650			
Lexmark 50F0UA0	Lexmark MS510;Lexmark MS610	BK	1700	4350		
Lexmark 50F5U00	Lexmark MS510;Lexmark MS610	BK	1700	4350		
Lexmark 52D5H00	Lexmark MS812	BK	1850	4500		
Lexmark 62D5H00	Lexmark MX710;Lexmark MX711;Lexmark MX810;Lexmark MX811;Lexmark MX812	BK	1850	4400		
Lexmark T650H04E	Lexmark T650;Lexmark T652;Lexmark T654;Lexmark T656	BK	1650	3650		
Lexmark T650H11E	Lexmark T650;Lexmark T652;Lexmark T654;Lexmark T656	BK	1650	3650		
Lexmark T650H21E	Lexmark T650;Lexmark T652;Lexmark T654;Lexmark T656	BK	1650	3650		
Lexmark T650A11E	Lexmark T650;Lexmark T652;Lexmark T654;Lexmark T656	BK	900	1750		
Lexmark T650A21E	Lexmark T650;Lexmark T652;Lexmark T654;Lexmark T656	BK	900	1750		
Lexmark 12A3710	Lexmark X422	BK	900	1850		
Lexmark 12A4710	Lexmark X422	BK	900	1850		
Lexmark 12A3715	Lexmark X422	BK	1200	2200		
Lexmark 12A4715	Lexmark X422	BK	1200	2200		
Lexmark 50F5H00	Lexmark MS310;Lexmark MS410;Lexmark MS510;Lexmark MS610	BK	650	2100		
Lexmark E260X22G	Lexmark E260;Lexmark E360;Lexmark E460;Lexmark E462;Lexmark X264;Lexmark X363;Lexmark X364;Lexmark X463;Lexmark X464;Lexmark X466	Drum				1400
Lexmark 1 (LX -18CX781E)	Lexmark X2310;Lexmark X2350;Lexmark X2470;Lexmark Z730;Lexmark Z735;Lexmark Z740	Color	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Lexmark 4A (LX -18C1954)	Lexmark X2690;Lexmark X3690;Lexmark X4690;Lexmark Z2390;Lexmark Z2490	БК	200			
Lexmark 4 (LX -18C1974)	Lexmark X2690;Lexmark X3690;Lexmark X4690;Lexmark Z2390;Lexmark Z2490	БК	200			
Lexmark 5A (LX -18C1970)	Lexmark X2690;Lexmark X3690;Lexmark X4690;Lexmark Z2390;Lexmark Z2491	Color	250			
Lexmark 5 (LX -18C1960)	Lexmark X2690;Lexmark X3690;Lexmark X4690;Lexmark Z2390;Lexmark Z2491	Color	250			
Lexmark 14A (LX -18C2080)	Lexmark-X2600;Lexmark X2650;Lexmark X2670;Lexmark Z2300;Lexmark Z2320	БК	200			
Lexmark 14 (LX -18C2090)	Lexmark-X2600;Lexmark X2650;Lexmark X2670;Lexmark Z2300;Lexmark Z2320	БК	200			
Lexmark 15A (LX -18C2100)	Lexmark-X2600;Lexmark X2650;Lexmark X2670;Lexmark Z2300;Lexmark Z2321	Color	250			
Lexmark 15 (LX -18C2110)	Lexmark-X2600;Lexmark X2650;Lexmark X2670;Lexmark Z2300;Lexmark Z2321	Color	250			
Lexmark 16 (LX-10N0016)	Lexmark Color JetPrinter-Z13;Lexmark Color JetPrinter-Z23;Lexmark Color JetPrinter-Z24;Lexmark Color JetPrinter-Z25;Lexmark Z33;Lexmark Color JetPrinter-Z34;Lexmark Color JetPrinter-Z35;Lexmark Compaq-IJ650;Lexmark-i3;Lexmark X1130;Lexmark X1150;Lexmark X1180;Lexmark X1185;Lexmark X1190;Lexmark X1270;Lexmark X1270;Lexmark X2250;Lexmark X72;Lexmark X74;Lexmark X75;Lexmark Z513;Lexmark Z515;Lexmark Z517;Lexmark Z601;Lexmark Z602;Lexmark Z605;Lexmark Z611;Lexmark Z612;Lexmark Z615;Lexmark Z617;Lexmark Z640;Lexmark Z645	БК	250			
Lexmark 19 (LX-15M2619)	Lexmark-F4270;Lexmark P3120;Lexmark P3150;Lexmark P706;Lexmark P707;Lexmark X4250;Lexmark X4270;Lexmark Z705;Lexmark Z715	Color	200			
Lexmark 20 (LX-15MX120E)	Lexmark Color JetPrinter-Z42;Lexmark Z43;Lexmark Z44;Lexmark Z45;Lexmark Z51;Lexmark Z52;Lexmark Z53;Lexmark Z54;Lexmark Compaq-1400P;Lexmark A1000;Lexmark A1500;Lexmark A3000;Lexmark A4000;Lexmark J1 200;Lexmark-F4270;Lexmark P3120;Lexmark P3150;Lexmark P706;Lexmark P707;Lexmark X125;Lexmark X4250;Lexmark X4270;Lexmark X63;Lexmark X70;Lexmark X73;Lexmark X80;Lexmark X83;Lexmark X84;Lexmark X85;Lexmark Z705;Lexmark Z715;Samsung-SCX 1000 Series;Samsung SF4700 Series	Color	250			
Lexmark 25 (LX-15M0125)	Lexmark Color JetPrinter-Z42;Lexmark Z43;Lexmark Z44;Lexmark Z45;Lexmark Z51;Lexmark Z52;Lexmark Z53;Lexmark Z54;Lexmark Compaq-1400P;Lexmark A1000;Lexmark A1500;Lexmark A3000;Lexmark A4000;Lexmark J1 200;Lexmark-F4270;Lexmark P3120;Lexmark P3150;Lexmark P706;Lexmark P707;Lexmark X125;Lexmark X4250;Lexmark X4270;Lexmark X63;Lexmark X70;Lexmark X73;Lexmark X80;Lexmark X83;Lexmark X84;Lexmark X85;Lexmark Z705;Lexmark Z715;Samsung-SCX 1000 Series;Samsung SF4700 Series	Color	300			
Lexmark 23A (LX -18C1623E)	Lexmark-X3530;Lexmark X3550;Lexmark X3580;Lexmark X4530;Lexmark X4550;Lexmark X4580;Lexmark Z1410;Lexmark Z1420	БК	200			
Lexmark 23 (LX -18C1523E)	Lexmark-X3530;Lexmark X3550;Lexmark X3580;Lexmark X4530;Lexmark X4550;Lexmark X4580;Lexmark Z1410;Lexmark Z1420	БК	200			
Lexmark 24A (LX -18C1624E)	Lexmark-X3530;Lexmark X3550;Lexmark X3580;Lexmark X4530;Lexmark X4550;Lexmark X4580;Lexmark Z1410;Lexmark Z1421	Color	250			
Lexmark 24 (LX -18C1524E)	Lexmark-X3530;Lexmark X3550;Lexmark X3580;Lexmark X4530;Lexmark X4550;Lexmark X4580;Lexmark Z1410;Lexmark Z1421	Color	250			
Lexmark 26 (LX-10N0026)	Lexmark Color JetPrinter-Z13;Lexmark Color JetPrinter-Z23;Lexmark Color JetPrinter-Z24;Lexmark Color JetPrinter-Z25;Lexmark Color JetPrinter-Z33;Lexmark Color JetPrinter-Z34;Lexmark Z35;Lexmark Compaq-IJ650;Lexmark-i3;Lexmark-X1130;Lexmark X1150;Lexmark X1180;Lexmark X1185;Lexmark X1190;Lexmark X1270;Lexmark X1250;Lexmark X2250;Lexmark X72;Lexmark X74;Lexmark X75;Lexmark Z513;Lexmark Z515;Lexmark Z517;Lexmark Z601;Lexmark Z602;Lexmark Z605;Lexmark Z611;Lexmark Z612;Lexmark Z615;Lexmark Z617;Lexmark Z640;Lexmark Z645	Color	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Lexmark 27 (LX-10N0227)	Lexmark Color JetPrinter-Z13;Lexmark Color JetPrinter-Z23;Lexmark Color JetPrinter-Z24;Lexmark Color JetPrinter-Z25;Lexmark Color JetPrinter-Z33;Lexmark Color JetPrinter-Z34;Lexmark Z35;Lexmark Compaq-llj650;Lexmark-i3;Lexmark-X1130;Lexmark X1150;Lexmark X1180;Lexmark X1185;Lexmark X1190;Lexmark X1270;Lexmark X1250;Lexmark X2250;Lexmark X72;Lexmark X74;Lexmark X75;Lexmark Z513;Lexmark Z515;Lexmark Z517;Lexmark Z601;Lexmark Z602;Lexmark Z605;Lexmark Z611;Lexmark Z612;Lexmark Z615;Lexmark Z617;Lexmark Z640;Lexmark Z645	Color	250			
Lexmark 28A (LX -18C1528E)	Lexmark-X2500;Lexmark X2530;Lexmark X2550;Lexmark X5070;Lexmark X5075;Lexmark X5490;Lexmark X5495;Lexmark X5495;Lexmark Z1300;Lexmark Z1310;Lexmark Z1320;Lexmark Z845	BK	250			
Lexmark 28 (LX -18C1428E)	Lexmark-X2500;Lexmark X2530;Lexmark X2550;Lexmark X5070;Lexmark X5075;Lexmark X5490;Lexmark X5495;Lexmark X5495;Lexmark Z1300;Lexmark Z1310;Lexmark Z1320;Lexmark Z845	BK	250			
Lexmark 29A (LX -18C1529E)	Lexmark-X2500;Lexmark X2530;Lexmark X2550;Lexmark X5070;Lexmark X5075;Lexmark X5490;Lexmark X5495;Lexmark X5495;Lexmark Z1300;Lexmark Z1310;Lexmark Z1320;Lexmark Z845	Color	250			
Lexmark 29 (LX -18C1429E)	Lexmark-X2500;Lexmark X2530;Lexmark X2550;Lexmark X5070;Lexmark X5075;Lexmark X5490;Lexmark X5495;Lexmark X5495;Lexmark Z1300;Lexmark Z1310;Lexmark Z1320;Lexmark Z845	Color	250			
Lexmark 31 (LX-18C0031)	Lexmark-P4350;Lexmark-P6250;Lexmark P6350;Lexmark P915;Lexmark X2500;Lexmark X2530;Lexmark X2550;Lexmark X2600;Lexmark X2650;Lexmark X2670;Lexmark X2690;Lexmark X3330;Lexmark X3350;Lexmark X3530;Lexmark X3550;Lexmark X3580;Lexmark X3650;Lexmark X3690;Lexmark X4530;Lexmark X4550;Lexmark X4580;Lexmark X4650;Lexmark X4690;Lexmark X5070;Lexmark X5075;Lexmark X5250;Lexmark X5270;Lexmark X5470;Lexmark X5490;Lexmark X5495;Lexmark X7170;Lexmark X7350;Lexmark X8350;Lexmark Z1300;Lexmark Z1310;Lexmark Z1320;Lexmark Z1410;Lexmark Z1420;Lexmark Z2300;Lexmark Z2320;Lexmark Z2390;Lexmark Z2420;Lexmark Z2490;Lexmark Z810;Lexmark Z812;Lexmark Z815;Lexmark Z816;Lexmark Z818;Lexmark Z845	BK	250			
Lexmark 32 (LX-18C0032)	Lexmark-P4350;Lexmark P6250;Lexmark P6350;P915;Lexmark X3330;Lexmark X3350;Lexmark X5250;Lexmark X5270;Lexmark X5470;Lexmark X7170;Lexmark X7350;Lexmark X8350;Lexmark Z810;Lexmark Z812;Lexmark Z815;Lexmark Z816;Lexmark Z818	BK	250			
Lexmark 33 (LX-18C0033)	Lexmark-P315;Lexmark P4350;Lexmark P450;Lexmark P6250;Lexmark P6350;Lexmark P915;Lexmark X3330;Lexmark X3350;Lexmark X5250;Lexmark X5270;Lexmark X5470;Lexmark X7170;Lexmark X7350;Lexmark X8350;Lexmark Z810;Lexmark Z812;Lexmark Z815;Lexmark Z816;Lexmark Z818	Color	250			
Lexmark 34 (LX-18C0034E)	Lexmark-P4350;Lexmark P6250;Lexmark P6350;Lexmark P915;Lexmark X2500;Lexmark X2530;Lexmark X2550;Lexmark X3330;Lexmark X3350;Lexmark X3530;Lexmark X3550;Lexmark X4530;Lexmark X4550;Lexmark X5070;Lexmark X5075;Lexmark X5250;Lexmark X5470;Lexmark X5490;Lexmark X5495;Lexmark X7170;Lexmark X7350;Lexmark X8350;Lexmark Z1300;Lexmark Z1310;Lexmark Z1320;Lexmark Z1410;Lexmark Z1420;Lexmark Z810;Lexmark Z812;Lexmark Z815;Lexmark Z816;Lexmark Z818;Lexmark Z845	BK	250			
Lexmark 35 (LX-18C0035E)	Lexmark-P4350;Lexmark P6250;Lexmark P6350;Lexmark P915;Lexmark X2500;Lexmark X2530;Lexmark X2550;Lexmark X3330;Lexmark X3350;Lexmark X3530;Lexmark X3550;Lexmark X4530;Lexmark X4550;Lexmark X5070;Lexmark X5075;Lexmark X5250;Lexmark X5470;Lexmark X5490;Lexmark X5495;Lexmark X7170;Lexmark X7350;Lexmark X8350;Lexmark Z1300;Lexmark Z1310;Lexmark Z1320;Lexmark Z1410;Lexmark Z1420;Lexmark Z810;Lexmark Z812;Lexmark Z815;Lexmark Z816;Lexmark Z818;Lexmark Z845	Color	300			
Lexmark 36A (LX-18C2150E)	Lexmark-X3650;Lexmark X4650;Lexmark X5650;Lexmark X6650;Lexmark X6675;Lexmark Z2420	BK	200			
Lexmark 36 (LX-18C2130E)	Lexmark-X3650;Lexmark X4650;Lexmark X5650;Lexmark X6650;Lexmark X6675;Lexmark Z2420	BK	200			
Lexmark 37A (LX-18C2160E)	Lexmark-X3650;Lexmark X4650;Lexmark X5650;Lexmark X6650;Lexmark X6675;Lexmark Z2420	Color	250			
Lexmark 37 (LX-18C2140E)	Lexmark-X3650;Lexmark X4650;Lexmark X5650;Lexmark X6650;Lexmark X6675;Lexmark Z2420	Color	250			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Lexmark 36XL (LX-18C2190E)	Lexmark-X3650;Lexmark X4650;Lexmark X5650;Lexmark X6650;Lexmark X6675;Lexmark Z2421	BK	250			
Lexmark 36XLA (LX-18C2190E)	Lexmark-X3650;Lexmark X4650;Lexmark X5650;Lexmark X6650;Lexmark X6675;Lexmark Z2421	BK	250			
Lexmark 37XLA (LX-18C2220E)	Lexmark-X3650;Lexmark X4650;Lexmark X5650;Lexmark X6650;Lexmark X6675;Lexmark Z2421	Color	250			
Lexmark 37XL (LX-18C2160E)	Lexmark-X3650;Lexmark X4650;Lexmark X5650;Lexmark X6650;Lexmark X6675;Lexmark Z2421	Color	250			
Lexmark 40 (LX-18Y0340E)	Lexmark-X4850;Lexmark X4875;Lexmark X6570;Lexmark X6575;Lexmark X9350;Lexmark X9575	Color	250			
Lexmark 41A (LX-18Y0341)	Lexmark-X4850;Lexmark X4875;Lexmark X6570;Lexmark X6575;Lexmark X9575	Color	250			
Lexmark 41 (LX-18Y0141)	Lexmark-X4850;Lexmark X4875;Lexmark X6570;Lexmark X6575;Lexmark X9575	Color	250			
Lexmark 42A (LX-18Y0342)	Lexmark-X4850;Lexmark X4875;Lexmark X6570;Lexmark X6575;Lexmark X9575	BK	200			
Lexmark 42 (LX-18Y0142)	Lexmark-X4850;Lexmark X4875;Lexmark X6570;Lexmark X6575;Lexmark X9575	BK	200			
Lexmark 43 (LX-18Y0143)	Lexmark-P350;Lexmark X4850;Lexmark X4875;Lexmark X6570;Lexmark X6575;Lexmark X9350;Lexmark X9575	Color	300			
Lexmark 48 (LX-17G0648)	Lexmark Color JetPrinter-Z12;Lexmark Z22;Lexmark Z32;Lexmark Compaq-IJ600;Lexmark Kodak-PM 200;Lexmark 215;Lexmark-P3120;Lexmark P3150;Lexmark P705;Lexmark P706;Lexmark P707;Lexmark Z703;Lexmark Z705;Lexmark Z706;Lexmark Z707;Lexmark Z715	BK	200			
Lexmark 50 (LX-17G0050)	Lexmark Color JetPrinter-Z12;Lexmark Z22;Lexmark Z32;Lexmark Compaq-IJ600;Lexmark Kodak-PM 200;Lexmark 215;Lexmark-P3120;Lexmark P3150;Lexmark P705;Lexmark P706;Lexmark P707;Lexmark Z703;Lexmark Z705;Lexmark Z706;Lexmark Z707;Lexmark Z716	BK	250			
Lexmark 55 (LX-17G0055)	Lexmark Color JetPrinter-Z12;Lexmark Z22;Lexmark Z32;Lexmark Compaq-IJ600;Lexmark Kodak-PM 200;Lexmark 215;Lexmark-P3120;Lexmark P3150;Lexmark P705;Lexmark P706;Lexmark P707;Lexmark Z703;Lexmark Z705;Lexmark Z706;Lexmark Z707;Lexmark Z717	BK	400			
Lexmark 60 (LX-17G0060)	Lexmark Color JetPrinter-Z12;Lexmark Z22;Lexmark Z32;Lexmark Color JetPrinter-Z12;Lexmark Z22;Lexmark Z32;Lexmark Compaq-IJ600	Color	250			
Lexmark 65 (LX-17G0065)	Lexmark Color JetPrinter-Z12;Lexmark Z22;Lexmark Z32;Lexmark Color JetPrinter-Z12;Lexmark Z22;Lexmark Z32;Lexmark Compaq-IJ601	Color	300			
Lexmark 70 (LX-12A1970E)	Lexmark Color JetPrinter-3200;Lexmark 5000;Lexmark 5700;Lexmark 5770;Lexmark 7000;Lexmark 7200;Lexmark Z11;Lexmark Z31;Lexmark Z42;Lexmark Z43;Lexmark Z44;Lexmark Z45;Lexmark Z51;Lexmark Z52;Lexmark Z53;Lexmark Z54;Lexmark Compaq-1400P;Lexmark A1000;Lexmark A1500;Lexmark A3000;Lexmark A4000;Lexmark A900;Lexmark C3-1000;Lexmark IJ300;Lexmark IJ700;Lexmark IJ750;Lexmark IJ900;Lexmark J1200;Lexmark-F4270;Lexmark X125;Lexmark X4250;Lexmark X4270;Lexmark X63;Lexmark X70;Lexmark X73;Lexmark X80;Lexmark X83;Lexmark X84;Lexmark X85;Lexmark Optra Color-40;Lexmark 45;Samsung-MJ4500c;Lexmark Msys 4700;Lexmark Msys 4800;Lexmark SCX 1000 Series;Lexmark SF3150;Lexmark SF4500 Series;Lexmark SF4700 Series;Lexmark SmartJet	BK	300			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Lexmark 71 (LX-15M3670E)	Lexmark Color JetPrinter-3200;Lexmark 5000;Lexmark 5700;Lexmark 5770;Lexmark 7000;Lexmark 7200;Lexmark Z11;Lexmark Z31;Lexmark Z42;Lexmark Z43;Lexmark Z44;Lexmark Z45;Lexmark Z51;Lexmark Z52;Lexmark Z53;Lexmark Z54;Lexmark Compaq-1400P;Lexmark A1000;Lexmark A1500;Lexmark A3000;Lexmark A4000;Lexmark A900;Lexmark C3-1000;Lexmark IJ300;Lexmark IJ700;Lexmark IJ750;Lexmark IJ900;Lexmark J1200;Lexmark-F4270;Lexmark X125;Lexmark X4250;Lexmark X4270;Lexmark X63;Lexmark X70;Lexmark X73;Lexmark X80;Lexmark X83;Lexmark X84;Lexmark X85;Lexmark Optra Color-40;Lexmark 45;Samsung-MJ4500c;Lexmark Msys 4700;Lexmark Msys 4800;Lexmark SCX 1000 Series;Lexmark SF3150;Lexmark SF4500 Series;Lexmark SF4700 Series;Lexmark SmartJet	BK	200			
Lexmark 75 (LX-12A1975)	Lexmark Color JetPrinter-3200;Lexmark 5000;Lexmark 5700;Lexmark 5770;Lexmark 7000;Lexmark 7200;Lexmark Z11;Lexmark Z31;Lexmark Z42;Lexmark Z43;Lexmark Z44;Lexmark Z45;Lexmark Z51;Lexmark Z52;Lexmark Z53;Lexmark Z54;Lexmark Compaq-1400P;Lexmark A1000;Lexmark A1500;Lexmark A3000;Lexmark A4000;Lexmark A900;Lexmark C3-1000;Lexmark IJ300;Lexmark IJ700;Lexmark IJ750;Lexmark IJ900;Lexmark J1200;Lexmark-F4270;Lexmark X125;Lexmark X4250;Lexmark X4270;Lexmark X63;Lexmark X70;Lexmark X73;Lexmark X80;Lexmark X83;Lexmark X84;Lexmark X85;Lexmark Optra Color-40;Lexmark 45;Samsung-MJ4500c;Lexmark Msys 4700;Lexmark Msys 4800;Lexmark SCX 1000 Series;Lexmark SF3150;Lexmark SF4500 Series;Lexmark SF4700 Series;Lexmark SmartJet	BK	400			
Lexmark 80 (LX-12A1980)	Lexmark Color JetPrinter-3200;Lexmark 5000;Lexmark 5700;Lexmark 5770;Lexmark 7000;Lexmark 7200;Lexmark Z11;Lexmark Z31;Lexmark Compaq-1400P;Lexmark A900;Lexmark C3-1000;Lexmark IJ300;Lexmark IJ700;Lexmark IJ750;Lexmark IJ900;Lexmark J1200;Lexmark Optra Color-40;Lexmark 45;Lexmark Samsung-MJ4500c;Lexmark Msys 4700;Lexmark Msys 4800;Lexmark SF4500 Series;Lexmark SmartJet	Color	250			
Lexmark 85 (LX-12A1985)	Lexmark Color JetPrinter-3200;Lexmark 5000;Lexmark 5700;Lexmark 5770;Lexmark 7000;Lexmark 7200;Lexmark Z11;Lexmark Z31;Lexmark Compaq-1400P;Lexmark A900;Lexmark C3-1000;Lexmark IJ300;Lexmark IJ700;Lexmark IJ750;Lexmark IJ900;Lexmark J1200;Lexmark Optra Color-40;Lexmark 45;Lexmark Samsung-MJ4500c;Lexmark Msys 4700;Lexmark Msys 4800;Lexmark SF4500 Series;Lexmark SmartJet	Color	300			
Lexmark 82 (LX-18L0032)	Lexmark Color JetPrinter-Z55;Lexmark Z65;Lexmark-X5150;Lexmark X6150;Lexmark X6170	BK	300			
Lexmark 88 (LX-18L0000)	Lexmark Color JetPrinter-Z55;Lexmark Z65;Lexmark-X5150;Lexmark X6150;Lexmark X6170	Color	300			
Lexmark 83 (LX-18LX042E)	Lexmark Color JetPrinter-Z55;Lexmark Z65;Lexmark-X5150;Lexmark X6150;Lexmark X6171	Color	250			
Lexmark 90 (LX-12A1990)	Lexmark Color JetPrinter-Z55;Lexmark Z65;Lexmark-X5150;Lexmark X6150;Lexmark X6170;Lexmark 3200;Lexmark 5000;Lexmark 5700;Lexmark 5770;Lexmark 7000;Lexmark 7200;Lexmark Z22;Lexmark Z31;Lexmark Z32;Lexmark Z42;Lexmark Z43;Lexmark Z44;Lexmark Z45;Lexmark Z51;Lexmark Z52;Lexmark Z53;Lexmark Z54;Lexmark Compaq-1400P;Lexmark A1000;Lexmark A1500;Lexmark A3000;Lexmark A4000;Lexmark A900;Lexmark C3-1000;Lexmark IJ600;Lexmark IJ700;Lexmark IJ750;Lexmark IJ900;Lexmark J1200;Lexmark-P3120;Lexmark P3150;Lexmark P706;Lexmark P707;Lexmark X125;Lexmark Z705;Lexmark Z715;Lexmark Optra Color-40;45;Samsung-MJ4500c;Lexmark Msys 4700;Lexmark Msys 4800;Lexmark SCX 1000 Series;Lexmark SF4500 Series;Lexmark SF4700 Series;Lexmark SmartJet	Color	300			
Lexmark 13400	Lexmark Color JetPrinter-1000;Lexmark 1020;Lexmark 1100;Lexmark 2030;Lexmark 2050;Lexmark 2055;Lexmark 3000;Lexmark Compaq-IJ200;Lexmark-4076 ExecJet IIc;Lexmark Medlay Lexmark -SF3000;Lexmark SF3100;Lexmark SF4000 Series;Lexmark SF4100;Lexmark SF4200 Series;Lexmark WinWriter-100;Lexmark WinWriter-150C	BK	250			
Lexmark LX-13400HC	Lexmark Color JetPrinter-1000;Lexmark 1020;Lexmark 1100;Lexmark 2030;Lexmark 2050;Lexmark 2055;Lexmark 3000;Lexmark Compaq-IJ200;Lexmark-4076 ExecJet IIc;Lexmark Medlay Lexmark -SF3000;Lexmark SF3100;Lexmark SF4000 Series;Lexmark SF4100;Lexmark SF4200 Series;Lexmark WinWriter-100;Lexmark WinWriter-150C	BK	250			
Lexmark 13614	Lexmark Color JetPrinter-1000;Lexmark 1020;Lexmark 1100;Lexmark 2030;Lexmark 2050;Lexmark 2055;Lexmark 3000;Lexmark Compaq-IJ200;Lexmark-4076 ExecJet IIc;Lexmark Medlay 4;Lexmark WinWriter-100;Lexmark WinWriter-150C	Color	300			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Lexmark LX-1361400	Lexmark Color JetPrinter-1000;Lexmark 1020;Lexmark 1100;Lexmark 2030;Lexmark 2050;Lexmark 2055;Lexmark 3000;Lexmark Compaq-IJ200;Lexmark-4076 ExecJet IIc;Lexmark Medlay 4;Lexmark WinWriter-100;Lexmark WinWriter-150C	BK	300			
Lexmark 13619	Lexmark Color JetPrinter-1000;Lexmark 1020;Lexmark 1100;Lexmark 2030;Lexmark 2050;Lexmark 2055;Lexmark 3000;Lexmark Compaq-IJ200;Lexmark-4076 ExecJet IIc;Lexmark Medlay 4;Lexmark Samsung-SF3100P;Lexmark SF4100;Lexmark SF4200 Series;Lexmark WinWriter-150C	Color	250			
Lexmark LX-13619HC	Lexmark Color JetPrinter-1000;Lexmark 1020;Lexmark 1100;Lexmark 2030;Lexmark 2050;Lexmark 2055;Lexmark 3000;Lexmark Compaq-IJ200;Lexmark-4076 ExecJet IIc;Lexmark Medlay 4;Lexmark Samsung-SF3100P;Lexmark SF4100;Lexmark SF4200 Series;Lexmark WinWriter-150C	Color	250			
Lexmark 11J3020	Lexmark J110;Lexmark J110tn	BK	550			
Lexmark 11J3021	Lexmark J110;Lexmark J110tn	C	550			
Lexmark 11J3022	Lexmark J110;Lexmark J110tn	M	550			
Lexmark 11J3023	Lexmark J110;Lexmark J110tn	Y	550			
Lexmark 11J3050	Lexmark J110;Lexmark J110tn	Color	300			
Lexmark 15M0640	Lexmark Samsung-SF3000;Lexmark SF3100;Lexmark SF4000 Series;Lexmark SF4100;Lexmark SF4200 Series	BK	300			
Lexmark 1361760	Lexmark Color JetPrinter-2030;Lexmark 2050;Lexmark 2055;Lexmark 3000	Color	300			
Lexmark 1380620	Lexmark Color JetPrinter-1000;Lexmark 1020;Lexmark 1100;Lexmark 2030;Lexmark 2050;Lexmark 2055;Lexmark 3000;Lexmark-4076 ExecJet IIc;Lexmark Lexmark-Medlay 4;Lexmark WinWriter-100;Lexmark WinWriter-150C	BK	300			
Lexmark 1382050	Lexmark Color JetPrinter 2070	BK	400			
Lexmark 1382060	Lexmark Color JetPrinter 2070	Color	250			
Konica Minolta 9J04202	Konica Minolta PagePro 1400	BK	550	700		
Konica Minolta 1710566-002	Konica Minolta PagePro 1300W;Konica Minolta PagePro 1350W;Konica Minolta PagePro 1380MF;Konica Minolta PagePro 1390MF	BK	600	750		
Konica Minolta 1710567-002	Konica Minolta PagePro 1300W;Konica Minolta PagePro 1350W;Konica Minolta PagePro 1380MF;Konica Minolta PagePro 1390MF	BK	1000	1500		
Konica Minolta 1710589-004	Konica Minolta QMS Magicolor 24xx;Konica Minolta QMS Magicolor 25xx	BK	1650			
Konica Minolta 1710589-005	Konica Minolta QMS Magicolor 24xx;Konica Minolta QMS Magicolor 25xx	C	1650			
Konica Minolta 1710589-006	Konica Minolta QMS Magicolor 24xx;Konica Minolta QMS Magicolor 25xx	M	1650			
Konica Minolta 1710589-007	Konica Minolta QMS Magicolor 24xx;Konica Minolta QMS Magicolor 25xx	Y	1650			
Konica Minolta 1710517-005	Konica Minolta QMS Magicolor 2300;Konica Minolta QMS Magicolor 2350	BK	1500			
Konica Minolta 1710517-006	Konica Minolta QMS Magicolor 2300;Konica Minolta QMS Magicolor 2350	Y	1500			
Konica Minolta 1710517-007	Konica Minolta QMS Magicolor 2300;Konica Minolta QMS Magicolor 2350	M	1500			
Konica Minolta 1710517-008	Konica Minolta QMS Magicolor 2300;Konica Minolta QMS Magicolor 2350	C	1500			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Konica Minolta TN-113 (4518-801)	Konica Minolta Di -1610;Konica Minolta Di -101A	BK	1000	1200		
Konica Minolta TN-113 (4518-601)	Konica Minolta Di -1610;Konica Minolta Di -101A	BK	1000	1200		
Konica Minolta EP-1054 (type 104)	Konica Minolta EP - 1054;Konica Minolta EP - 1085;Konica Minolta EP - 2030	BK	1450			
Konica Minolta 1710511-001	Konica Minolta Page Pro 1100;Konica Minolta Page Pro 100X;Konica Minolta Page Pro 1200W;Konica Minolta Page Pro 1250E;Konica Minolta Page Pro 8;Konica Minolta Page Pro 8E;Konica Minolta Page Pro 8L	BK	1000			
Konica Minolta TN210K	Konica Minolta Bizhub C250;Konica Minolta Bizhub C250P;Konica Minolta Bizhub C252	BK	2900	3200		
Konica Minolta TN210C	Konica Minolta Bizhub C250;Konica Minolta Bizhub C250P;Konica Minolta Bizhub C252	C	2900	3200		
Konica Minolta TN210M	Konica Minolta Bizhub C250;Konica Minolta Bizhub C250P;Konica Minolta Bizhub C252	M	2900	3200		
Konica Minolta TN210Y	Konica Minolta Bizhub C250;Konica Minolta Bizhub C250P;Konica Minolta Bizhub C252	Y	2900	3200		
Konica Minolta TN-213K (A0D7152)	Konica Minolta Bizhub C203;Konica Minolta Bizhub C253	BK	5700	8300		
Konica Minolta TN-213Y (A0D7252)	Konica Minolta Bizhub C203;Konica Minolta Bizhub C253	Y	4500	6800		
Konica Minolta TN-213M (A0D7352)	Konica Minolta Bizhub C203;Konica Minolta Bizhub C253	M	4500	6800		
Konica Minolta TN-213C (A0D7452)	Konica Minolta Bizhub C203;Konica Minolta Bizhub C253	C	4500	6800		
Konica Minolta 202B (Type 102)	Konica Minolta EP - 1050;Konica Minolta EP - 1052;Konica Minolta 1070;Konica Minolta EP - 1080;Konica Minolta EP - 1081;Konica Minolta EP - 1083;Konica Minolta EP - 2010;Konica Minolta EP - 2051;Konica Minolta EP - 2080	BK	1700			
Konica Minolta A06V152 (1710362-004)	Konica Minolta MagiColor 5550;Konica Minolta MagiColor 5570;Konica Minolta MagiColor 5650;Konica Minolta MagiColor 5670	BK	1050			
Konica Minolta A06V252 (1710362-004)	Konica Minolta MagiColor 5550;Konica Minolta MagiColor 5570;Konica Minolta MagiColor 5650;Konica Minolta MagiColor 5670	Y	1050			
Konica Minolta A06V352 (1710362-004)	Konica Minolta MagiColor 5550;Konica Minolta MagiColor 5570;Konica Minolta MagiColor 5650;Konica Minolta MagiColor 5670	M	1050			
Konica Minolta A06V452 (1710362-004)	Konica Minolta MagiColor 5550;Konica Minolta MagiColor 5570;Konica Minolta MagiColor 5650;Konica Minolta MagiColor 5670	C	1050			
Konica Minolta 0938-402	Konica Minolta FAX 2500;Konica Minolta FAX 3500	BK	1000			
Konica Minolta TN-211	Konica Minolta 222;Konica Minolta 282	BK				
Konica Minolta TN-311	Konica Minolta 350	BK				
Konica Minolta TN-310Bk	Konica Minolta C350;Konica Minolta 351;Konica Minolta 450	BK				
Konica Minolta TN-310C	Konica Minolta C350;Konica Minolta 351;Konica Minolta 450	C				
Konica Minolta TN-310M	Konica Minolta C350;Konica Minolta 351;Konica Minolta 450	M				
Konica Minolta TN-310Y	Konica Minolta C350;Konica Minolta 351;Konica Minolta 450	Y				
Konica Minolta 1710589-004	Konica Minolta MagiColor 2400W	BK		2600		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Konica Minolta 1710589-005	Konica Minolta MagiColor 2400W	Y		2600		
Konica Minolta 1710589-006	Konica Minolta MagiColor 2400W	M		2600		
Konica Minolta 1710589-007	Konica Minolta MagiColor 2400W	C		2600		
Konica Minolta A0V301H	Konica Minolta MagiColor 1600W;Konica Minolta MagiColor 1650EN;Konica Minolta MagiColor 1680MF;Konica Minolta MagiColor 1690MF	BK	2950	4250		
Konica Minolta A0V30HH	Konica Minolta MagiColor 1600W;Konica Minolta MagiColor 1650EN;Konica Minolta MagiColor 1680MF;Konica Minolta MagiColor 1690MF	C	2950	4250		
Konica Minolta A0V30CH	Konica Minolta MagiColor 1600W;Konica Minolta MagiColor 1650EN;Konica Minolta MagiColor 1680MF;Konica Minolta MagiColor 1690MF	M	2950	4250		
Konica Minolta A0V306H	Konica Minolta MagiColor 1600W;Konica Minolta MagiColor 1650EN;Konica Minolta MagiColor 1680MF;Konica Minolta MagiColor 1690MF	Y	2950	4250		
Konica Minolta 9967000877	Konica Minolta PagePro 1480MF;Konica Minolta PagePro 1490MF	BK	2400	3000		
Konica Minolta 1710589-003	Konica Minolta MagiColor 2400W;Konica Minolta MagiColor 2430 DL;Konica Minolta MagiColor 2450;Konica Minolta MagiColor 2480MF;Konica Minolta MagiColor 2490MF;Konica Minolta MagiColor 2500W;Konica Minolta MagiColor 2530DL;Konica Minolta MagiColor 2550;Konica Minolta MagiColor 2590MF	C	1450	2250		
Konica Minolta 1710589-002	Konica Minolta MagiColor 2400W;Konica Minolta MagiColor 2430 DL;Konica Minolta MagiColor 2450;Konica Minolta MagiColor 2480MF;Konica Minolta MagiColor 2490MF;Konica Minolta MagiColor 2500W;Konica Minolta MagiColor 2530DL;Konica Minolta MagiColor 2550;Konica Minolta MagiColor 2590MF	M	1450	2250		
Konica Minolta 1710589-001	Konica Minolta MagiColor 2400W;Konica Minolta MagiColor 2430 DL;Konica Minolta MagiColor 2450;Konica Minolta MagiColor 2480MF;Konica Minolta MagiColor 2490MF;Konica Minolta MagiColor 2500W;Konica Minolta MagiColor 2530DL;Konica Minolta MagiColor 2550;Konica Minolta MagiColor 2590MF	Y	1450	2250		
Konica Minolta 1710589-004	Konica Minolta MagiColor 2400W;Konica Minolta MagiColor 2430 DL;Konica Minolta MagiColor 2450;Konica Minolta MagiColor 2480MF;Konica Minolta MagiColor 2490MF;Konica Minolta MagiColor 2500W;Konica Minolta MagiColor 2530DL;Konica Minolta MagiColor 2550;Konica Minolta MagiColor 2590MF	BK	2650	3450		
Konica Minolta 1710589-007	Konica Minolta MagiColor 2400W;Konica Minolta MagiColor 2430 DL;Konica Minolta MagiColor 2450;Konica Minolta MagiColor 2480MF;Konica Minolta MagiColor 2490MF;Konica Minolta MagiColor 2500W;Konica Minolta MagiColor 2530DL;Konica Minolta MagiColor 2550;Konica Minolta MagiColor 2590MF	C	2650	3450		
Konica Minolta 1710589-006	Konica Minolta MagiColor 2400W;Konica Minolta MagiColor 2430 DL;Konica Minolta MagiColor 2450;Konica Minolta MagiColor 2480MF;Konica Minolta MagiColor 2490MF;Konica Minolta MagiColor 2500W;Konica Minolta MagiColor 2530DL;Konica Minolta MagiColor 2550;Konica Minolta MagiColor 2590MF	M	2650	3450		
Konica Minolta 1710589-005	Konica Minolta MagiColor 2400W;Konica Minolta MagiColor 2430 DL;Konica Minolta MagiColor 2450;Konica Minolta MagiColor 2480MF;Konica Minolta MagiColor 2490MF;Konica Minolta MagiColor 2500W;Konica Minolta MagiColor 2530DL;Konica Minolta MagiColor 2550;Konica Minolta MagiColor 2590MF	Y	2650	3450		
Konica Minolta A0FN022	Konica Minolta PagePro 4650;Konica Minolta PagePro 5650	BK	4850	5550		
Konica Minolta 1710604-001	Konica Minolta MagiColor 5440;Konica Minolta 5450	BK	3850	4450		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Konica Minolta 1710604-002	Konica Minolta MagiColor 5440;Konica Minolta MagiColor 5450	Y	3850	4450		
Konica Minolta 1710604-003	Konica Minolta MagiColor 5440;Konica Minolta MagiColor 5450	M	3850	4450		
Konica Minolta 1710604-004	Konica Minolta MagiColor 5440;Konica Minolta MagiColor 5450	C	3850	4450		
OKI 42804516	Okidata-C3100	BK	1200			
OKI 42804515	Okidata-C3100	C	1200			
OKI 42804514	Okidata-C3100	M	1200			
OKI 42804513	Okidata-C3100	Y	1200			
OKI 9004058	Okidata-B6100	BK	1750			
OKI 52113704	Okidata-B6100	BK	1150	1450		
OKI 09004078	Okidata-B6200;Okidata-B6250;Okidata-B6300	BK	1250	1800		
OKI 41304205	Okidata-C7200;Okidata-C7400	Y	2950			
OKI 41304206	Okidata-C7200;Okidata-C7400	M	2950			
OKI 41304207	Okidata-C7200;Okidata-C7400	C	2950			
OKI 41304208	Okidata-C7200;Okidata-C7400	BK	2950			
OKI 41304209	Okidata-C7200;Okidata-C7400	Y	2950			
OKI 41304210	Okidata-C7200;Okidata-C7400	M	2950			
OKI 41304211	Okidata-C7200;Okidata-C7400	C	2950			
OKI 41304212	Okidata-C7200;Okidata-C7400	BK	2950			
OKI 41963001	Okidata-C7100;OKIData C7300;OKIData C7350;OKIData C7500;OKIData C7550	Y	2950			
OKI 41963002	Okidata-C7100;OKIData C7300;OKIData C7350;OKIData C7500;OKIData C7550	M	2950			
OKI 41963003	Okidata-C7100;OKIData C7300;OKIData C7350;OKIData C7500;OKIData C7550	C	2950			
OKI 41963004	Okidata-C7100;OKIData C7300;OKIData C7350;OKIData C7500;OKIData C7550	BK	2950			
OKI 41963005	Okidata-C7100;OKIData C7300;OKIData C7350;OKIData C7500;OKIData C7550	Y	2950			
OKI 41963006	Okidata-C7100;OKIData C7300;OKIData C7350;OKIData C7500;OKIData C7550	M	2950			
OKI 41963007	Okidata-C7100;OKIData C7300;OKIData C7350;OKIData C7500;OKIData C7550	C	2950			
OKI 41963008	Okidata-C7100;OKIData C7300;OKIData C7350;OKIData C7500;OKIData C7550	BK	2950			
OKI 41515205	Okidata-C9200;Okidata-C9400	Y	3950			
OKI 41515206	Okidata-C9200;Okidata-C9400	M	3950			
OKI 41515207	Okidata-C9200;Okidata-C9400	C	3950			
OKI 41515209	Okidata-C9200;Okidata-C9400	Y	3950			
OKI 41515210	Okidata-C9200;Okidata-C9400	M	3950			
OKI 41515211	Okidata-C9200;Okidata-C9400	C	3950			
OKI 41515212	Okidata-C9200;Okidata-C9400	BK	3950			
OKI 41963608	Okidata-C9300;Okidata-C9500	BK	3950			
OKI 41963607	Okidata-C9300;Okidata-C9500	C	3950			
OKI 41963606	Okidata-C9300;Okidata-C9500	M	3950			
OKI 41963605	Okidata-C9300;Okidata-C9500	Y	3950			
OKI 41963604	Okidata-C9300;Okidata-C9500	BK	3950			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
OKI 41963603	Okidata-C9300;Okidata-C9500	C	3950			
OKI 41963602	Okidata-C9300;Okidata-C9500	M	3950			
OKI 41963601	Okidata-C9300;Okidata-C9500	Y	3950			
OKI 42918916	Okidata-C9600;Okidata-C9650;Okidata-C9800;Okidata-C9850	BK	3850	4450		
OKI 42918915	Okidata-C9600;Okidata-C9650;Okidata-C9800;Okidata-C9850	C	3850	4450		
OKI 42918914	Okidata-C9600;Okidata-C9650;Okidata-C9800;Okidata-C9850	M	3850	4450		
OKI 42918913	Okidata-C9600;Okidata-C9650;Okidata-C9800;Okidata-C9850	Y	3850	4450		
OKI 42126608	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	BK	1500			
OKI 42126607	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	C	1500			
OKI 42126606	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	M	1500			
OKI 42126605	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	Y	1500			
OKI 42127404	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	BK	1500			
OKI 42127403	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	C	1500			
OKI 42127402	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	M	1500			
OKI 42127401	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	Y	1500			
OKI 42804504	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	BK	1200			
OKI 42804503	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	C	1200			
OKI 42804502	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	M	1200			
OKI 42804501	Okidata-C5100;Okidata-C5150;Okidata-C5200;Okidata-C5300;Okidata-C5400	Y	1200			
OKI 43487724 (43487712)	Okidata - C8600;Okidata-C8800	BK	2200	2900		
OKI 43487723 (43487711)	Okidata - C8600;Okidata-C8800	C	2200	2900		
OKI 43487722 (43487710)	Okidata - C8600;Okidata-C8800	M	2200	2900		
OKI 43487721 (43487709)	Okidata - C8600;Okidata-C8800	Y	2200	2900		
OKI 44059117 (44059105)	Okidata - C810;Okidata-C830	Y	2650	3000		
OKI 44059118 (44059106)	Okidata - C810;Okidata-C830	M	2650	3000		
OKI 44059120 (44059108)	Okidata - C810;Okidata-C830	BK	2650	3000		
OKI 43865723	Okidata - C5850;Okidata-C5950;Okidata-MC560	C	2200	2550		
OKI 43865722	Okidata - C5850;Okidata-C5950;Okidata-MC560	M	2200	2550		
OKI 43865721	Okidata - C5850;Okidata-C5950;Okidata-MC560	Y	2200	2550		
OKI 43865743	Okidata - C5850;Okidata-C5950;Okidata-MC560	C	2200	2550		
OKI 43865742	Okidata - C5850;Okidata-C5950;Okidata-MC560	M	2200	2550		
OKI 43865741	Okidata - C5850;Okidata-C5950;Okidata-MC560	Y	2200	2550		
OKI 43872323 (43872307)	Okidata - C5650;Okidata-C5750	C	1050	1450		
OKI 43872322 (43872306)	Okidata - C5650;Okidata-C5750	M	1050	1450		
OKI 43872321 (43872305)	Okidata - C5650;Okidata-C5750	Y	1050	1450		
OKI 43381923	Okidata - C5650;Okidata-C5750	C	1050	1300		
OKI 43381922	Okidata - C5650;Okidata-C5750	M	1050	1300		
OKI 43381921	Okidata - C5650;Okidata-C5750	Y	1050	1300		
OKI 43381907	Okidata - C5650;Okidata-C5750	C	1050	1300		
OKI 43381906	Okidata - C5650;Okidata-C5750	M	1050	1300		
OKI 43381905	Okidata - C5650;Okidata-C5750	Y	1050	1300		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
OKI 43324407	Okidata - C5650;Okidata-C5750	C	1050	1300		
OKI 43324406	Okidata - C5650;Okidata-C5750	M	1050	1300		
OKI 43324405	Okidata - C5650;Okidata-C5750	Y	1050	1300		
OKI 43324408	Okidata - C5650;Okidata-C5750	BK	2200	2450		
OKI 43324440	Okidata - C5650;Okidata-C5750	BK	2200	2450		
OKI 43381908	Okidata - C5650;Okidata-C5750	BK	2200	2450		
OKI 43459323	Okidata - C3520;Okidata-C3530	C	1050	1600		
OKI 43459322	Okidata - C3520;Okidata-C3530	M	1050	1600		
OKI 43459321	Okidata - C3520;Okidata-C3530	Y	1050	1600		
OKI 43459348	Okidata - C3450;Okidata-C3600	BK	1100	1650		
OKI 43459347	Okidata - C3450;Okidata-C3600	C	1100	1650		
OKI 43459346	Okidata - C3450;Okidata-C3600	M	1100	1650		
OKI 43459345	Okidata - C3450;Okidata-C3600	Y	1100	1650		
OKI 42804581 (42804540)	Okidata - C3200	BK	1200			
OKI 42804580 (42804539)	Okidata - C3200	C	1200			
OKI 42804579 (42804538)	Okidata - C3200	M	1200			
OKI 42804578 (42804537)	Okidata - C3200	Y	1200			
OKI 43034808	Okidata - C3200	BK	900			
OKI 43034807	Okidata - C3200	C	900			
OKI 43034806	Okidata - C3200	M	900			
OKI 43034805	Okidata - C3200	Y	900			
OKI 43034804	Okidata - C3200	BK	900			
OKI 43034803	Okidata - C3200	C	900			
OKI 43034802	Okidata - C3200	M	900			
OKI 43034801	Okidata - C3200	Y	900			
OKI 43502001	Okidata - B4400;Okidata-B4600	BK	1175	1700		
OKI 43502002	Okidata - B4400;Okidata-B4600	BK	1175	1700		
OKI 43502004	Okidata - B4400;Okidata-B4600	BK	1175	1700		
OKI 42103001	Okidata - B4100;Okidata -B4200;Okidata -B4250;Okidata -B4300;Okidata -B4350	BK	750			
OKI 01103402	Okidata - B4100;Okidata -B4200;Okidata -B4250;Okidata -B4300;Okidata -B4350	BK	750			
OKI 43640302	Okidata - B2200;Okidata -B2400	BK	700	1050		
OKI 09004391	Okidata - B2500;Okidata -B2520;Okidata -B2540	BK	1000	1900		
OKI 43324423	Okidata-C5550;Okidata -C5800;Okidata -C5900;Okidata - C6100	C	2000	2350		
OKI 43324422	Okidata-C5550;Okidata -C5800;Okidata -C5900;Okidata - C6100	M	2000	2350		
OKI 43324421	Okidata-C5550;Okidata -C5800;Okidata -C5900;Okidata - C6100	Y	2000	2350		
OKI 09004462	Okidata-B6500	BK	2650			
OKI 09004461	Okidata-B6500	BK	1650			
OKI 1107201 (00079801)	Okifax-4500;Okifax-4550;Okifax-4580;Okioffice-84;Okioffice-86;Okioffice-87;Okipage-6W;Okipage-8iM;Okipage-8P;Okipage-8W;Okipage-8Z	BK	700			
OKI 40433203	Okipage 10e;Okipage-10ex;Okipage-10i;Okipage-12i;Okipage-14e	BK	750			
OKI 09002386	Okipage 16n;Okipage-OL1200ex	BK	1100			

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
OKI 52109201	OkPage 16n;OkPage-OL1200ex	BK	1100			
OKI 40468801	OkPage 20;OkPage-20n;OkPage-20+;OkPage-24dx	BK	1150			
OKI 41022502	OkPage 20;OkPage-20n;OkPage-20+;OkPage-24dx	BK	1150			
OKI 09002390	OkPage 4w;OKIFAX4100	BK	600			
OKI 43979107	Ok B410D;OKI B410DN;OKI B430DN;OKI B440DN;OKI MB460;OKI MB470;OKI MB480	BK	600	800		
OKI 44574705	OKI B411;OKI B431	BK	900	1300		
OKI 09004019	OKI B8300	BK	3200			
OKI 56115001	OKI B8300	BK	3200			
OKI 42127457	OKI C5250;OKI C5450;OKI C5510;OKI C5540	BK	1500			
OKI 42127456	OKI C5250;OKI C5450;OKI C5510;OKI C5540	C	1500			
OKI 42127455	OKI C5250;OKI C5450;OKI C5510;OKI C5540	M	1500			
OKI 42127454	OKI C5250;OKI C5450;OKI C5510;OKI C5540	Y	1500			
OKI 42804548	OKI C5250;OKI C5450;OKI C5510;OKI C5540	BK	1200			
OKI 42804547	OKI C5250;OKI C5450;OKI C5510;OKI C5540	C	1200			
OKI 42804546	OKI C5250;OKI C5450;OKI C5510;OKI C5540	M	1200			
OKI 42804545	OKI C5250;OKI C5450;OKI C5510;OKI C5540	Y	1200			
OKI 09004447	OkData - B2500;OKI B2520;OKI B2540	BK	750	1650		
OKI 09004168	Ok B4545	BK	1150			
OKI 52116101	Ok B4545	BK	1150			
OKI 09004079	OKI B6300n	BK	2100			
OKI 52114502	OKI B6300n	BK	2100			
OKI 52114501	OKI B6200;OKI B6300n	BK	1250			
OKI 43459408	Ok C3300;OKI C3400	BK	700	1050		
OKI 43459407	Ok C3300;OKI C3400	C	700	1050		
OKI 43459406	Ok C3300;OKI C3400	M	700	1050		
OKI 43459405	Ok C3300;OKI C3400	Y	700	1050		
OKI 43459408	Ok C3300;OKI C3400	BK	700	1050		
OKI 43459407	Ok C3300;OKI C3400	C	700	1050		
OKI 43459406	Ok C3300;OKI C3400	M	700	1050		
OKI 43459405	Ok C3300;OKI C3400	Y	700	1050		
OKI 42918964	OkData-C9600;OkData-C9800;OkData-C9850	BK	3900	4450		
OKI 42918963	OkData-C9600;OkData-C9800;OkData-C9850	C	3900	4450		
OKI 42918962	OkData-C9600;OkData-C9800;OkData-C9850	M	3900	4450		
OKI 42918961	OkData-C9600;OkData-C9800;OkData-C9850	Y	3900	4450		
OKI 01239901	OKI MB260;OKI MB280;OKI MB290	BK	900	1300		
OKI 01240001	OKI MB260;OKI MB280;OKI MB290	BK	1125	1550		
OKI 44469716	OKI C310dn;OKI C330dn;OKI C331dn;OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC351;OKI MC352dn;OKI MC361;OKI MC362dn;OKI MC561;OKI MC562dn	C	1050	1450		
OKI 44469715	OKI C310dn;OKI C330dn;OKI C331dn;OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC351;OKI MC352dn;OKI MC361;OKI MC362dn;OKI MC561;OKI MC562dn	M	1050	1450		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
OKI 44469714	OKI C310dn;OKI C330dn;OKI C331dn;OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC351;OKI MC352dn;OKI MC361;OKI MC362dn;OKI MC561;OKI MC562dn	Y	1050	1450		
OKI 44469706	OKI C310dn;OKI C330dn;OKI C331dn;OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC351;OKI MC352dn;OKI MC361;OKI MC362dn;OKI MC561;OKI MC562dn	C	1050	1450		
OKI 44469705	OKI C310dn;OKI C330dn;OKI C331dn;OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC351;OKI MC352dn;OKI MC361;OKI MC362dn;OKI MC561;OKI MC562dn	M	1050	1450		
OKI 44469704	OKI C310dn;OKI C330dn;OKI C331dn;OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC351;OKI MC352dn;OKI MC361;OKI MC362dn;OKI MC561;OKI MC562dn	Y	1050	1450		
OKI 44469809	OKI C310dn;OKI C330dn;OKI C331dn;OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC351;OKI MC352dn;OKI MC361;OKI MC362dn;OKI MC561;OKI MC562dn	BK	1300	1700		
OKI 44469803	OKI C310dn;OKI C330dn;OKI C331dn;OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC351;OKI MC352dn;OKI MC361;OKI MC362dn;OKI MC561;OKI MC562dn	BK	1300	1700		
OKI 44250724 (44250732)	OkI C110;OKI C130n;OKI MC160n	BK	1100	2050		
OKI 44250723 (44250731)	OkI C110;OKI C130n;OKI MC160n	C	1100	2050		
OKI 44250722 (44250730)	OkI C110;OKI C130n;OKI MC160n	M	1100	2050		
OKI 44250721 (44250729)	OkI C110;OKI C130n;OKI MC160n	Y	1100	2050		
OKI 44250719 (44250727)	OkI C110;OKI C130n;OKI MC160n	C	900	1150		
OKI 44250718 (44250726)	OkI C110;OKI C130n;OKI MC160n	M	900	1150		
OKI 44250717 (44250725)	OkI C110;OKI C130n;OKI MC160n	Y	900	1150		
OKI 43837132 (43837136)	OkI C9655	BK	5600	6700		
OKI 43837131 (43837135)	OkI C9655	C	5600	6700		
OKI 43837130 (43837134)	OkI C9655	M	5600	6700		
OKI 43837129 (43837133)	OkI C9655	Y	5600	6700		
OKI 42804508	OkIData-C5200;OkIData-C5400	BK	1200			
OKI 42804507	OkIData-C5200;OkIData-C5400	C	1200			
OKI 42804506	OkIData-C5200;OkIData-C5400	M	1200			
OKI 42804505	OkIData-C5200;OkIData-C5400	Y	1200			
OKI 44059119 (44059107)	OkIData - C810;OkIData - C830	C	2650	3250		
OKI 43865724	OkIData - C5850;OkIData - C5950;OkIData - MC560	BK	2650	2950		
OKI 43865744	OkIData - C5850;OkIData - C5950;OkIData - MC560	BK	2650	2950		
OKI 43865740 (43865708)	OkIData - C5650;OkIData - C5750	BK	2650	3000		
OKI 43459324	OkIData - C5650;OkIData - C5750	BK	1100	1650		
OKI 43459371	OkIData - C5650;OkIData - C5750	C	1100	1650		
OKI 43459370	OkIData - C5650;OkIData - C5750	M	1100	1650		
OKI 43459369	OkIData - C5650;OkIData - C5750	Y	1100	1650		
OKI 43459428	OkIData - C5650;OkIData - C5750	BK	700	1250		
OKI 43459427	OkIData - C5650;OkIData - C5750	C	700	1250		
OKI 43459426	OkIData - C5650;OkIData - C5750	M	700	1250		
OKI 43459425	OkIData - C5650;OkIData - C5750	Y	700	1250		
OKI 43459332	OkIData - C3450	BK				
OKI 43459331	OkIData - C3450	C				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
OKI 43459330	Okidata - C3450	M				
OKI 43459329	Okidata - C3450	Y				
OKI 43459444	Okidata - C3450;Okidata - C3600	BK	900	1450		
OKI 43459443	Okidata - C3450;Okidata - C3600	C	900	1450		
OKI 43459442	Okidata - C3450;Okidata - C3600	M	900	1450		
OKI 43459441	Okidata - C3450;Okidata - C3600	Y	900	1450		
OKI 43502301	Okidata - B4400;Okidata - B4600	BK	900	1450		
OKI 43502302	Okidata - B4400;Okidata - B4600	BK	900	1450		
OKI 43502306	Okidata - B4400;Okidata - B4600	BK	900	1450		
OKI 01101213	Okidata - B4300;Okidata - B4350	BK	1150			
OKI 42102901	Okidata - B4300;Okidata - B4350	BK	800			
OKI 43324424	Okidata-C5550;Okidata-C5800;Okidata-C5900;Okidata-C6100	BK	2200	2600		
OKI 52109001	Okipage 10e;Okipage 10ex;Okipage 10i;Okipage 12i;Okipage 4e	BK	700			
OKI 44992404	Okid B401;Okid MB441;Okid MB451	BK	750	1100		
OKI 44992403	Okid B401;Okid MB441;Okid MB451	BK	700	1150		
OKI 44973540	Okid C511;Okid C531;Okid MC562	BK	2300	2950		
OKI 44315107	Okid C610	C	2200	3100		
OKI 44315106	Okid C610	M	2200	3100		
OKI 44315105	Okid C610	Y	2200	3100		
OKI 44315308	Okid C610	BK	2650	3500		
OKI 44844615	Okid C822	C	2400	4150		
OKI 44844614	Okid C822	M	2400	4150		
OKI 44844613	Okid C822	Y	2400	4150		
OKI 44844616	Okid C822	BK	2300	4050		
OKI 44059172	Okid MC851;Okid MC861	BK	2400	3950		
OKI 44059171	Okid MC851;Okid MC861	C	2400	3950		
OKI 44059170	Okid MC851;Okid MC861	M	2400	3950		
OKI 44059169	Okid MC851;Okid MC861	Y	2400	3950		
OKI 44059227	Okid MC860	C	2950	3700		
OKI 44059226	Okid MC860	M	2950	3700		
OKI 44059225	Okid MC860	Y	2950	3700		
OKI 44059211	Okid MC860	C	2950	3700		
OKI 44059210	Okid MC860	M	2950	3700		
OKI 44059209	Okid MC860	Y	2950	3700		
OKI 44973543	Okid C301;Okid C321	C	900	1500		
OKI 44973542	Okid C301;Okid C321	M	900	1500		
OKI 44973541	Okid C301;Okid C321	Y	900	1500		
OKI 44973544	Okid C301;Okid C321	BK	1050	1110		
OKI 43324407	Okid C5600;Okid C5700	C	1050	1300		
OKI 43324406	Okid C5600;Okid C5700	M	1050	1300		
OKI 43324405	Okid C5600;Okid C5700	Y	1050	1300		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
OKI 43381907	Okі C5600;OKI C5700	C	1050	1300		
OKI 43381906	Okі C5600;OKI C5700	M	1050	1300		
OKI 43381905	Okі C5600;OKI C5700	Y	1050	1300		
OKI 43381923	Okі C5600;OKI C5700	C	1050	1300		
OKI 43381922	Okі C5600;OKI C5700	M	1050	1300		
OKI 43381921	Okі C5600;OKI C5700	Y	1050	1300		
OKI 43324408	Okі C5600;OKI C5700	BK	2200	2550		
OKI 43324440	Okі C5600;OKI C5700	BK	2200	2550		
OKI 43381908	Okі C5600;OKI C5700	BK	2200	2550		
OKI 44643003	Okі C801;OKI C821	C	2400	3800		
OKI 44643002	Okі C801;OKI C821	M	2400	3800		
OKI 44643001	Okі C801;OKI C821	Y	2400	3800		
OKI 44643004	Okі C801;OKI C821	BK	2300	3700		
OKI 44661802	Okі B840	BK	2400			
OKI 44469753	OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC561;OKI MC562dn	M	2100	2950		
OKI 44469754	OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC561;OKI MC562dn	C	2100	2950		
OKI 44469752	OKI C510dn;OKI C511dn;OKI C530dn;OKI C531dn;OKI MC561;OKI MC562dn	Y	2100	2950		
Panasonic KX-PDP11	Panasonic KX-P7305;Panasonic KX-P7310	BK	800			
Panasonic KX-PDP8	Panasonic KX-P7100;Panasonic KX-P7105;Panasonic KX-P7110	BK	750			
Panasonic KX-FAT88A	Panasonic KX-FL403 RU;Panasonic KX-FL413 RU;Panasonic KX-FLC413 RU	BK	530			
Panasonic KX-FAT92A	Panasonic KX - MB263;Panasonic KX-MB283;Panasonic KX-MB763;Panasonic KX-MB773;Panasonic KX-MB783	BK	530			
Panasonic KX-FA83A	Panasonic KX - FL511;Panasonic KX-FL512;Panasonic KX-FL513;Panasonic KX-FL540;Panasonic KX-FL541;Panasonic KX-FL543;Panasonic KX-FLM653;Panasonic KX-FLM663	BK	530			
Panasonic KX-FA85A	Panasonic KX - FLB813;Panasonic KX-FLB853;Panasonic KX-FLB883	BK	790			
Panasonic KX-FA76A	Panasonic KX - FL501;Panasonic KX-FL502;Panasonic KX-FL503;Panasonic KX-FL521;Panasonic KX-FL523;Panasonic KX-FLB751;Panasonic KX-FLB753;Panasonic KX-FLB756;Panasonic KX-FLB758;Panasonic KX-FLM551;Panasonic KX-FLM553	BK	530			
Panasonic Q-UG15A	Panasonic Workio DP - 150	BK	790			
Panasonic KX-P457	Panasonic KX - P6100;Panasonic KX-P6150;Panasonic KX-P6300;Panasonic KX-P6500	BK	530			
Panasonic KX-P459	Panasonic KX - P6500;Panasonic KX-P6300	BK	790			
Panasonic UG-3350	Panasonic DX - 600;Panasonic UF - 585;Panasonic 590;Panasonic 595;Panasonic 6100	BK	1100			
Panasonic KX-FA75A	Panasonic KX-FLM600;Panasonic KX-FLM650	BK	1000			2400
Panasonic KX-A144	Panasonic KX-F2900;Panasonic KX-F3000;Panasonic KX-F3100;Panasonic KX-P455	BK	580			
Panasonic KX-FAT411A	Panasonic KX-MB1900;Panasonic KX-MB2000;Panasonic KX-MB2010;Panasonic KX-MB2020;Panasonic KX-MB2025;Panasonic KX-MB2030;Panasonic KX-MB2051;Panasonic KX-MB2061	BK	730			
Panasonic KX-FAD412A	Panasonic KX-MB1900;Panasonic KX-MB2000;Panasonic KX-MB2010;Panasonic KX-MB2020;Panasonic KX-MB2025;Panasonic KX-MB2030;Panasonic KX-MB2051;Panasonic KX-MB2061	BK				1200
Panasonic KX-FAT400A7	Panasonic KX-MB1500RU;Panasonic KX-MB1520RU;Panasonic KX-MB1530RU;Panasonic KX-MB1536RU	BK		990		1900
Panasonic KX-FAT410A7	Panasonic KX-MB1500RU;Panasonic KX-MB1520RU;Panasonic KX-MB1530RU;Panasonic KX-MB1536RU	BK		1090		2000
Panasonic KX-FA78A	Panasonic KX-FL501;Panasonic KX-FLM553;Panasonic KX-FLB758;Panasonic KX-FLB753;Panasonic KX-FLB751;Panasonic KX-FL523;Panasonic KX-FL521;Panasonic KX-FL503;Panasonic KX-FL502	BK				1200

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Panasonic KX-FA77	Panasonic KX-FL501;Panasonic KX-FLM553;Panasonic KX-FLB758;Panasonic KX-FLB753;Panasonic KX-FLB751;Panasonic KX-FL523;Panasonic KX-FL521;Panasonic KX-FL503;Panasonic KX-FL502	BK				1200
Panasonic KX-FA84A	Panasonic KX-FL513;Panasonic KX-FL543;Panasonic KX-FLM653;Panasonic KX-FLM663	BK				1200
Panasonic KX-FA86A	Panasonic KX-FLB813;Panasonic KX-FLB853;Panasonic KX-FLB883	BK				1200
Panasonic KX-FAD404A7	Panasonic KX-MB3030	BK				1200
Panasonic KX-FAT403A7	Panasonic KX-MB3030	BK	1050			
Panasonic KX-FAD89A	Panasonic KX-FL403;Panasonic KX-FLC413;Panasonic KX-FLC418;Panasonic KX-FL423	BK				1200
Panasonic KX-FAD93A	Panasonic KX-MB263;Panasonic KX-MB283;Panasonic KX-MB763;Panasonic KX-MB783;Panasonic KX-MB773	BK				1200
Panasonic KX-FAT421A7	Panasonic KX-MB2230RU;Panasonic KX-MB2270RU;Panasonic KX-MB2510RU;Panasonic KX-MB2540RU;Panasonic KX-MB2571	BK	530	830		
Panasonic KX-FAT430A7	Panasonic KX-MB2230RU;Panasonic KX-MB2270RU;Panasonic KX-MB2510RU;Panasonic KX-MB2540RU;Panasonic KX-MB2571	BK	650	900		
Panasonic KX-FAT431A7	Panasonic KX-MB2230RU;Panasonic KX-MB2270RU;Panasonic KX-MB2510RU;Panasonic KX-MB2540RU;Panasonic KX-MB2571	BK	900	1200		
Panasonic KX-FAT472A7	Panasonic KX-MB2110;Panasonic KX-MB2117;Panasonic KX-MB2130;Panasonic KX-MB2137;Panasonic KX-MB2170;Panasonic KX-MB2177	BK	550			
Pantum PC-110E (PA110E)	Pantum P1000;Pantum P1050;Pantum P2000;Pantum P2050;Pantum M5000;Pantum M5005;Pantum M6000;Pantum M6005	Bk		1550		
Pantum PC-110H (PA110H)	Pantum P1000;Pantum P1050;Pantum P2000;Pantum P2050;Pantum M5000;Pantum M5005;Pantum M6000;Pantum M6005	Bk		1550		
Pantum PC-110 (PA110)	Pantum P1000;Pantum P1050;Pantum P2000;Pantum P2050;Pantum M5000;Pantum M5005;Pantum M6000;Pantum M6005	Bk		1550		
Philips PFA 818	Philips MFD-6020;Philips MFD-6050;Philips MFD-6080	BK	680	1180		
Philips PFA 821	Philips MFD-6020;Philips MFD-6050;Philips MFD-6080	BK	680	1180		
Philips PFA 822	Philips MFD-6020;Philips MFD-6050;Philips MFD-6080	BK	780	1280		
Philips PFA 832	Philips LaserMFD LFF 6100 series;Philips LaserMFD 6135;Philips LaserMFD 6135d;Philips LaserMFD 6170;Philips LaserMFD 6170dw	BK				
Ricoh Type SP 150HE	Ricoh Aficio SP150;Ricoh Aficio 150W;Ricoh Aficio 150SU;Ricoh Aficio 150SUW	BK	450	700		
Ricoh Type SP101E	Ricoh Aficio SP100;Ricoh Aficio SP100SF;Ricoh Aficio SP100SU;Ricoh SP111;Ricoh SP111SF;Ricoh SP111SU	BK	600	750		
Ricoh SP3300E	Ricoh Aficio SP3300D;Ricoh Aficio SP3300DN	BK	1300	1600		
Ricoh SP1100HS	Ricoh Aficio SP1100SF	BK	1750	2300		
Ricoh Type SP200L	Ricoh Aficio SP200N;Ricoh SP200NW;Ricoh SP202SN;Ricoh SP203SFN;Ricoh SP210;Ricoh SP210SF;Ricoh SP210SU;Ricoh SP212SUw;Ricoh SP212w	BK	1450	1600		
Ricoh Type SP200H	Ricoh Aficio SP200N;Ricoh SP200NW;Ricoh SP202SN;Ricoh SP203SFN;Ricoh SP210;Ricoh SP210SF;Ricoh SP210SU;Ricoh SP212SUw;Ricoh SP212w	BK	1750	1900		
Ricoh Type SP C220 Black	Ricoh Aficio SP C220N;Ricoh Aficio C220S;Ricoh Aficio C221N;Ricoh Aficio C221SF;Ricoh Aficio C222DN;Ricoh Aficio C222SF;Ricoh Aficio C240DN;Ricoh Aficio C240SF	BK	2300	2750		
Ricoh Type SP C220 Cyan	Ricoh Aficio SP C220N;Ricoh Aficio C220S;Ricoh Aficio C221N;Ricoh Aficio C221SF;Ricoh Aficio C222DN;Ricoh Aficio C222SF;Ricoh Aficio C240DN;Ricoh Aficio C240SF	C	2300	2750		
Ricoh Type SP C220 Magenta	Ricoh Aficio SP C220N;Ricoh Aficio C220S;Ricoh Aficio C221N;Ricoh Aficio C221SF;Ricoh Aficio C222DN;Ricoh Aficio C222SF;Ricoh Aficio C240DN;Ricoh Aficio C240SF	M	2300	2750		
Ricoh Type SP C220 Yellow	Ricoh Aficio SP C220N;Ricoh Aficio C220S;Ricoh Aficio C221N;Ricoh Aficio C221SF;Ricoh Aficio C222DN;Ricoh Aficio C222SF;Ricoh Aficio C240DN;Ricoh Aficio C240SF	Y	2300	2750		
Ricoh Type SP C310E Black	Ricoh Aficio SP C231N;Ricoh Aficio SP C232DN;Ricoh Aficio SP C232SF;Ricoh Aficio SP C242DN;Ricoh Aficio SP C242SF;Ricoh Aficio SP C311N;Ricoh Aficio SP C312DN;Ricoh Aficio SP C320DN	BK		3200		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Ricoh Type SP C310E Cyan	Ricoh Aficio SP C231N;Ricoh Aficio SP C232DN;Ricoh Aficio SP C232SF;Ricoh Aficio SP C242DN;Ricoh Aficio SP C242SF;Ricoh Aficio SP C311N;Ricoh Aficio SP C312DN;Ricoh Aficio SP C320DN	C		3200		
Ricoh Type SP C310E Magenta	Ricoh Aficio SP C231N;Ricoh Aficio SP C232DN;Ricoh Aficio SP C232SF;Ricoh Aficio SP C242DN;Ricoh Aficio SP C242SF;Ricoh Aficio SP C311N;Ricoh Aficio SP C312DN;Ricoh Aficio SP C320DN	M		3200		
Ricoh Type SP C310E Yellow	Ricoh Aficio SP C231N;Ricoh Aficio SP C232DN;Ricoh Aficio SP C232SF;Ricoh Aficio SP C242DN;Ricoh Aficio SP C242SF;Ricoh Aficio SP C311N;Ricoh Aficio SP C312DN;Ricoh Aficio SP C320DN	Y		3200		
Ricoh Type SP C310HE Black	Ricoh Aficio SP C231N;Ricoh Aficio SP C232DN;Ricoh Aficio SP C232SF;Ricoh Aficio SP C242DN;Ricoh Aficio SP C242SF;Ricoh Aficio SP C311N;Ricoh Aficio SP C312DN;Ricoh Aficio SP C320DN	BK		5950		
Ricoh Type SP C310HE Cyan	Ricoh Aficio SP C231N;Ricoh Aficio SP C232DN;Ricoh Aficio SP C232SF;Ricoh Aficio SP C242DN;Ricoh Aficio SP C242SF;Ricoh Aficio SP C311N;Ricoh Aficio SP C312DN;Ricoh Aficio SP C320DN	C		5950		
Ricoh Type SP C310HE Magenta	Ricoh Aficio SP C231N;Ricoh Aficio SP C232DN;Ricoh Aficio SP C232SF;Ricoh Aficio SP C242DN;Ricoh Aficio SP C242SF;Ricoh Aficio SP C311N;Ricoh Aficio SP C312DN;Ricoh Aficio SP C320DN	M		5950		
Ricoh Type SP C310HE Yellow	Ricoh Aficio SP C231N;Ricoh Aficio SP C232DN;Ricoh Aficio SP C232SF;Ricoh Aficio SP C242DN;Ricoh Aficio SP C242SF;Ricoh Aficio SP C311N;Ricoh Aficio SP C312DN;Ricoh Aficio SP C320DN	Y		5950		
Samsung MLT-D203U	Samsung SL-M3820D;Samsung SL-M3820ND;Samsung SL-M3870FD;Samsung SL-M3870FW;Samsung SL-M4020ND;Samsung SL-M4070FR	BK	1600	2400	1200	3100
Samsung MLT-D203L	Samsung SL-M3820D;Samsung SL-M3820ND;Samsung SL-M3870FD;Samsung SL-M3870FW;Samsung SL-M4020ND;Samsung SL-M4070FR	BK	800	1600	1200	2300
Samsung MLT-D203E	Samsung SL-M3820D;Samsung SL-M3820ND;Samsung SL-M3870FD;Samsung SL-M3870FW;Samsung SL-M4020ND;Samsung SL-M4070FR	BK	1200	2000	1200	2700
Samsung ML-1210D3	Samsung ML-1010;Samsung ML-1020;Samsung ML-1210;Samsung ML-1220;Samsung ML-1250;Samsung ML-1430;Samsung RX3110	BK	530			900
Samsung ML-1710D3	Samsung ML-1510;Samsung 1710;Samsung 1740;Samsung 1750;Samsung RX3120	BK	600			950
Samsung ML-1520D3	Samsung ML-1520;Samsung RX3116	BK	600			900
Samsung ML-1610D2	Samsung ML-1610;Samsung ML-1615; Samsung RX3117;Samsung 3122	BK	530			900
Samsung ML-D1630A	Samsung ML-1630;Samsung ML-1631;Samsung SCX-4500;Samsung SCX-4501	BK	530	680		900
Samsung ML-5000D5	Samsung ML-5000;Samsung ML-5050;ML-Samsung 5100	BK	1050			
Samsung ML-2150D8	Samsung ML-2150;Samsung ML-2151;Samsung ML-2152;Samsung ML-2250;Samsung ML-2251;Samsung ML-2252;Samsung RX3420	BK	900	1050		1500
Samsung ML-1650D8	[Samsung ML-1650;Samsung ML-1651	BK	1050			1400
Samsung ML-2010D3	Samsung ML-2010;Samsung ML-2015;Samsung ML-2510;Samsung ML-2570;Samsung ML-2571	BK	580			900
Samsung ML-2250D5	Samsung ML-2250;Samsung ML-2251;Samsung ML-2252;Samsung RX3150	BK	900	1200		1580
Samsung ML-2550DA	Samsung ML-2550;Samsung ML-2551;Samsung ML-2552	BK	1000	1150		1600
Samsung ML-D3050A	Samsung ML-3050;Samsung ML-3051	BK	700	950		1300
Samsung ML-D3050B	Samsung ML-3050;Samsung ML-3051	BK	1000	1200		1600
Samsung ML-D3470A/ELS	Samsung ML-3470D;Samsung ML-3471DN	BK	700	950		1300
Samsung ML-D3470B	Samsung ML-3470D;Samsung ML-3471DN	BK	1000	1200		1600
Samsung ML-4500D3	Samsung ML-4500;Samsung ML-4600	BK	600			950
Samsung SCX-D4725A	Samsung SCX-4725F	BK	600	800		1200
Samsung SCX-5312D6	Samsung MSYS-830;Samsung MSYS-835;Samsung SCX-5112;Samsung SCX-5115;Samsung SCX-5312;Samsung SCX-5315;Samsung SF-830;Samsung SF-835	BK	950			2170
Samsung SCX-D5530A	Samsung SCX-5330;Samsung SCX-5530	BK	650	800		1100

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Samsung SCX-D5530B	Samsung SCX-5330;Samsung SCX-5530	BK	950	1100		1700
Samsung MLT-D108S	Samsung ML-1640;Samsung ML-1641;Samsung ML-1645;Samsung ML-2240;Samsung ML-2241	BK	580	680	1000	1000
Samsung SCX-4100D3	Samsung SCX-4100	BK	580			900
Samsung SCX-6320D8	Samsung SCX-6122;Samsung SCX-6220;Samsung SCX-6320;Samsung SCX-6322	BK	950	1100		1700
Samsung CLP-K300A	Samsung CLP-300;Samsung CLX-2160;Samsung CLX-3160	BK	880	980		
Samsung CLP-C300A	Samsung CLP-300;Samsung CLX-2160;Samsung CLX-3160	C	980	1080		
Samsung CLP-M300A	Samsung CLP-300;Samsung CLX-2160;Samsung CLX-3160	M				
Samsung CLP-Y300A	Samsung CLP-300;Samsung CLX-2160;Samsung CLX-3160	Y				
Samsung CLT-K409S	Samsung CLP-310;Samsung CLP-315;Samsung CLX-3170;Samsung CLX-3175	BK	1290	1440	1000	
Samsung CLT-C409S	Samsung CLP-310;Samsung CLP-315;Samsung CLX-3170;Samsung CLX-3175	C	1290	1440	1000	
Samsung CLT-M409S	Samsung CLP-310;Samsung CLP-315;Samsung CLX-3170;Samsung CLX-3175	M	1290	1440	1000	
Samsung CLT-Y409S	Samsung CLP-310;Samsung CLP-315;Samsung CLX-3170;Samsung CLX-3175	Y	1290	1440	1000	
Samsung CLP-K350A	Samsung CLP-350N	BK	1650	1750		
Samsung CLP-C350A	Samsung CLP-350N	C	1200	1300		
Samsung CLP-M350A	Samsung CLP-350N	M	1200	1300		
Samsung CLP-Y350A	Samsung CLP-350N	Y	1200	1300		
Samsung CLP-500D7K	Samsung CLP-500;Samsung CLP-550	BK	2000	2100		
Samsung CLP-500D5C	Samsung CLP-500;Samsung CLP-550	C	2000	2100		
Samsung CLP-500D5M	Samsung CLP-500;Samsung CLP-550	M	2000	2100		
Samsung CLP-500D5Y	Samsung CLP-500;Samsung CLP-550	Y	2000	2100		
Samsung CLP-510D7K	Samsung CLP-510	BK	2000	2100		
Samsung CLP-510D5C	Samsung CLP-510	C	2000	2100		
Samsung CLP-510D5M	Samsung CLP-510	M	2000	2100		
Samsung CLP-510D5Y	Samsung CLP-510	Y	2000	2100		
Samsung CLP-510D3K	Samsung CLP-510	BK	1350	1500		
Samsung CLP-510D2C	Samsung CLP-510	C	1350	1500		
Samsung CLP-510D2M	Samsung CLP-510	M	1350	1500		
Samsung CLP-510D2Y	Samsung CLP-510	Y	1350	1500		
Samsung CLP-K600A	Samsung CLP-600;Samsung CLP-650	BK	1750	2100		
Samsung CLP-C600A	Samsung CLP-600;Samsung CLP-650	C	1750	2100		
Samsung CLP-M600A	Samsung CLP-600;Samsung CLP-650	M	1750	2100		
Samsung CLP-Y600A	Samsung CLP-600;Samsung CLP-650	Y	1750	2100		
Samsung CLP-K660A	Samsung CLP-610;Samsung CLP-660;Samsung CLX-6200;Samsung CLX-6210;Samsung CLX-6240	BK	1850	2050		
Samsung CLP-K660B	Samsung CLP-610;Samsung CLP-660;Samsung CLX-6200;Samsung CLX-6210;Samsung CLX-6240	BK	2100	2250		
Samsung CLP-C660A	Samsung CLP-610;Samsung CLP-660;Samsung CLX-6200;Samsung CLX-6210;Samsung CLX-6240	C	1850	2050		
Samsung CLP-M660A	Samsung CLP-610;Samsung CLP-660;Samsung CLX-6200;Samsung CLX-6210;Samsung CLX-6240	M	1850	2050		
Samsung CLP-Y660A	Samsung CLP-610;Samsung CLP-660;Samsung CLX-6200;Samsung CLX-6210;Samsung CLX-6240	Y	1850	2050		
Samsung CLP-C660B	Samsung CLP-610;Samsung CLP-660;Samsung CLX-6200;Samsung CLX-6210;Samsung CLX-6240	C	2100	2250		
Samsung CLP-M660B	Samsung CLP-610;Samsung CLP-660;Samsung CLX-6200;Samsung CLX-6210;Samsung CLX-6240	M	2100	2250		
Samsung CLP-Y660B	Samsung CLP-610;Samsung CLP-660;Samsung CLX-6200;Samsung CLX-6210;Samsung CLX-6240	Y	2100	2250		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Samsung MLT-D209S	Samsung ML-2855;Samsung SCX-4824;Samsung SCX-4826;Samsung SCX-4828	BK	550	800	1000	1300
Samsung MLT-D209L	Samsung ML-2855;Samsung SCX-4824;Samsung SCX-4826;Samsung SCX-4828	BK	750	950	1000	1200
Samsung MLT-D109S	Samsung SCX-4300	BK	530	650	1000	1200
Samsung MLT-D1092S	Samsung SCX-4300	BK	530	650	1000	1200
Samsung SCX-D4200A	Samsung SCX-4200;Samsung SCX-4220	BK		750		1100
Samsung SCX-4216D3	Samsung SCX-4016;Samsung SCX-4216;Samsung SF-560;Samsung SF-565;Samsung SF-750;Samsung SF-755	BK	600	800		1300
Samsung MLT-D106S	Samsung ML-2245	BK	550	750	1000	1100
Samsung ML-D4550A	Samsung ML-4050;Samsung ML-4550;Samsung ML-4551	BK	1300	1450		2100
Samsung SF-5100D3	Samsung MSYS-5100;Samsung SF-5100;Samsung SF-515;Samsung SF-530;Samsung SF-531;Samsung SF-535	BK	550			
Samsung ML-3550DF	Samsung ML-3550	BK	950			1600
Samsung SF-5800D5	Samsung MSYS-5100;Samsung MSYS-5150;Samsung MSYS-5200;Samsung SF-5800;Samsung SF-5805;Samsung SF-5905	BK	750			
Samsung ML-6000D6	Samsung QL-6000;Samsung QL-6050;Samsung QL-6100	BK	900			
Samsung MLT-D208L	Samsung SCX-5635;Samsung SCX-5835	BK	1100	1450		1750
Samsung MLT-D208S	Samsung SCX-5635;Samsung SCX-5835	BK	800	1050		1600
Samsung ML-C810	Samsung ML-84;Samsung ML-85;Samsung ML-86	BK	900			
Samsung ML-D4550B	Samsung ML-4050;Samsung ML-4550;ML-Samsung 4551	BK	2700	2800		
Samsung ML-6060D6	Samsung ML-1440;Samsung ML-1450;Samsung ML-1451;Samsung ML-6040;Samsung ML-6060	BK	1000			2170
Samsung MLT-D204S	Samsung ProXpress SL-M3325;Samsung 3825;Samsung 4025;Samsung M3375;Samsung 3875;Samsung 4075	BK	600	1400	2100	
Samsung MLT-D104S	Samsung ML-1660;Samsung ML-1661;Samsung ML-1665;Samsung ML-1667;Samsung ML-1670;Samsung ML-1671;Samsung ML-1675;Samsung ML-1676;Samsung ML-1677;Samsung ML-1860;Samsung ML-1865;Samsung ML-1867;Samsung SCX-3200;Samsung SCX-3205;Samsung SCX-3207;Samsung SCX-3217	BK	580	680	1000	950
Samsung MLT-D104X	Samsung ML-1660;Samsung ML-1661;Samsung ML-1665;Samsung ML-1667;Samsung ML-1670;Samsung ML-1671;Samsung ML-1675;Samsung ML-1676;Samsung ML-1677;Samsung ML-1860;Samsung ML-1865;Samsung ML-1867;Samsung SCX-3200;Samsung SCX-3205;Samsung SCX-3207;Samsung SCX-3217	BK	480	580	1000	900
Samsung MLT-D105L	Samsung ML-1910;Samsung ML-1915;Samsung ML-2525;Samsung ML-2540;Samsung ML-2580;Samsung SCX-4600;Samsung SCX-4623;Samsung SF-650	BK	700	900	1000	1000
Samsung MLT-D105S	Samsung ML-1910;Samsung ML-1915;Samsung ML-2525;Samsung ML-2540;Samsung ML-2580;Samsung SCX-4600;Samsung SCX-4623;Samsung SF-650	BK	550	700	1000	1000
Samsung SCX-D6345A	Samsung SCX-6345	BK				
Samsung SF-6500R6	Samsung SF-6400;Samsung SF-6500	BK	900			
Samsung SCX-D6555A	Samsung SCX-6545;Samsung SCX-6555	BK				
Samsung SCX-R6555A	Samsung SCX-6545;Samsung SCX-6555	BK				
Samsung SF-6800D6	Samsung MSYS-6750;Samsung MSYS-6800;Samsung MSYS-6900;Samsung MSYS-730;Samsung SF-6750;Samsung SF-6800;Samsung SF-6900	BK				
Samsung ML-7000D8	Samsung ML-7000;Samsung ML-7050; Samsung QL-7000	BK	950			
Samsung SF-7020D7	Samsung MSYS-6750;Samsung MSYS-6800;Samsung MSYS-6900;Samsung MSYS-730;Samsung SF-7000;Samsung SF-7020;Samsung SF-7800	BK				
Samsung ML-7300DA	Samsung ML-7300	BK				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Samsung MLT-D101S	Samsung ML-2160;Samsung ML-2164;Samsung ML-2165;Samsung ML-2165W;Samsung ML-2167;Samsung ML-2168;Samsung ML-2168W;Samsung SCX-3405;Samsung SCX-3405W;Samsung SCX-3405FW;Samsung SCX-3407;Samsung SCX-3400;Samsung SCX-3400F;Samsung SF-760P	BK	530	930	1000	1290
Samsung CLT-C407S	Samsung CLX-3180;Samsung CLX-3185;Samsung CLP-320;Samsung CLP-325	C	1190	1390	1000	
Samsung CLT-Y407S	Samsung CLX-3180;Samsung CLX-3185;Samsung CLP-320;Samsung CLP-325	Y				
Samsung CLT-M407S	Samsung CLX-3180;Samsung CLX-3185;Samsung CLP-320;Samsung CLP-325	M				
Samsung CLT-K407S	Samsung CLX-3180;Samsung CLX-3185;Samsung CLP-320;Samsung CLP-325	BK	1030	1190	1000	
Samsung CLT-K508L	Samsung CLP-670;Samsung CLP-620;Samsung CLX-6220;Samsung CLX-6250	BK	2100	2400		
Samsung CLT-K508S	Samsung CLP-670;Samsung CLP-620;Samsung CLX-6220;Samsung CLX-6250	BK	1700	2050		
Samsung CLT-C508L	Samsung CLP-670;Samsung CLP-620;Samsung CLX-6220;Samsung CLX-6250	C	2100	2400		
Samsung CLT-M508L	Samsung CLP-670;Samsung CLP-620;Samsung CLX-6220;Samsung CLX-6250	M	2100	2400		
Samsung CLT-Y508L	Samsung CLP-670;Samsung CLP-620;Samsung CLX-6220;Samsung CLX-6250	Y	2100	2400		
Samsung CLT-C508S	Samsung CLP-670;Samsung CLP-620;Samsung CLX-6220;Samsung CLX-6250	C	1700	2050		
Samsung CLT-M508S	Samsung CLP-670;Samsung CLP-620;Samsung CLX-6220;Samsung CLX-6250	M	1700	2050		
Samsung CLT-Y508S	Samsung CLP-670;Samsung CLP-620;Samsung CLX-6220;Samsung CLX-6250	Y	1700	2050		
Samsung CLT-K609S Black	Samsung CLP-770;Samsung CLP-775	BK	3200	3650		
Samsung CLT-C609S Cyan	Samsung CLP-770;Samsung CLP-775	C	3200	3650		
Samsung CLT-M609S Magenta	Samsung CLP-770;Samsung CLP-775	M	3200	3650		
Samsung CLT-Y609S Yellow	Samsung CLP-770;Samsung CLP-775	Y	3200	3650		
Samsung SF-550D3	Samsung SF-550;Samsung SF-555	BK	600			
Samsung MLT-D305L	Samsung ML-3750ND	BK	750	1050		1400
Samsung MLT-D305S	Samsung ML-3750ND	BK	750	1050		
Samsung MLT-K606S	Samsung SCX-8030ND;Samsung SCX-8040ND	BK				
Samsung MLT-K607S	Samsung SCX-8030ND;Samsung SCX-8040ND	BK				
Samsung CLT-K607S	Samsung CLX-9350ND;Samsung CLX-9250ND	BK				
Samsung CLT-C607S	Samsung CLX-9350ND;Samsung CLX-9250ND	C				
Samsung CLT-M607S	Samsung CLX-9350ND;Samsung CLX-9250ND	M				
Samsung CLT-Y607S	Samsung CLX-9350ND;Samsung CLX-9250ND	Y				
Samsung CLT-K606S	Samsung CLX-9350ND;Samsung CLX-9250ND	BK				
Samsung CLT-C606S	Samsung CLX-9350ND;Samsung CLX-9250ND	C				
Samsung CLT-M606S	Samsung CLX-9350ND;Samsung CLX-9250ND	M				
Samsung CLT-Y606S	Samsung CLX-9350ND;Samsung CLX-9250ND	Y				
Samsung CLX-C8380A	Samsung CLX-8380ND;Samsung CLX-8385ND	C				
Samsung CLX-M8380A	Samsung CLX-8380ND;Samsung CLX-8385ND	M				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Samsung CLX-Y8380A	Samsung CLX-8380ND;Samsung CLX-8385ND	Y				
Samsung CLX-R838XK	Samsung CLX-8380ND;Samsung CLX-8385ND	BK				
Samsung CLX-R838XC	Samsung CLX-8380ND;Samsung CLX-8385ND	C				
Samsung CLX-R838XM	Samsung CLX-8380ND;Samsung CLX-8385ND	M				
Samsung CLX-R838XY	Samsung CLX-8380ND;Samsung CLX-8385ND	Y				
Samsung CLX-K8380A	Samsung CLX-8380ND;Samsung CLX-8385ND	BK				
Samsung MLT-D117S	Samsung SCX-4650;Samsung SCX-4655	BK	650	1050	1000	1450
Samsung CLT-K504S	Samsung CLX-4195;Samsung CLX-4591;Samsung CLP-415;Samsung Xpress C1810W;Samsung Xpress C1860FW	BK	1650	2100	1000	
Samsung CLT-C504S	Samsung CLX-4195;Samsung CLX-4591;Samsung CLP-415;Samsung Xpress Xpress C1810W;Samsung Xpress C1860FW	C	1650	2100	1000	
Samsung CLT-Y504S	Samsung CLX-4195;Samsung CLX-4591;Samsung CLP-415;Samsung Xpress Xpress C1810W;Samsung Xpress C1860FW	Y	1650	2100	1000	
Samsung CLT-M504S	Samsung CLX-4195;Samsung CLX-4591;Samsung CLP-415;Samsung Xpress Xpress C1810W;Samsung Xpress C1860FW	M	1650	2100	1000	
Samsung CLT-K506S	Samsung CLP-680ND;Samsung CLX-6260FD;Samsung CLX-6260FR	BK				
Samsung CLT-C506S	Samsung CLP-680ND;Samsung CLX-6260FD;Samsung CLX-6260FR	C				
Samsung CLT-M506S	Samsung CLP-680ND;Samsung CLX-6260FD;Samsung CLX-6260FR	M				
Samsung CLT-Y506S	Samsung CLP-680ND;Samsung CLX-6260FD;Samsung CLX-6260FR	Y				
Samsung CLT-K506L	Samsung CLX-6260	BK				
Samsung CLT-C506L	Samsung CLX-6260	C				
Samsung CLT-M506L	Samsung CLX-6260	M				
Samsung CLT-Y506L	Samsung CLX-6260	Y				
Samsung CLT-K406S	Samsung CLX-3305;Samsung CLX-3300;Samsung CLP-365;Samsung CLP-360;Samsung Xpress C460W;Samsung Xpress C460FW;Samsung Xpress C410W	BK	1700	2050	1000	
Samsung CLT-C406S	Samsung CLX-3305;Samsung CLX-3300;Samsung CLP-365;Samsung CLP-360;Samsung Xpress C460W;Samsung Xpress C460FW;Samsung Xpress C410W	C	1300	1600	1000	
Samsung CLT-M406S	Samsung CLX-3305;Samsung CLX-3300;Samsung CLP-365;Samsung CLP-360;Samsung Xpress C460W;Samsung Xpress C460FW;Samsung Xpress C410W	M	1300	1600	1000	
Samsung CLT-Y406S	Samsung CLX-3305;Samsung CLX-3300;Samsung CLP-365;Samsung CLP-360;Samsung Xpress C460W;Samsung Xpress C460FW;Samsung Xpress C410W	Y	1300	1600	1000	
Samsung MLT-D115L	Samsung SL-M2620D;Samsung SL-M2670N;Samsung SL-M2820DW;Samsung SL-M2820ND;Samsung SL-M2870FD;Samsung SL-M2870FW;Samsung Xpress M2830DW;Xpress Samsung M2880FW	BK	650	1300	1000	1900
Samsung MLT-D115S	Samsung SL-M2620D;Samsung SL-M2670N;Samsung SL-M2820DW;Samsung SL-M2820ND;Samsung SL-M2870FD;Samsung SL-M2870FW	BK	550	1200	1000	1800
Samsung MLT-D203S	Samsung SL-M3820D;Samsung SL-M3820ND;Samsung SL-M3870FD;Samsung SL-M3870FW;Samsung SL-M4020ND;Samsung SL-M4070FR	BK	600	1400	1200	2100
Samsung MLT-D204L	Samsung ProXpress SL-M3325;Samsung ProXpress SL-3825;Samsung ProXpress SL-4025;Samsung ProXpress SL-M3375;Samsung ProXpress SL-3875;Samsung ProXpress SL-4075	BK	800	1600	2100	2300
Samsung MLT-D204E	Samsung ProXpress SL-M3825;Samsung ProXpress SL-4025;Samsung ProXpress SL-M3875;Samsung ProXpress SL-4075	BK	1200	2000	2100	2700
Samsung MLT-D116S	Samsung Xpress SL-M2625;Samsung 2626;Samsung 2825;Samsung 2826;Samsung M2675;Samsung 2676;Samsung 2875;Samsung 2876	BK	500	1400	1000	
Samsung MLT-D116L	Samsung M2020;Samsung 2020W;Samsung M2022;Samsung 2022W;Samsung M2070;Samsung 2070W	BK	600	1500	1000	
Samsung MLT-D111S	Samsung M2020;Samsung 2020W;Samsung M2022;Samsung 2022W;Samsung M2070;Samsung 2070W	BK	530	1190	1800	1700
Samsung MLT-D111L	Samsung M2020;Samsung 2020W;Samsung M2022;Samsung 2022W;Samsung M2070;Samsung 2070W	BK	580	1250	1800	1750

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Samsung MLT-D119S	Samsung ML-1610;Samsung ML-1615;Samsung ML-2010;Samsung ML-2015;Samsung ML-2510;Samsung ML-2570;Samsung ML-2571N;Samsung SCX-4321;Samsung SCX-4521F	BK	530			950
Samsung ML-D2850B	Samsung ML-2850;Samsung ML-2851	BK	750	950	1000	1450
Samsung ML-D2850A	Samsung ML-2850;Samsung ML-2851	BK	600	750	1000	1450
Samsung ML-3560D6	Samsung ML-2850;Samsung ML-2851	BK	1200	1450		2100
Samsung ML-3560DB	Samsung ML-3560;Samsung ML-3561;Samsung ML-3562	BK	1550	1700		2300
Samsung SCX-4720D3	Samsung SCX-4520;Samsung SCX-4720	BK	600	750		1250
Samsung SCX-4720D5	Samsung SCX-4520;Samsung SCX-4720	BK	750	950		1450
Samsung MLT-D205S	Samsung SCX-4833;Samsung SCX-5637;Samsung ML-3300;Samsung ML-3310;Samsung ML-3710	BK	500	600	1000	1200
Samsung MLT-D205L	Samsung SCX-4833;Samsung SCX-5637;Samsung ML-3300;Samsung ML-3310;Samsung ML-3710	BK	750	850	1000	1400
Samsung MLT-D205E	Samsung ML-3300;Samsung ML-3710D;Samsung ML-3710ND;Samsung SCX-5637FR	BK	1300	1400	1000	2000
Samsung MLT-D309S	Samsung ML-5510;ML-Samsung 6510	BK	1700	2000	1000	
Samsung MLT-D309L	Samsung ML-5510;ML-Samsung 6510	BK	3150	3400	1000	
Samsung MLT-D103S	Samsung SCX-4727;Samsung SCX-4728;Samsung SCX-4729;ML-2955;Samsung ML-2950	BK	500	750	1000	1200
Samsung MLT-D103L	Samsung SCX-4727;Samsung SCX-4728;Samsung SCX-4729;ML-2955;Samsung ML-2950	BK	600	900	1000	1300
Samsung MLT-D307S	Samsung ML-4510;Samsung ML-5010;Samsung ML-5015	BK	900	1300		
Samsung MLT-D307L	Samsung ML-4510;Samsung ML-5010;Samsung ML-5015	BK	2050	2450		
Samsung MLT-D307E	Samsung ML-4510;Samsung ML-5010;Samsung ML-5015	BK	2550	2750		
Samsung Ink-M41	Samsung SF-370;Samsung SF-317;Samsung SF-375	BK	250			
Samsung Ink-M40	Samsung SF-330;Samsung SF- 331;Samsung SF - 335;Samsung SF-340;Samsung SF-345;Samsung SF-360	BK	250			
Samsung Ink-C10	Samsung SF-4200	Color	250			
Samsung Ink-M10	Samsung SF-3000;Samsung SF-3100;Samsung SF - 3200;Samsung SF-4100;Samsung SF-4120;Samsung SF-4220	BK	300			
Samsung Ink-C40	Samsung SF-330;Samsung SF-331;Samsung SF-335	Color	250			
Samsung Ink-C50	Samsung SCX-1000;Samsung SF-4500;Samsung SF-4700	Color	250			
Samsung Ink-M50	Samsung SCX-1000;Samsung SCX-1100;Samsung SCX-1150;Samsung SF-430	BK	250			
Samsung Ink-M55	Samsung SF-350	BK	300			
Samsung Ink-C60	Samsung SCX-1100;Samsung SCX-1150;Samsung SF-430	Color	250			
Sharp AL-100TD	Sharp AL-1000;Sharp AL-1200;Sharp AL-1500	BK	700			
Sharp AL-100TD	Sharp AL-1000;Sharp AL-1200;Sharp AL-1500	BK	1150			
Sharp AR-168T	Sharp AR-122E;Sharp AR-153E;Sharp AR-5012;Sharp AR-5415;Sharp AR-M150;Sharp AR-M155	BK	1150	1250		
Sharp AR-016T	Sharp AR-5015;Sharp AR-5120;Sharp AR-5316;Sharp AR-5320	BK	1550	1700		
Sharp AR-208T	Sharp AR-5420;Sharp AR-203;Sharp AR-M201	BK	1150	1250		
Sharp ZT-20TD1	Sharp Z20;Sharp Z21;Sharp Z25;Sharp Z26	BK	800			
Sharp ZT-30DC1	Sharp Z-30	BK	800			
Sharp ZT-50TD1	Sharp Z-50	BK	550			
Sharp ZT-81TD1	Sharp Z-810;Sharp Z-820;Sharp Z-830;Sharp Z-840;Sharp Z-845	BK	600			800
Sharp SF-240DM	Sharp SF-2040;Sharp SF-2540	BK	600			
Sharp AR-152T	Sharp AR-121E;Sharp AR-122E;Sharp AR-151;Sharp AR-153E;Sharp AR-156;Sharp AR-5012;Sharp AR-5415;Sharp AR-M150;Sharp AR-M155	BK	1300	1450		
Sharp AR-168T	Sharp AR-121E;Sharp AR-122E;Sharp AR-151;Sharp AR-153E;Sharp AR-156;Sharp AR-5012;Sharp AR-5415;Sharp AR-M150;Sharp AR-M155	BK	1300	1450		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Sharp AR-020LT	Sharp AR-5516;Sharp AR-5520	BK	2000	2100		
Sharp AR-200DC	Sharp AR-161;Sharp AR-200;Sharp AR-205	BK	2100	2250		
Sharp AR-200TD	Sharp AR-161;Sharp AR-200;Sharp AR-205	BK	2100	2250		
Sharp AR-450LT	Sharp AR-350;Sharp AR-450	BK	2000			
Sharp SF-222LT1	Sharp SF-2022;Sharp SF-2027	BK	800			
Sharp SF-234LT	Sharp SF-2314;Sharp SF-2414;Sharp SF-2514	BK	750			
Sharp AL-110DC	Sharp AL-1217;Sharp AL-1457	BK	1150			
Sharp AL-80TD	Sharp AL-800;SharpAL-840	BK	1150			
Sharp AM-30DC	Sharp AM-300;Sharp AM-400	BK	800			
Sharp AR-150DC	Sharp AR-120E;Sharp AR-150;Sharp AR-155	BK	1150			
Sharp AR-156LT	Sharp AR-121;Sharp AR-151;Sharp AR-156	BK	1250	1350		
Sharp AR-270LT	Sharp AR-235;Sharp AR-275;Sharp AR-M236;Sharp AR-M276	BK	2000	2100		
Sharp AR-400LT	Sharp AR-287;Sharp AR-337;Sharp AR-407	BK	1850			
Sharp AR-310T	Sharp AR-5625;Sharp AR-5631	BK	2450	2600		
Sharp AR-455LT	Sharp AR-M351;Sharp AR-451;Sharp U;Sharp N	BK	2450	2600		
Sharp AR-621LT	Sharp AR-M550U;Sharp AR-620U;Sharp AR-700U	BK	3700			
Sharp MX-235GT	Sharp AR-5618;Sharp AR-5620;Sharp AR-5623;Sharp MX-M182;Sharp MX-M202D;Sharp MX-M232D	BK	2000	3400		
Sharp AR-202T	Sharp AR-163;Sharp AR-201;Sharp AR-206;Sharp AR-M160;Sharp AR-M205	BK	2000	2150		
Sharp AR-201T	Sharp AR-163;Sharp 201;Sharp 206	BK	1450	1550		
Sharp MX-312GT	Sharp AR-5726;Sharp AR-5731;Sharp MX-M260;Sharp MX-M264N;Sharp MX-M310N;Sharp MX-M314N;Sharp MX-M354N	BK	3100	1200		
Sharp MX-B20GT1	Sharp MX-B200;Sharp MX-B201D	BK	1450	1500		
Toshiba T-1200	Toshiba E-Studio 120;Toshiba E-Studio 1150	Bk	700			
Toshiba T-1620E	Toshiba E-Studio 161	Bk	1900			
Toshiba T-1350E	Toshiba 1340;Toshiba 1350;Toshiba 1360;Toshiba 1370	Bk	600			
Toshiba T-1640E-5K	Toshiba e-STUDIO 163;Toshiba e-STUDIO 165;Toshiba e-STUDIO 166;Toshiba e-STUDIO 203;Toshiba e-STUDIO 205;Toshiba e-STUDIO 206	Bk				
Toshiba T-1640E-24k	Toshiba e-Studio 163;Toshiba e-Studio 205;Toshiba e-Studio 206	Bk	1550			
Toshiba T-1550E	Toshiba 1550;Toshiba 1560	Bk	700			
Toshiba T-1200E	Toshiba E-Studio 120;Toshiba e-Studio 150	Bk				
Toshiba T-1810	Toshiba E-studio 181;Toshiba 211;Toshiba 182;Toshiba 212;Toshiba 242	Bk				
Toshiba T-1820	Toshiba E-Studio 180S	Bk				
Toshiba T-4530	Toshiba E-Studio 225;Toshiba e-Studio 305;Toshiba e-Studio 455	Bk				
Toshiba T-3520	Toshiba E-Studio 350;Toshiba e-Studio 352;Toshiba e-Studio 450;Toshiba e-Studio 452	Bk				
Toshiba T-2500	Toshiba E-Studio 20;Toshiba e-Studio 25;Toshiba e-Studio 200;Toshiba e-Studio 250	Bk				
Toshiba T-2320	Toshiba E-Studio 230L;Toshiba 280L	Bk				
Toshiba T-2340	Toshiba E-Studio 220;Toshiba e-Studio 232;Toshiba e-Studio 282	Bk				
Toshiba T-2060	Toshiba 2060;Toshiba 2860;Toshiba 2870	Bk				
Toshiba T-2840	Toshiba E-Studio 233;Toshiba e-Studio 283	Bk				
Xerox 006R01573	Xerox WorkCentre 5019;Xerox WorkCentre 5021;Xerox WorkCentre 5022;Xerox WorkCentre 5024	BK				
Xerox 013R00670 Drum	Xerox WorkCentre 5019;Xerox WorkCentre 5021;Xerox WorkCentre 5022;Xerox WorkCentre 5024	Drum				7750

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Xerox 013R00625	Xerox WorkCentre 3119	BK		530		1250
Xerox 106R01159	Xerox Phaser 3117;Xerox Phaser 3122;Xerox Phaser 3124;Xerox Phaser 3125	BK	430			950
Xerox 106R01277	Xerox WorkCentre 5016;Xerox 5020	BK	1290			
Xerox 101R00432 Drum	Xerox WorkCentre 5016;Xerox WorkCentre 5020	Drum				4000
Xerox 106R01370	Xerox Phaser 3600	BK		1590		2200
Xerox 106R01371	Xerox Phaser 3600	BK		1690		2300
Xerox 106R01373	Xerox Phaser 3250	BK		780		1400
Xerox 106R01374	Xerox Phaser 3250	BK		1050		1700
Xerox 106R01378	Xerox Phaser 3100	BK	780	1190		1500
Xerox 106R01379	Xerox Phaser 3100	BK	780	1050		1700
Xerox 106R01411 (3300)	Xerox Phaser 3300	BK		1100		1650
Xerox 106R01412 (3300)	Xerox Phaser 3300	BK		1100		1750
Xerox 106R01413	Xerox WorkCentre 5222	BK				
Xerox 106R01414	Xerox Phaser 3435	BK		1000		1650
Xerox 106R01415 (3435)	Xerox Phaser 3435	BK		1150		1950
Xerox 106R01485	Xerox WorkCentre 3210;WorkCentre Xerox 3220	BK	580	750	1000	1200
Xerox 106R01487	Xerox WorkCentre 3210;WorkCentre Xerox 3220	BK	780	950	1000	1500
Xerox 106R01529	Xerox WorkCentre 3550;WorkCentre Xerox 3550X	BK	780	1050	1000	1700
Xerox 106R01531	Xerox WorkCentre 3550;WorkCentre Xerox 3550X	BK	1150	1350	1000	2000
Xerox 106R02181	Xerox Phaser 3010;Xerox Phaser 3040;Xerox WorkCentre 3045	BK		690		
Xerox 106R02183	Xerox Phaser 3010;Xerox Phaser 3040;Xerox WorkCentre 3045	BK		690		
Xerox 106R02304	Xerox Phaser 3320	BK	730	950	1000	1600
Xerox 106R02306	Xerox Phaser 3320	BK	950	1190	1000	1600
Xerox 106R02308	Xerox WorkCentre 3315;Xerox WorkCentre 3325	BK	530	680	1000	1450
Xerox 106R02310	Xerox WorkCentre 3315;Xerox WorkCentre 3325	BK	780	980	1000	1650
Xerox 106R02312	Xerox WorkCentre 3325	BK	1050	1200	1000	2100
Xerox 106R02773	Xerox Phaser 3020;Xerox WorkCentre 3025	BK	550	1350	2000	
Xerox 106R02778	Xerox Phaser 3052;Xerox Phaser 3260;Xerox WorkCentre 3215;WorkCentre Xerox 3225	BK	680	1480	2000	2200
Xerox 106R02782	Xerox Phaser 3052;Xerox Phaser 3260;Xerox WorkCentre 3215;Xerox WorkCentre 3225	BK	990	1780	2000	
Xerox 108R00908	Xerox Phaser 3140;Xerox Phaser 3155;Xerox Phaser 3160;Xerox Phaser 3160N	BK	530	680	1000	1250
Xerox 108R00909	Xerox Phaser 3140;Xerox Phaser 3155;Xerox Phaser 3160;Xerox Phaser 3160N	BK	580	730	1000	1300
Xerox 113R00737	Xerox Phaser 5335	BK		2050		
Xerox 106R01604	Xerox Phaser 6500N/DN;Xerox WorkCentre 6505N/DN;Xerox WorkCentre 6655	BK		2400		
Xerox 106R01598	Xerox Phaser 6500N/DN;Xerox WorkCentre 6505N/DN;Xerox WorkCentre 6655	C		2400		
Xerox 106R01599	Xerox Phaser 6500N/DN;Xerox WorkCentre 6505N/DN;Xerox WorkCentre 6655	M		2400		
Xerox 106R01600	Xerox Phaser 6500N/DN;Xerox WorkCentre 6505N/DN;Xerox WorkCentre 6655	Y		2400		
Xerox 106R01601	Xerox Phaser 6500N/DN;Xerox WorkCentre 6505N/DN;Xerox WorkCentre 6655	C		2800		
Xerox 106R01602	Xerox Phaser 6500N/DN;Xerox WorkCentre 6505N/DN;Xerox WorkCentre 6655	M		2800		
Xerox 106R01603	Xerox Phaser 6500N/DN;Xerox WorkCentre 6505N/DN;Xerox WorkCentre 6655	Y		2800		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Xerox 106R01634	Xerox Phaser 6000;Xerox Phaser 6010;Xerox WorkCentre 6015	BK	1350	1400		
Xerox 106R01631	Xerox Phaser 6000;Xerox Phaser 6010;Xerox WorkCentre 6015	C	1350	1400		
Xerox 106R01632	Xerox Phaser 6000;Xerox Phaser 6010;Xerox WorkCentre 6015	M	1350	1400		
Xerox 106R01633	Xerox Phaser 6000;Xerox Phaser 6010;Xerox WorkCentre 6015	Y	1350	1400		
Xerox 106R02612	Xerox Phaser 7100	BK		2850		
Xerox 106R02606	Xerox Phaser 7100	C		2850		
Xerox 106R02607	Xerox Phaser 7100	M		2850		
Xerox 106R02608	Xerox Phaser 7100	Y		2850		
Xerox 106R02609	Xerox Phaser 7100	C		2850		
Xerox 106R02610	Xerox Phaser 7100	M		2850		
Xerox 106R02611	Xerox Phaser 7100	Y		2850		
Xerox 106R02763	Xerox Phaser 6020;Xerox Phaser 6022;Xerox WC 6025;Xerox WorkCentre 6027	BK	1500	1800		
Xerox 106R02760	Xerox Phaser 6020;Xerox Phaser 6022;Xerox WC 6025;Xerox WorkCentre 6027	C	1500	1800		
Xerox 106R02761	Xerox Phaser 6020;Xerox Phaser 6022;Xerox WC 6025;Xerox WorkCentre 6027	M	1500	1800		
Xerox 106R02762	Xerox Phaser 6020;Xerox Phaser 6022;Xerox WC 6025;Xerox WorkCentre 6027	Y	1500	1800		
Xerox 106R02721	Xerox Phaser 3610;Xerox WorkCentre 3615	BK				
Xerox 106R02723	Xerox Phaser 3610;Xerox WorkCentre 3615	BK				
Xerox 106R02732	Xerox Phaser 3610;Xerox WorkCentre 3615	BK				
Xerox 113R00773	Xerox Phaser 3610;Xerox WorkCentre 3615	BK				
Xerox 106R01476	Xerox Phaser 6121	BK	1350	1500		
Xerox 106R01475	Xerox Phaser 6121	Y	1350	1450		
Xerox 106R01474	Xerox Phaser 6121	M	1350	1450		
Xerox 106R01473	Xerox Phaser 6121	C	1350	1450		
Xerox 106R01463	Xerox Phaser 6121	C	1150	1200		
Xerox 106R01464	Xerox Phaser 6121	M	1150	1200		
Xerox 106R01465	Xerox Phaser 6121	Y	1150	1200		
Xerox 113R00005	Xerox DocuPrint 4505;Xerox DocuPrint 4510	BK	900			
Xerox 113R00712	Xerox Phaser 4510	BK	1650	1900		2500
Xerox 113R00711	Xerox Phaser 4510	BK	1300	1650		2100
Xerox 113R00445	Xerox Phaser 4510	BK	1350			1900
Xerox 106R00441	Xerox DocuPrint P1210	BK	800			
Xerox 106R00442	Xerox DocuPrint P1210	BK	1250			
Xerox 113R00296	Xerox DocuPrint P8E	BK	780			
Xerox 106R00586	Xerox WorkCentre M15;WorkCentre Pro 312;412	BK	780			
Xerox 106R01048	Xerox WorkCentre M20	BK	1050	1150		
Xerox 109R00639	Xerox Phaser 3110;Phaser 3210	BK	530			1000
Xerox 109R00748	Xerox Phaser 3116	BK	530			1000
Xerox 109R00725	Xerox Phaser 3120;Xerox Phaser 3121;Xerox Phaser 3130	BK	530			1000
Xerox 109R00746	Xerox Phaser 3150	BK	530	630	1000	1200
Xerox 109R00747	Xerox Phaser 3150	BK	780	980	1000	1450
Xerox 113R00735	Xerox Phaser 3200	BK	530	650		1300

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Xerox 113R00730	Xerox Phaser 3200	BK	880	980		1550
Xerox 106R00646	Xerox Phaser 3310	BK	930	1150		1490
Xerox 106R01033	Xerox Phaser 3420;Xerox Phaser 3425	BK	1190	1290		1900
Xerox 106R01034	Xerox Phaser 3420;Xerox Phaser 3425	BK	1600	1800		2100
Xerox 106R01245	Xerox Phaser 3428	BK	1080	1280		1850
Xerox 106R01246	Xerox Phaser 3428	BK	1150	1250		1850
Xerox 106R00687	Xerox Phaser 3450	BK	1150	1250		1850
Xerox 106R00688	Xerox Phaser 3450	BK	1150	1250		1850
Xerox 106R01148	Xerox Phaser 3500	BK		1150		1850
Xerox 106R01149	Xerox Phaser 3500	BK		1150		1850
Xerox 113R00627	Xerox Phaser 4400	BK	3000			3400
Xerox 113R00628	Xerox Phaser 4400	BK	3000			3400
Xerox 113R00656	Xerox Phaser 4500	BK	2100	2300		3000
Xerox 113R00657	Xerox Phaser 4500	BK	2100	2200		3000
Xerox 113R00495	Xerox Phaser 5400	BK	2100	2250		
Xerox 013R00601	Xerox WorkCentre PE120	BK	580	680		1100
Xerox 013R00606	Xerox WorkCentre PE120	BK	730	880		1400
Xerox 113R00667	Xerox WorkCentre PE16	BK	680			1450
Xerox 013R00621	Xerox WorkCentre PE220	BK	630	780		1300
Xerox 006R90224	Xerox XC 300;Xerox XC 351;Xerox XC 353;Xerox XC 355;Xerox XC 356; Xerox 5201;Xerox 5203;Xerox 5305;Xerox 5306	BK	480			
Xerox 006R00589	Xerox XC 520;Xerox XC 530;Xerox XC 580; Xerox 5205;Xerox 5210;Xerox 5220;Xerox 5222	BK	480			
Xerox 013R00553	Xerox XE 60;62;80;82;84;88	BK	680			
Xerox 006R00915	Xerox XD 100;102;103;104;105;120;125;130;155	BK	880			
Xerox 106R00461	Xerox Phaser 3400	BK	1050	1250		1700
Xerox 106R00462	Xerox Phaser 3400	BK	1050	1250		1700
Xerox 013R00607	Xerox WorkCentre PE114	BK	550			1100
Xerox 106R00676	Xerox Phaser 6100	C	1750	1850		
Xerox 106R00677	Xerox Phaser 6100	M	1750	1850		
Xerox 106R00678	Xerox Phaser 6100	Y	1750	1850		
Xerox 106R00684	Xerox Phaser 6100	BK	2100	2200		
Xerox 106R00680	Xerox Phaser 6100	C	2100	2200		
Xerox 106R00681	Xerox Phaser 6100	M	2100	2200		
Xerox 106R00682	Xerox Phaser 6100	Y	2100	2200		
Xerox 106R00679	Xerox Phaser 6100	BK	1500	1650		
Xerox 113R00689	Xerox Phaser 6115;Xerox Phaser 6120	C	1690	1850		
Xerox 113R00691	Xerox Phaser 6115;Xerox Phaser 6120	M	1690	1850		
Xerox 113R00690	Xerox Phaser 6115;Xerox Phaser 6120	Y	1690	1850		
Xerox 113R00693	Xerox Phaser 6115;Xerox Phaser 6120	C	2050	2200		
Xerox 113R00695	Xerox Phaser 6115;Xerox Phaser 6120	M	2050	2200		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Xerox 113R00694	Xerox Phaser 6115;Xerox Phaser 6120	Y	2050	2200		
Xerox 113R00692	Xerox Phaser 6115;Xerox Phaser 6120	BK	2100	2200		
Xerox 16188200	Xerox Phaser 7700	BK				
Xerox 16187900	Xerox Phaser 7700	C				
Xerox 16188000	Xerox Phaser 7700	M				
Xerox 16188100	Xerox Phaser 7700	Y				
Xerox 106R00652	Xerox Phaser 7750	BK				
Xerox 106R00653	Xerox Phaser 7750	C				
Xerox 106R00654	Xerox Phaser 7750	M				
Xerox 106R00655	Xerox Phaser 7750	Y				
Xerox 16197600	Xerox Phaser 7300	BK				
Xerox 16197300	Xerox Phaser 7300	C				
Xerox 16197400	Xerox Phaser 7300	M				
Xerox 16197500	Xerox Phaser 7300	Y				
Xerox 106R01160	Xerox Phaser 7760	C				
Xerox 106R01161	Xerox Phaser 7760	M				
Xerox 106R01162	Xerox Phaser 7760	Y				
Xerox 106R01163	Xerox Phaser 7760	BK				
Xerox 106R01150	Xerox Phaser 7400	C	3200	3850		
Xerox 106R01151	Xerox Phaser 7400	M	3200	3850		
Xerox 106R01152	Xerox Phaser 7400	Y	3200	3850		
Xerox 106R01080	Xerox Phaser 7400	BK	3200	3850		
Xerox 106R01073	Xerox Phaser 6300;Xerox Phaser 6350	C	2200	2650		
Xerox 106R01074	Xerox Phaser 6300;Xerox Phaser 6350	M	2200	2650		
Xerox 106R01075	Xerox Phaser 6300;Xerox Phaser 6350	Y	2200	2650		
Xerox 106R01076	Xerox Phaser 6300;Xerox Phaser 6350	BK	2200	2650		
Xerox 106R01388	Xerox Phaser 6280	C	1300	1800		
Xerox 106R01389	Xerox Phaser 6280	M	1300	1800		
Xerox 106R01390	Xerox Phaser 6280	Y	1300	1800		
Xerox 106R01391	Xerox Phaser 6280	BK	1200	1700		
Xerox 106R01403	Xerox Phaser 6280	BK	1500	1900		
Xerox 106R01400	Xerox Phaser 6280	C	1800	2200		
Xerox 106R01401	Xerox Phaser 6280	M	1800	2200		
Xerox 106R01402	Xerox Phaser 6280	Y	1800	2200		
Xerox 113R00719	Xerox Phaser 6180	C	1300	1600		
Xerox 113R00720	Xerox Phaser 6180	M	1300	1600		
Xerox 113R00721	Xerox Phaser 6180	Y	1300	1600		
Xerox 113R00722	Xerox Phaser 6180	BK	1200	1700		
Xerox 113R00726	Xerox Phaser 6180	BK	1500	1800		
Xerox 113R00723	Xerox Phaser 6180	C	1800	2100		
Xerox 113R00724	Xerox Phaser 6180	M	1800	2100		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Xerox 113R00725	Xerox Phaser 6180	Y	1800	2100		
Xerox 106R01282	Xerox Phaser 6130	C	1350	1550		
Xerox 106R01283	Xerox Phaser 6130	M	1350	1550		
Xerox 106R01284	Xerox Phaser 6130	Y	1350	1550		
Xerox 106R01285	Xerox Phaser 6130	BK	1350	1550		
Xerox 106R01335	Xerox Phaser 6125	C	950	1100		
Xerox 106R01336	Xerox Phaser 6125	M	950	1100		
Xerox 106R01337	Xerox Phaser 6125	Y	950	1100		
Xerox 106R01338	Xerox Phaser 6125	BK	950	1100		
Xerox 106R01203	Xerox Phaser 6110	BK	1300	1400		
Xerox 106R01204	Xerox Phaser 6110	Y	1750	1850		
Xerox 106R01205	Xerox Phaser 6110	M	1750	1850		
Xerox 106R01206	Xerox Phaser 6110	C	1750	1850		
Xerox 006R01020	Xerox 5915;Xerox 5921	BK				
Xerox 113R00668	Xerox Phaser 5500	BK	2550	2850		
Xerox 106R01305	Xerox WorkCentre 5225;Xerox WorkCentre 5230	BK	3350			
Xerox 006R90168	Xerox 5016;Xerox 5017;Xerox 5316;Xerox 5317	BK				
Xerox 006R90169	Xerox 5016;Xerox 5017;Xerox 5316;Xerox 5317	BK				
Xerox 113R00619	Xerox DocumentCentre 423;Xerox DocumentCentre 428;Xerox WorkCentre Pro 423;Xerox WorkCentre Pro 428	BK				
Xerox 108R00794	Xerox Phaser 3635	BK	1100	1150		1800
Xerox 108R00796	Xerox Phaser 3635	BK	1100	1150		1801
Xerox 113R00247	Xerox DocuPrint 255	BK	1250			1800
Xerox 006R90321	Xerox CopyCentre 232;Xerox CopyCentre 238;Xerox CopyCentre 245;Xerox CopyCentre 255;Xerox CopyCentre 35;Xerox CopyCentre 45;Xerox CopyCentre 55;Xerox DocumentCentre 535;Xerox DocumentCentre 545;Xerox DocumentCentre 555;Xerox WorkCentre 232;Xerox WorkCentre 238;Xerox WorkCentre 245;Xerox WorkCentre 255;Xerox WorkCentre 5030;Xerox WorkCentre 5050;Xerox WorkCentre 5632;Xerox WorkCentre 5638;Xerox WorkCentre 5645;Xerox WorkCentre 5655;Xerox WorkCentre M35;Xerox WorkCentre M45;Xerox WorkCentre M55;Xerox WorkCentre 232;Xerox WorkCentre Pro 238;WorkCentre Pro 245;Xerox WorkCentre Pro 255;Xerox WorkCentre Pro 35;Xerox WorkCentre Pro 45;Xerox WorkCentre Pro 55	BK	3250			
Xerox 006R01046	Xerox CopyCentre 232;Xerox CopyCentre 238;Xerox CopyCentre 245;Xerox CopyCentre 255;Xerox CopyCentre 35;Xerox CopyCentre 45;Xerox CopyCentre 55;Xerox DocumentCentre 535;Xerox DocumentCentre 545;Xerox DocumentCentre 555;Xerox WorkCentre 232;Xerox WorkCentre 238;Xerox WorkCentre 245;Xerox WorkCentre 255;Xerox WorkCentre 5030;Xerox WorkCentre 5050;Xerox WorkCentre 5632;Xerox WorkCentre 5638;Xerox WorkCentre 5645;Xerox WorkCentre 5655;Xerox WorkCentre M35;Xerox WorkCentre M45;Xerox WorkCentre M55;Xerox WorkCentre 232;Xerox WorkCentre Pro 238;WorkCentre Pro 245;Xerox WorkCentre Pro 255;Xerox WorkCentre Pro 35;Xerox WorkCentre Pro 45;Xerox WorkCentre Pro 55	BK	3550			
Xerox 013R90130	Xerox DocumentCentre 220;Xerox DocumentCentre 230;Xerox DocumentCentre 240;Xerox DocumentCentre 420	BK	1900			
Xerox 006R01182	Xerox CopyCentre C123;Xerox C128;Xerox WorkCentre M123;Xerox M128;Xerox WorkCentre Pro 123;Xerox 128;Xerox 133	BK	3200	3500		
Xerox 113R00462	Xerox WorkCentre 390	BK	780			
Xerox 113R00095	Xerox DocuPrint 4517;Xerox DocuPrint N17	BK	1200			
Xerox 113R00184	Xerox DocuPrint 322;Xerox DocuPrint N24;Xerox DocuPrint N32;Xerox DocuPrint N3225;Xerox DocuPrint N40;Xerox DocuPrint N4025	BK				
Xerox 113R00110	Xerox DocuPrint 4520	BK				
Xerox 113R00195	Xerox DocuPrint N4525	BK				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Xerox 113R00182	Xerox DocumentCentre 212;Xerox DocumentCentre 214	BK				
Xerox 006R90161	Xerox 1012;Xerox 5012;Xerox 5014	BK	680			
Xerox 006R01044	Xerox WorkCentre 415;Xerox WorkCentre 420;Xerox WorkCentre Pro 315;Xerox WorkCentre Pro 320;Xerox WorkCentre Pro 415;Xerox WorkCentre Pro 420	BK	780	1050		
Xerox 113R00632	Xerox WorkCentre Pro 580	BK	780			
Xerox 006R01146	Xerox CopyCentre 265;Xerox CopyCentre 275;Xerox CopyCentre C165;Xerox CopyCentre C175;Xerox WorkCentre 265;Xerox WorkCentre 275;Xerox WorkCentre 5665;Xerox WorkCentre 56	BK				
Xerox 006R01237	Xerox WorkCentre Pro 4110;Xerox WorkCentre 4590;Xerox WorkCentre 4595	BK				
Xerox 006R01238	Xerox 6204	BK				
Xerox 006R01141	Xerox 721	BK				
Xerox 006R00713	Xerox DocuPrint 4010;Xerox DocuPrint 4011; Xerox 4010;Xerox 4011;Xerox 7041;Xerox 7042	BK				
Xerox 006R00833	Xerox Document WorkCentre Pro 610	BK				
Xerox 006R90094	Xerox 1050;Xerox 5050;Xerox 5051;Xerox 5052;Xerox 5053;Xerox 5435	BK				
Xerox 006R00881	Xerox XC 1033;Xerox XC 1045;Xerox XC 1245;Xerox XC 820;Xerox XC 822;Xerox XC 855	BK				
Xerox 006R90099	Xerox 1025;Xerox 1038;Xerox 5025;Xerox 5030;Xerox 5320;Xerox 5331;Xerox 5332;Xerox 5416;Xerox 5421;Xerox 5518;Xerox 561	BK	800			
Xerox 006R90127	Xerox 5018;Xerox 5028;Xerox 5034;Xerox 5328;Xerox 5334;Xerox 5824;Xerox 5826;Xerox 5828;Xerox 5830	BK				
Xerox 006R90129	Xerox 2510;Xerox 2511	BK	800			
Xerox 006R90170	Xerox 5009;Xerox 5309;Xerox 5310	BK	650			
Xerox 006R90182	Xerox 5320;Xerox 5322	BK				
Xerox 006R90203	Xerox 5340;Xerox 5343;Xerox 5350;Xerox 5352;Xerox 5437;Xerox 5665;Xerox 5837;Xerox 5845;Xerox 5855	BK				
Xerox 006R90223	Xerox 5614	BK	550			
Xerox 006R90233	Xerox 4010;Xerox 4011;Xerox 7041;Xerox 7042	BK	500			
Xerox 113R00443	Xerox DocuPrint N2025;Xerox DocuPrint 2825	BK				
Xerox 113R00446	Xerox DocuPrint N2125	BK	1800			2300
Xerox 113R00265	Xerox DocuPrint 4508	BK	750			
Xerox 106R00088	Xerox DocuPrint 4512	BK				
Xerox 106R00365	Xerox Document WorkCentre Pro 635;Xerox Document WorkCentre Pro 645;Xerox Document WorkCentre Pro 657	BK				
Xerox 106R00370	Xerox Document WorkCentre Pro 535;Xerox Document WorkCentre Pro 545	BK				
Xerox 106R00398	Xerox DocuPrint P1202	BK				
Xerox 106R00402	Xerox WorkCentre Pro 555;Xerox Document WorkCentre Pro 575	BK				
Xerox 106R00405	Xerox WorkCentre Pro 665;Xerox WorkCentre Pro 685;Xerox WorkCentre Pro 765;Xerox WorkCentre Pro 785	BK				
Xerox 106R00445	Xerox WorkCentre Pro 416	BK				
Xerox 106R01534	Xerox Phaser 4600N;Xerox Phaser 4620DN;Xerox Phaser 4622A;Xerox Phaser 4622DN	BK	2350			
Xerox 106R01536	Xerox Phaser 4600N;Xerox Phaser 4620DN;Xerox Phaser 4622A;Xerox Phaser 4622DN	BK	4250			
Xerox 006R90269	Xerox 3030;Xerox 3040;Xerox 3050;Xerox 3060	BK	550	700		
Xerox 106R01372	Xerox Phaser 3600	BK	1750	1900		2400
Xerox 013R00605	Xerox FaxCentre F110	BK	750			
Xerox 106R01459	Xerox Phaser 6128MFP/N	BK	1500	1700		
Xerox 106R01456	Xerox Phaser 6128MFP/N	C	1500	1700		

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Xerox 106R01457	Xerox Phaser 6128MFP/N	M	1500	1700		
Xerox 106R01458	Xerox Phaser 6128MFP/N	Y	1500	1700		
Xerox 106R01484	Xerox Phaser 6140	BK	1550	1700		
Xerox 106R01481	Xerox Phaser 6140	C	1550	1700		
Xerox 106R01482	Xerox Phaser 6140	M	1550	1700		
Xerox 106R01483	Xerox Phaser 6140	Y	1550	1700		
Xerox 16200800	Xerox Phaser 6200	BK	2800			
Xerox 16200500	Xerox Phaser 6200	C	2800			
Xerox 16200600	Xerox Phaser 6200	M	2800			
Xerox 16200700	Xerox Phaser 6200	Y	2800			
Xerox 16200400	Xerox Phaser 6200	BK	2400			
Xerox 16200100	Xerox Phaser 6200	C	2400			
Xerox 16200200	Xerox Phaser 6200	M	2400			
Xerox 16200300	Xerox Phaser 6200	Y	2400			
Xerox 106R00671	Xerox Phaser 6250	BK	2400			
Xerox 106R00668	Xerox Phaser 6250	C	1700	2000		
Xerox 106R00669	Xerox Phaser 6250	M	1700	2000		
Xerox 106R00670	Xerox Phaser 6250	Y	1700	2000		
Xerox 106R00675	Xerox Phaser 6250	BK	2100	2400		
Xerox 106R00672	Xerox Phaser 6250	C	2100	2400		
Xerox 106R00673	Xerox Phaser 6250	M	2100	2400		
Xerox 106R00674	Xerox Phaser 6250	Y	2100	2400		
Xerox 106R01085	Xerox Phaser 6300	BK	2100	2800		
Xerox 106R01082	Xerox Phaser 6300	C	2100	2800		
Xerox 106R01083	Xerox Phaser 6300	M	2100	2800		
Xerox 106R01084	Xerox Phaser 6300	Y	2100	2800		
Xerox 603P06174	Xerox DocuPrint P8e; DocuPrint P8ex; Xerox WorkCentre 385	BK	800			
Xerox 006R00899	HP LaserJet 4L; HP LaserJet 4ML; HP LaserJet 4MP; HP LaserJet 4P	BK	530			
Xerox 113R00762	Xerox Phaser 4600; Xerox Phaser 4620	BK				
Xerox 106R01409	Xerox WorkCentre 4250; Xerox WorkCentre 4260	BK				
Xerox 113R00755	Xerox WorkCentre 4250; Xerox WorkCentre 4260	BK				
Xerox 006R01160	Xerox WorkCentre 5325; Xerox WorkCentre 5330; Xerox WorkCentre 5335	BK	2550	3150		
Xerox 106R01294	Xerox Phaser 5550	BK	2850	3100		
Xerox 106R01443	Xerox Phaser 7500	C	3900	4500		
Xerox 106R01444	Xerox Phaser 7500	M	3900	4500		
Xerox 106R01445	Xerox Phaser 7500	Y	3900	4500		
Xerox 106R01446	Xerox Phaser 7500	BK	3900	4500		
Xerox 106R01214	Xerox Phaser 6360	C				
Xerox 106R01215	Xerox Phaser 6360	M				
Xerox 106R01216	Xerox Phaser 6360	Y				

Картридж	Принтеры	Цвет	Заправка	Заправка с заменой чипа	Прошивка	Восстановление
Xerox 106R01217	Xerox Phaser 6360	BK				
Xerox 106R01218	Xerox Phaser 6360	C				
Xerox 106R01219	Xerox Phaser 6360	M				
Xerox 106R01220	Xerox Phaser 6360	Y				
Xerox 106R01221	Xerox Phaser 6360	BK				
Xerox 106R01570	Xerox Phaser 7800	C	3500	4200		
Xerox 106R01571	Xerox Phaser 7800	M	3500	4200		
Xerox 106R01572	Xerox Phaser 7800	Y	3500	4200		
Xerox 106R01573	Xerox Phaser 7800	BK	3500	4200		
Xerox 106R01523	Xerox Phaser 6700	C	2850	3300		
Xerox 106R01524	Xerox Phaser 6700	M	2850	3300		
Xerox 106R01525	Xerox Phaser 6700	Y	2850	3300		
Xerox 106R01526	Xerox Phaser 6700	BK	3300	3750		
Xerox 108R00793	Xerox Phaser 3635 MFP/S; Xerox Phaser 3635 MFP/X	BK		1150		1850
Xerox 108R00795	Xerox Phaser 3635 MFP/S; Xerox Phaser 3635 MFP/X	BK		1350		2050
Xerox 106R01624	Xerox Phaser 7800	C				
Xerox 106R01625	Xerox Phaser 7800	Y				
Xerox 106R01626	Xerox Phaser 7800	M				
Xerox 113R00671	Xerox CopyCentre C20;Xerox WorkCentre 4118P;Xerox WorkCentre 4118X;Xerox WorkCentre M20;Xerox WorkCentre M20i	BK				2000
Xerox 106R02236	Xerox Phaser 6600DN;Xerox Phaser 6600N;Xerox WorkCentre 6605DN;Xerox WorkCentre 6605N	BK	2500	2600		
Xerox 106R02233	Xerox Phaser 6600DN;Xerox Phaser 6600N;Xerox WorkCentre 6605DN;Xerox WorkCentre 6605N	C	2500	2600		
Xerox 106R02234	Xerox Phaser 6600DN;Xerox Phaser 6600N;Xerox WorkCentre 6605DN;Xerox WorkCentre 6605N	M	2500	2600		
Xerox 106R02235	Xerox Phaser 6600DN;Xerox Phaser 6600N;Xerox WorkCentre 6605DN;Xerox WorkCentre 6605N	Y	2500	2600		
Xerox 106R02252	Xerox Phaser 6600DN;Xerox Phaser 6600N;Xerox WorkCentre 6605DN;Xerox WorkCentre 6605N	BK	1350	1450		
Xerox 106R02249	Xerox Phaser 6600DN;Xerox Phaser 6600N;Xerox WorkCentre 6605DN;Xerox WorkCentre 6605N	C	1350	1450		
Xerox 106R02250	Xerox Phaser 6600DN;Xerox Phaser 6600N;Xerox WorkCentre 6605DN;Xerox WorkCentre 6605N	M	1350	1450		
Xerox 106R02251	Xerox Phaser 6600DN;Xerox Phaser 6600N;Xerox WorkCentre 6605DN;Xerox WorkCentre 6605N	Y	1350	1450		
Xerox 006R01179	Xerox CopyCentre C118;Xerox WorkCentre M118	BK		3150		
Xerox 013R00589 Drum	Xerox CopyCentre C118;Xerox CopyCentre C123;Xerox CopyCentre C128;Xerox WorkCentre M118;Xerox WorkCentre M123;Xerox WorkCentre M128;Xerox WorkCentre Pro 123;Xerox WorkCentre Pro 128;Xerox WorkCentre Pro 133	Drum				8700
Xerox 006R01278	Xerox CopyCentre C20;Xerox WorkCentre 4118P;Xerox 4118X;Xerox M20;Xerox M20i	BK		1390		